



Console USB

Power USB

Move from left to middle jumper

Updated instructions

- Move jumper from 5V_ST_LINK to 5V_USB_FS
- Using a high power USB port/charger plug supplied USB cable (or USB cable capable of charging) into middle uUSB plug on baseboard, labeled USB OTG.
- Plug another USB cable into corner uUSB plug labeled USB STLINK.
- Open a terminal session as per typical instructions
- Drop .bin firmware file onto drive representing the DIS_L4IOT device
- Wait for file to completely update. Drive will drop and re-appear.
- Press the black reset button and capture console output