



UPSON PRINTER MODEL 1, 2 & 3 QUICK START GUIDE

- Take the printer out of the box and remove all the packaging.
- Find a place for the printer near an outlet.
- Connect the power cable to the printer and plug it into the outlet.
- Press the power button to turn on the printer and wait for it to start up.
- Open the printer cover and put in the ink cartridges that came with the printer. Make sure they click into place.
- Close the printer cover.
- Pull out the paper tray or cassette and adjust the paper guides to fit the paper size you want to use.
- Put the paper into the tray or cassette and push it back into the printer.
- Install the printer software on your computer by following the instruction on the installation CD or downloading it from the Epson website.
- Connect the printer to your computer using a USB cable (if provided) or connect it to your wireless network.
- Test the printer by opening a document or picture on your computer, selecting the Epson printer, adjusting the print settings, and clicking "Print."
- Check the printer's output tray for the printed document or image.
- That's it! Your Epson printer is now set up and ready to use. If you have any more questions, you can check the user manual that came with the printer or consult a printer repairman for help.