



UPSON PRINTER MODEL 1, 2 & 3 USER MANUAL

1. Getting Started

- Take the printer out of the box.
- Remove all packaging materials.
- Find a place for the printer near an outlet.
- Connect the power cable to the printer and plug it into the outlet.
- Press the power button to turn on the printer.

2. Installing Ink Cartridges

- Open the printer cover.
- Take the ink cartridges out of their packaging.
- Put the cartridges into the slots inside the printer.
- Close the printer cover.

3. Loading Paper

- Pull out the paper tray.
- Adjust the paper guides to fit the size of your paper.
- Put the paper into the tray.
- Push the tray back into the printer.

4. Connecting to a Computer

- Install the printer software on your computer.

- Connect the printer to your computer using a USB cable or wireless network.

5. Printing

- Open a document or picture on your computer.
- Select "Print" from the menu.
- Choose the Epson printer as your printing option.
- Adjust any settings like paper size or print quality.
- Click "Print" to start printing.

6. Troubleshooting

- If the printer doesn't print, check the connections and make sure the printer is turned on.
- If the ink is running low, replace the ink cartridges.
- If there are paper jams, open the printer and remove the jammed paper.
- Remember, if you have any difficulties or need more help, ask a printer repairman for assistance or consult the full user manual that came with the printer.

Note: This simplified user manual is designed for basic understanding and may not cover all features and troubleshooting scenarios. For detailed instructions and information, refer to the official user manual provided with your Epson printer.