




EXP-NO	EXP	F2	F1	NUC1	NUC2	QMQZNM	VSZ	OUT
EXP-01	1D-1			13C				
EXP-02								
EXP-03								
EXP-04							300	320
EXP-05	1D-2			13C				
EXP-06								
EXP-07								
EXP-08	1D-3			13C				
EXP-09								
EXP-10	1D-4			13C				
EXP-11								
EXP-12								
EXP-13								
EXP-14	1D-5			13C				
EXP-15								
EXP-16								
EXP-17								
EXP-18								
EXP-19								
EXP-20								
EXP-21								
EXP-22								
EXP-23								
EXP-24								
EXP-25								
EXP-26								
EXP-27								
EXP-28								
EXP-29								
EXP-30								
EXP-31								
EXP-32								
EXP-33								
EXP-34								
EXP-35								
EXP-36								
EXP-37								
EXP-38								
EXP-39								
EXP-40								
EXP-41								
EXP-42								
EXP-43								
EXP-44								
EXP-45								
EXP-46								
EXP-47								
EXP-48								
EXP-49								
EXP-50								
EXP-51								
EXP-52								
EXP-53								
EXP-54								
EXP-55								
EXP-56								
EXP-57								
EXP-58								
EXP-59								
EXP-60								
EXP-61								
EXP-62								
EXP-63								
EXP-64								
EXP-65								
EXP-66								
EXP-67								
EXP-68								
EXP-69								
EXP-70								
EXP-71								
EXP-72								
EXP-73								
EXP-74								
EXP-75								
EXP-76								
EXP-77								
EXP-78								
EXP-79								
EXP-80								
EXP-81								
EXP-82								
EXP-83								
EXP-84								

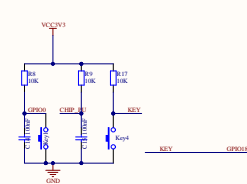




ESP32-S3-RLCD-4.2

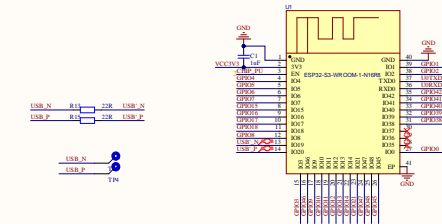

KEYS

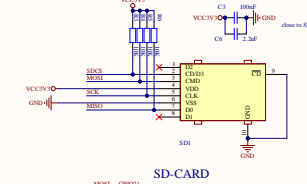



SD-CARD

  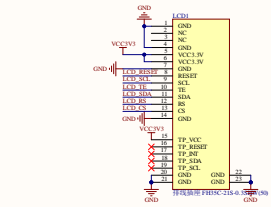



RTC



温湿度传感器

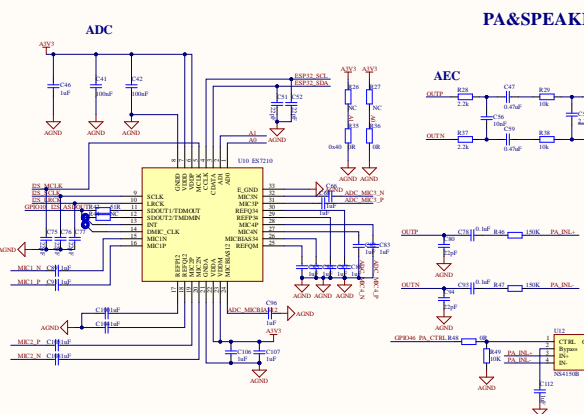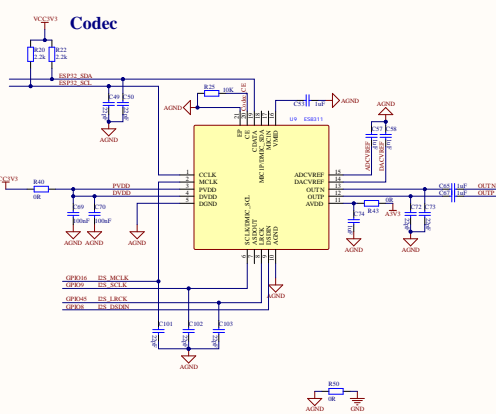

PA&SPEAKER&MIC

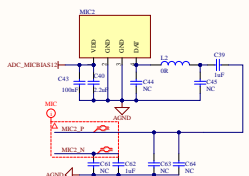 

MIC

