



Notes:

- The PCB can be used with external 5V power supply or via the smart meter 5V power supply. This will require a 6-pin cable! To use the smart meter P1 interface 5V, short circuit CN2. In that case DON'T connect anything to the DC 5V in terminal!!!
- For constant meter readings (Data_request always enabled) short-circuit P3. In that case R1, R2, PH1 are not needed

TITLE: P1 reader (PCB v1.0)			REV: 1.02
Date: 2020-04-20			Sheet: 1/1
EasyEDA V5.7.26		Drawn By: Di Gierre	