



Dwarpal

FOR A SAFE AND SECURE HOME



Dwarpal

Door Alarm System

- ★ A sensor that can be fitted on any type of door
- ★ Totally tamper proof device with safety lock
- ★ No electric wiring is required
- ★ Easy to operate with very low maintenance
- ★ Rugged metal body with powder coating
- ★ One Year Guarantee

- ★ Keeping homes secured is a big concern when we want to go out!!
- ★ We offer you a simple device which can be fitted on door.
- ★ Just arm the system by turning on the key while leaving.
- ★ If any intruder tries to open the door, the siren will sound and alert the neighbors and scare the thieves away

BE SAFE, BE ASSURED!!

Dwarpal gives audio signal if the door is not closed.

Works on 4 AA batteries.

Siren cannot be switched off without key

Sufficient delay to switch off the system when an authorized person opens the door.

For Enquiries kindly contact:

Infotech Resources Ltd.

1065/A, Model Colony, Pune. 41 1016

eipune@gmail.com

020 - 25679176, 9923220777





Dwarpal

FOR A SAFE AND SECURE HOME



Dwarpal

Door Alarm System

OPERATING INSTRUCTIONS

Dwarpal, a cost effective door alarm system, can be fitted on any type of door.

Installation:

The metal part of the device is to be fitted on the door and the small part, on the doorframe. In case of any constraint these can be reversed. Both will be on inside part of door and doorframe. The sensor part on metal body and the one on frame should face each other. A gap of about one cm can be left between two.

For fixing these, screws (6) are provided.

Operation:

- The key needs to be turned on before closing the door to arm the device.
- If the door is left open, single beep signal will be given till door is closed.
- Once the door is closed, the device gives two beeps to indicate confirmation.
- When the door is opened, the device gives a time delay of 5 seconds within which the one can disarm the device using the key.
- If this is not done, the siren will start and can be switched off only by turning off the key on the device. This siren will not turn off by simply closing the door.

Battery Replacement:

This device works on 4 AA batteries. Reduction in siren volume indicates that the batteries are low and need replacement. To replace batteries open the cover on the side by removing the two screws, take out the battery holder, replace all four batteries and fix the cover.

