


MULTIFUNCTION I/O DEVICE MANUAL

PCIe-6321 Pinout

Version: Multifunction I/O Device

Last Modified: March 21, 2017

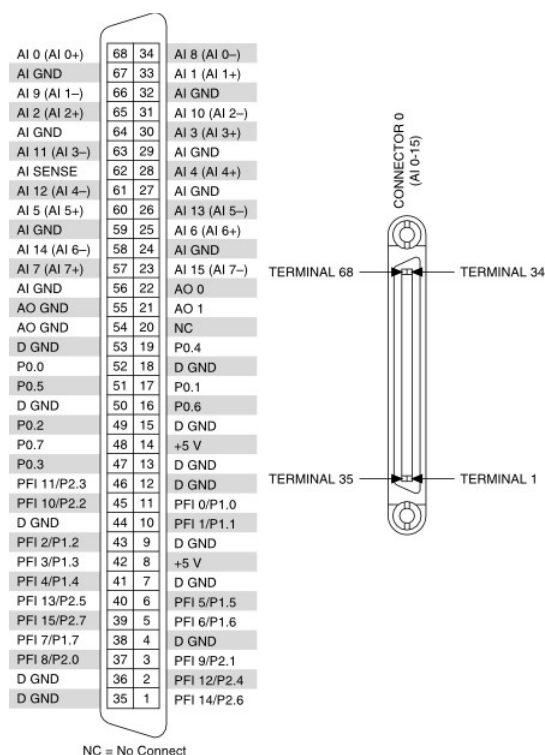

NC = No Connect

Table 1. Default Counter/Timer Terminals

Counter/Timer Signal	Default PFI Terminal
CTR 0 SRC	PFI 8
CTR 0 GATE	PFI 9
CTR 0 AUX	PFI 10
CTR 0 OUT	PFI 12
CTR 0 A	PFI 8
CTR 0 Z	PFI 9
CTR 0 B	PFI 10
CTR 1 SRC	PFI 3
CTR 1 GATE	PFI 4
CTR 1 AUX	PFI 11
CTR 1 OUT	PFI 13
CTR 1 A	PFI 3
CTR 1 Z	PFI 4
CTR 1 B	PFI 11
CTR 2 SRC	PFI 0
CTR 2 GATE	PFI 1
CTR 2 AUX	PFI 2

Counter/Timer Signal	Default PFI Terminal
CTR 2 OUT	PFI 14
CTR 2 A	PFI 0
CTR 2 Z	PFI 1
CTR 2 B	PFI 2
CTR 3 SRC	PFI 5
CTR 3 GATE	PFI 6
CTR 3 AUX	PFI 7
CTR 3 OUT	PFI 15
CTR 3 A	PFI 5
CTR 3 Z	PFI 6
CTR 3 B	PFI 7
FREQ OUT	PFI 14

Table 2. Signal Descriptions

Signal	Reference	Description
AI GND	—	Analog Input Ground—These terminals are the reference point for single-ended AI measurements in RSE mode and the bias current return point for DIFF measurements. All ground references—AI GND, AO GND, and D GND—are connected on the device. Though AI GND, AO GND, and D GND are connected on the device, they are connected by small traces to reduce crosstalk between subsystems. Each ground has a slight difference in potential.
AI <0..15>	Varies	Analog Input Channels—For single-ended measurements, each signal is an analog input voltage channel. In RSE mode, AI GND is the reference for these signals. In NRSE mode, the reference for each AI signal is an AI SENSE. For differential measurements, AI 0 and AI 8 are the positive and negative inputs of differential analog input channel 0. Similarly, the following signal pairs also form differential input channels: AI <1,9>, AI <2,10>, and so on.
AI SENSE	—	Analog Input Sense—In NRSE mode, the reference for each AI <0..15> signal is AI SENSE.
AO <0,1>	AO GND	Analog Output Channels—These terminals supply voltage output.
AO GND	—	Analog Output Ground—AO GND is the reference for AO. All ground references—AI GND, AO GND, and D GND—are connected on the device. Though AI GND, AO GND, and D GND are connected on the device, they are connected by small traces to reduce crosstalk between subsystems. Each ground has a slight difference in potential.
D GND	—	Digital Ground—D GND supplies the reference for port 0, port 1, port 2 digital channels, PFI, and +5 V. All ground references—AI GND, AO GND, and D GND—are connected on the device. Though AI GND, AO GND, and D GND are connected on the device, they are connected by small traces to reduce crosstalk between subsystems. Each ground has a slight difference in potential.
P0.<0..7>	D GND	Port 0 Digital I/O Channels—You can configure each signal individually as an input or output.
+5 V	D GND	+5 V Power Source—These terminals provide a fused +5 V power source.
PFI <0..7>/P1.<0..7>, PFI <8..15>/P2.<0..7>	D GND	Programmable Function Interface or Digital I/O Channels—Each of these terminals can be individually configured as a PFI terminal or a digital I/O terminal. As an input, each PFI terminal can be used to supply an external source for AI, AO, DI, and DO timing signals or counter/timer inputs. As a PFI output, you can route many different internal AI, AO, DI, or DO timing signals to each PFI terminal. You can also route the counter/timer outputs to each PFI terminal. As a port 1 or port 2 digital I/O signal, you can individually configure each signal as an input or output.