


WINDSHIELD WIPER SYSTEM

id091900000700

Outline

- Equipped with continuous (low/high), auto-stop, one-touch wiper, intermittent wiper (without auto wiper system), auto wiper (with auto wiper system), and synchronized washer and wiper operation.
- The front body control module (FBCM) performs windshield wiper and washer system fail-safe. (See FRONT BODY CONTROL MODULE (FBCM).)


Structural View L.H.D.

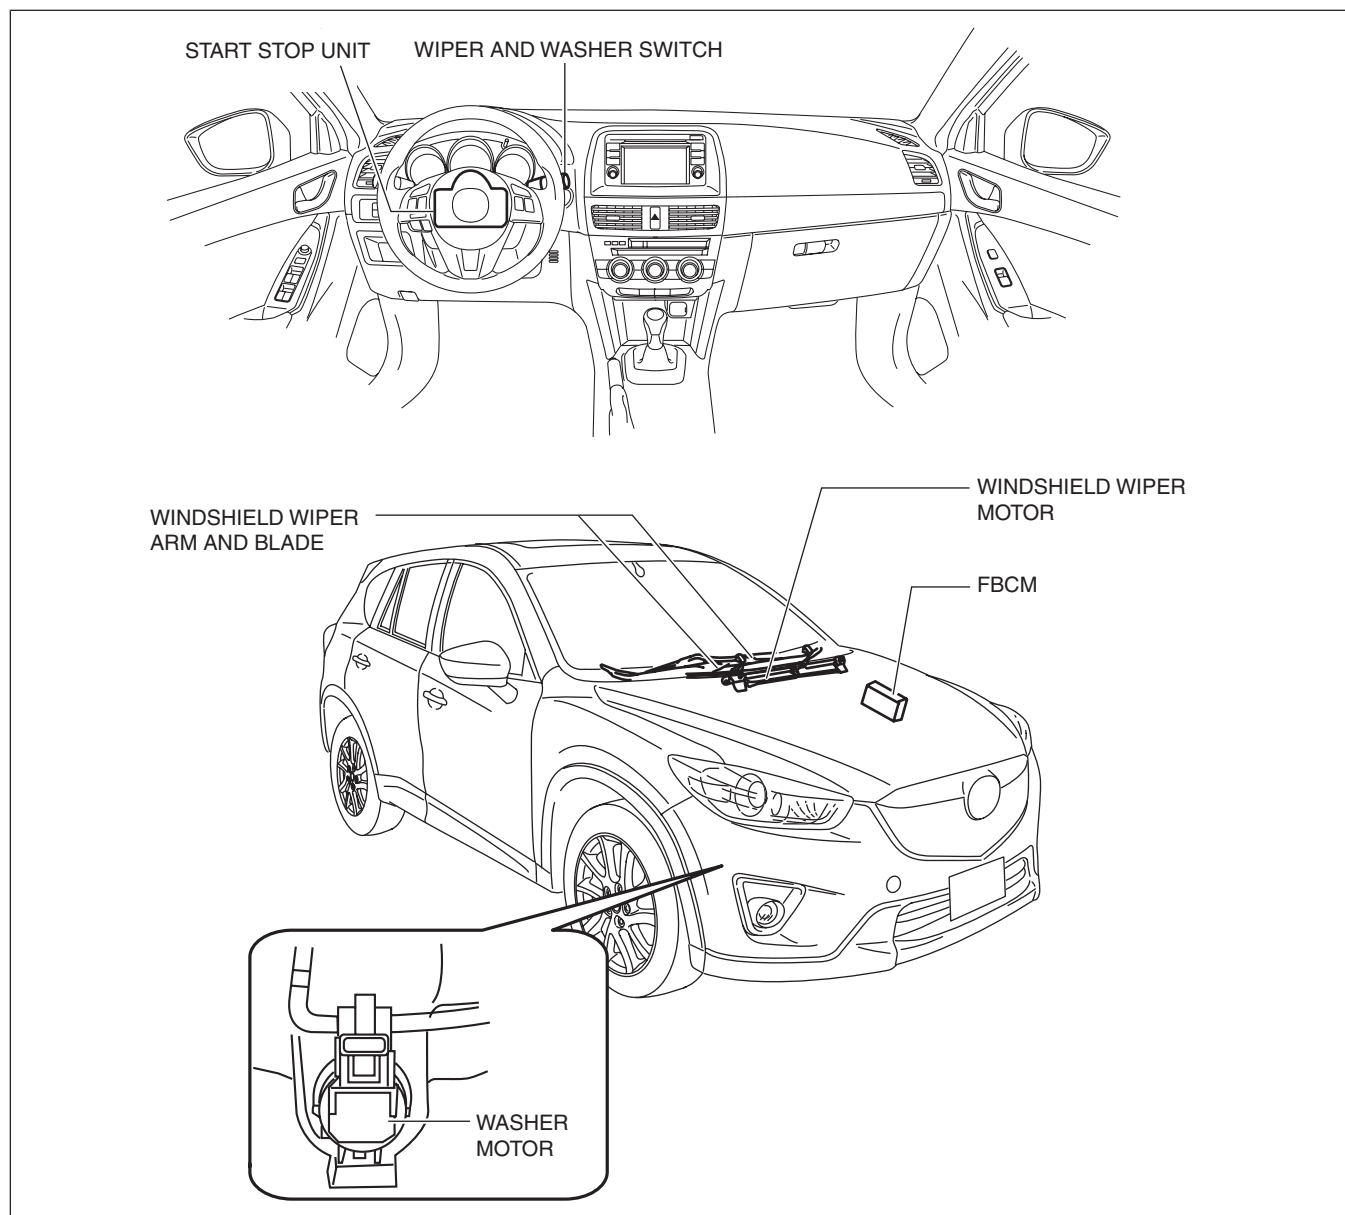


ac5wzn00001254

R.H.D.


WITH WIPER AND WASHER SWITCH
ON RIGHT SIDE

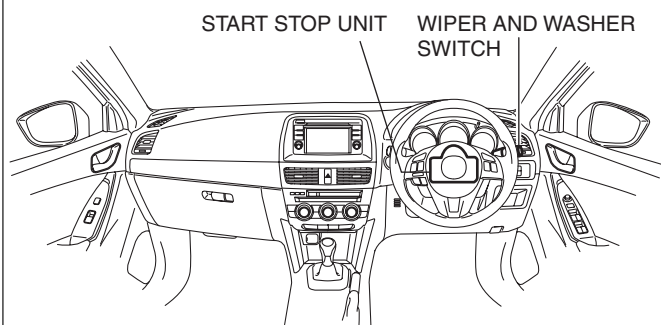

WITH WIPER AND WASHER SWITCH
ON LEFT SIDE

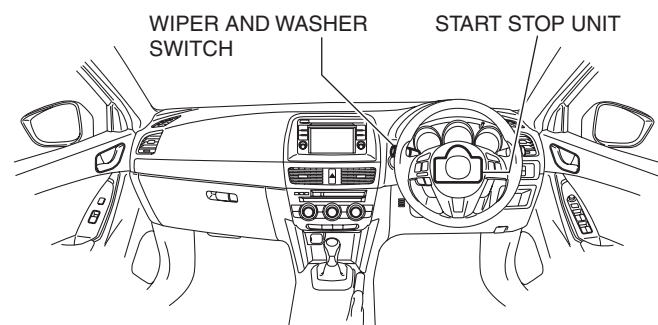


WINDSHIELD WIPER
ARM AND BLADE

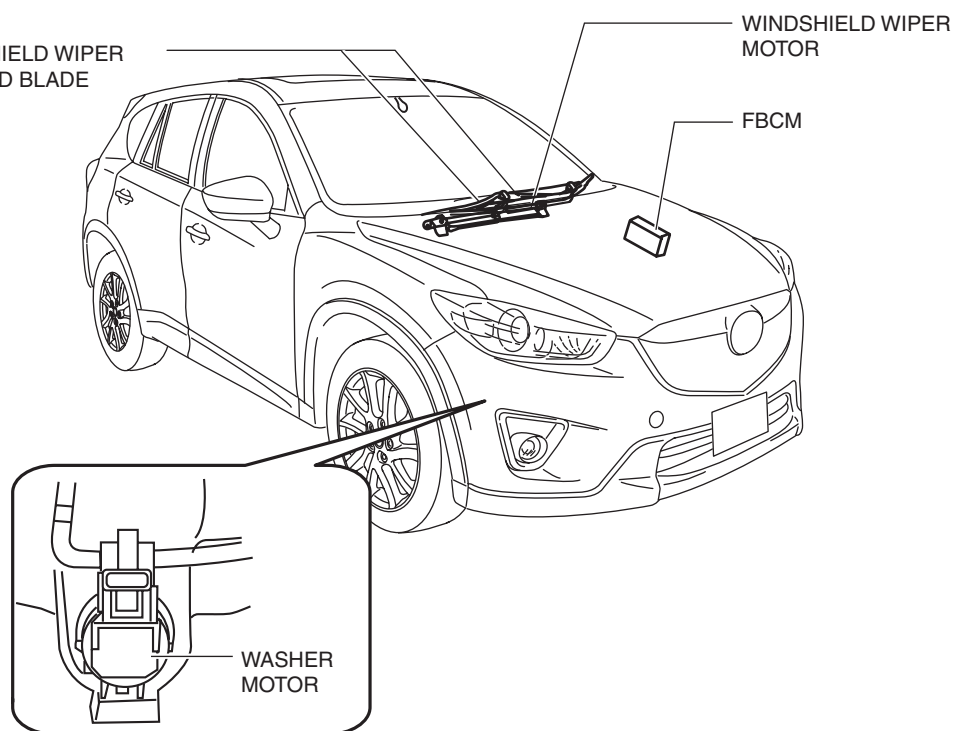


ac5wzn00001302

System Wiring Diagram

With wiper and washer switch on right side

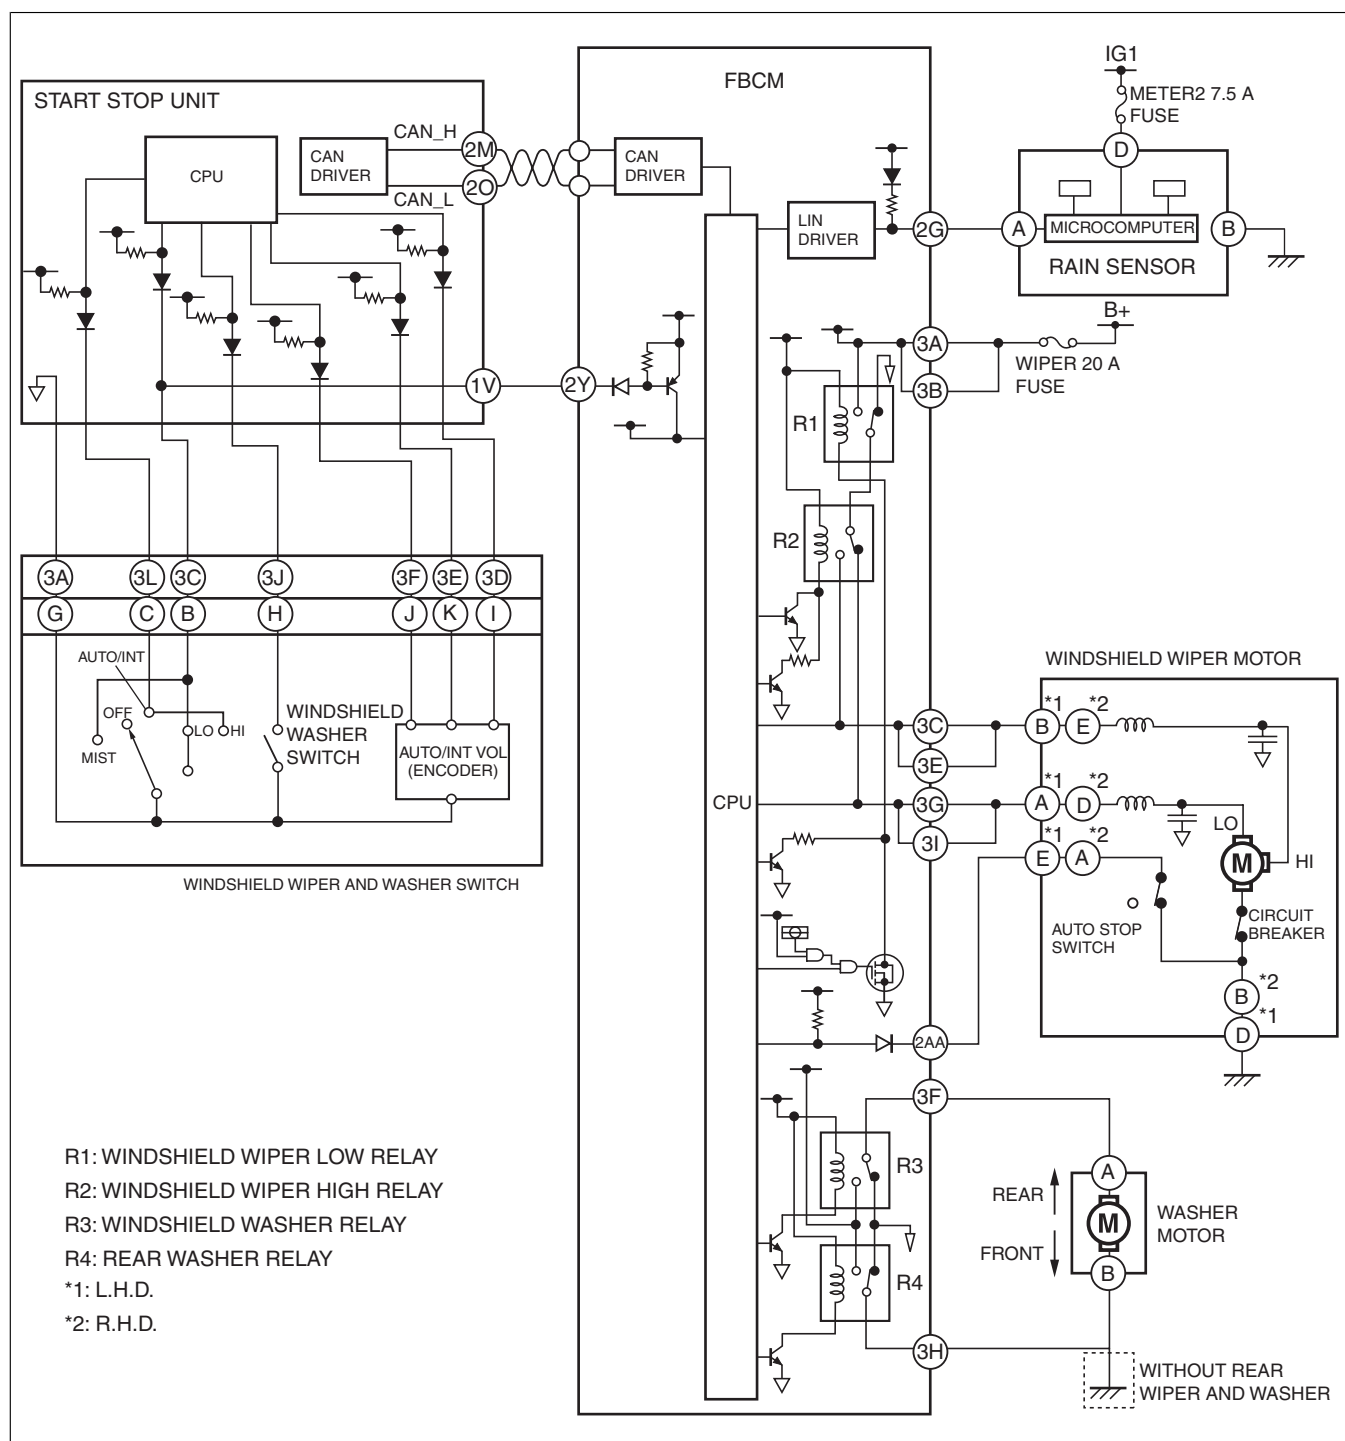

With wiper and washer switch on left side

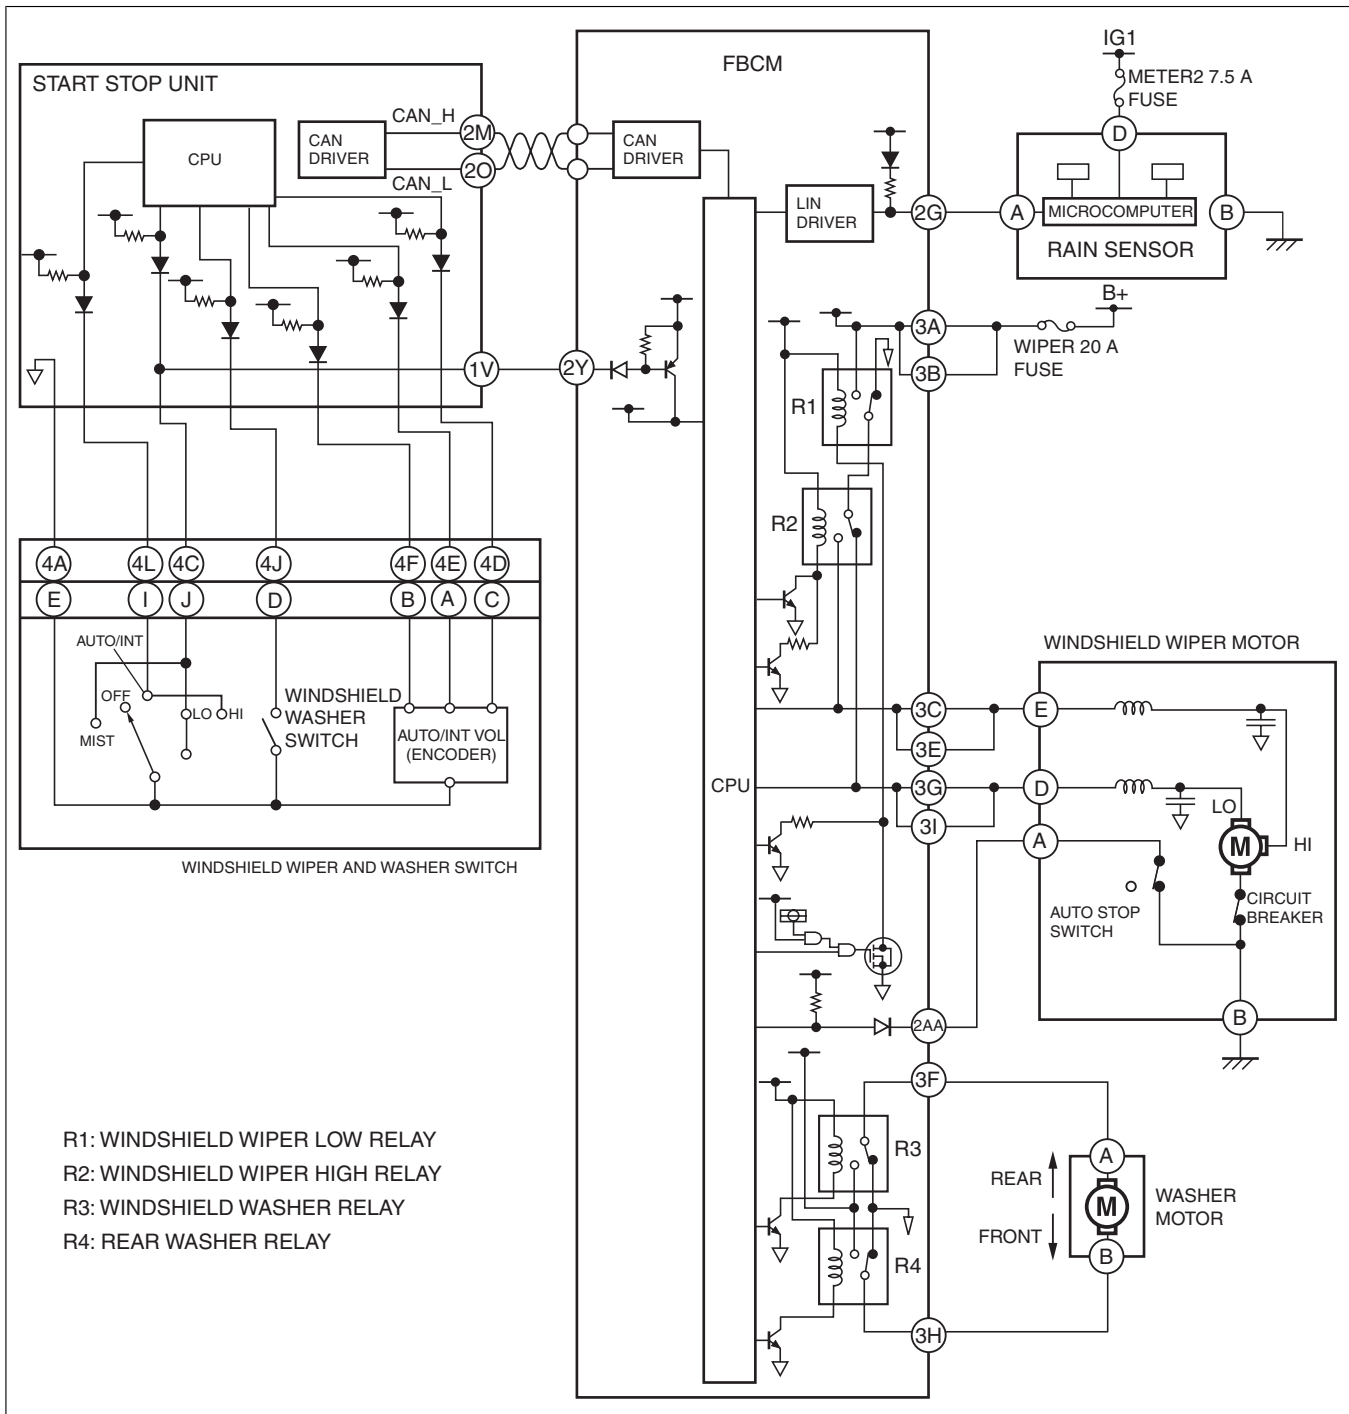

ac5wzn00001290


Operation

Continuous low operation


- When the wiper and washer switch is moved to the LO position with the ignition switched ON (engine off or on) (1), the start stop unit detects a windshield wiper switch signal (LO). (2)
- When the start stop unit detects the windshield wiper switch signal (LO), it send a windshield wiper switch position signal (LO) to the front body control module (FBCM) as a CAN signal. (3)
- When the front body control module (FBCM) receives the windshield wiper switch position signal (LO), it supplies the base current from the internal CPU to transistor A (4), and collector current flows from the internal power supply (5), turning the windshield wiper low relay on. (6)
- When the windshield wiper low relay is turned on, current flows from the battery to the windshield wiper motor and the windshield wipers operate continuously at low speed. (7)

With wiper and washer switch on right side

CONTINUOUS LOW OPERATION BLOCK DIAGRAM

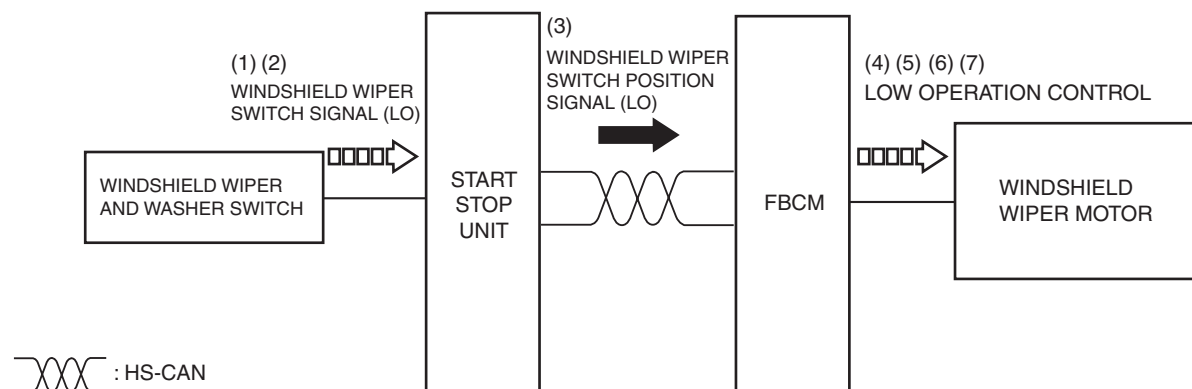


CONTINUOUS LOW OPERATION WIRING DIAGRAM

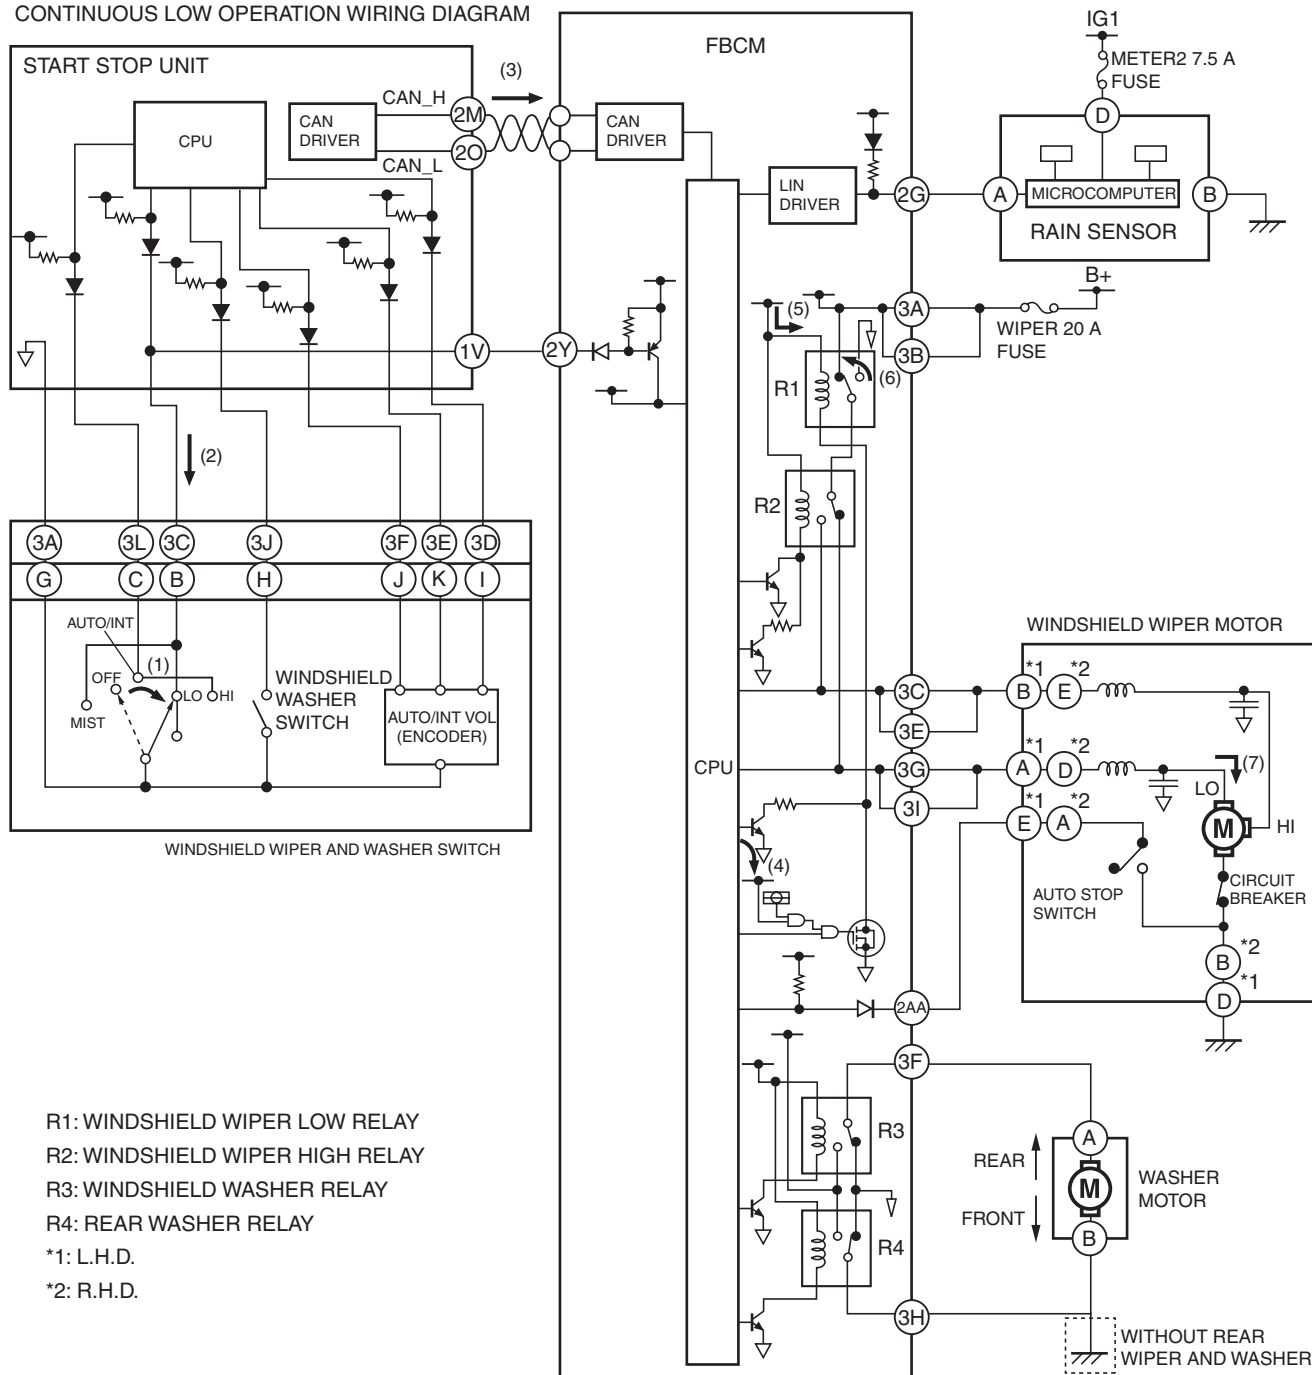


With wiper and washer switch on left side

CONTINUOUS LOW OPERATION BLOCK DIAGRAM

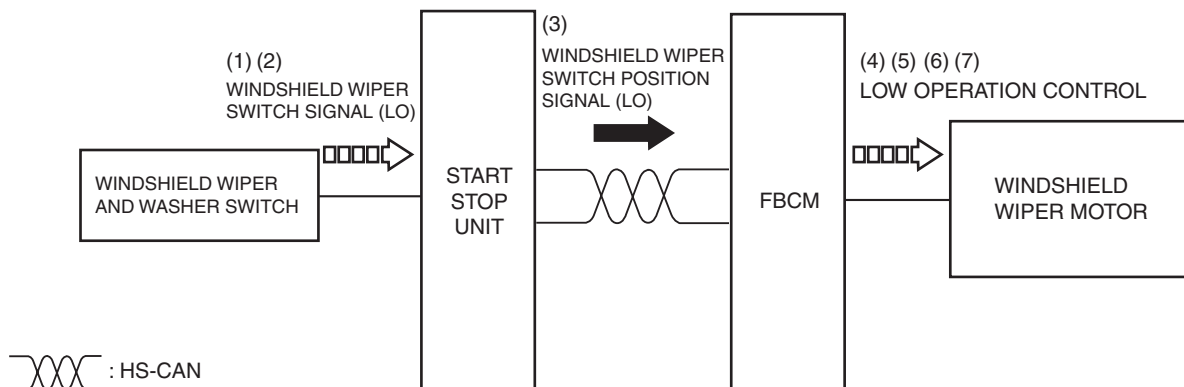

CONTINUOUS LOW OPERATION WIRING DIAGRAM

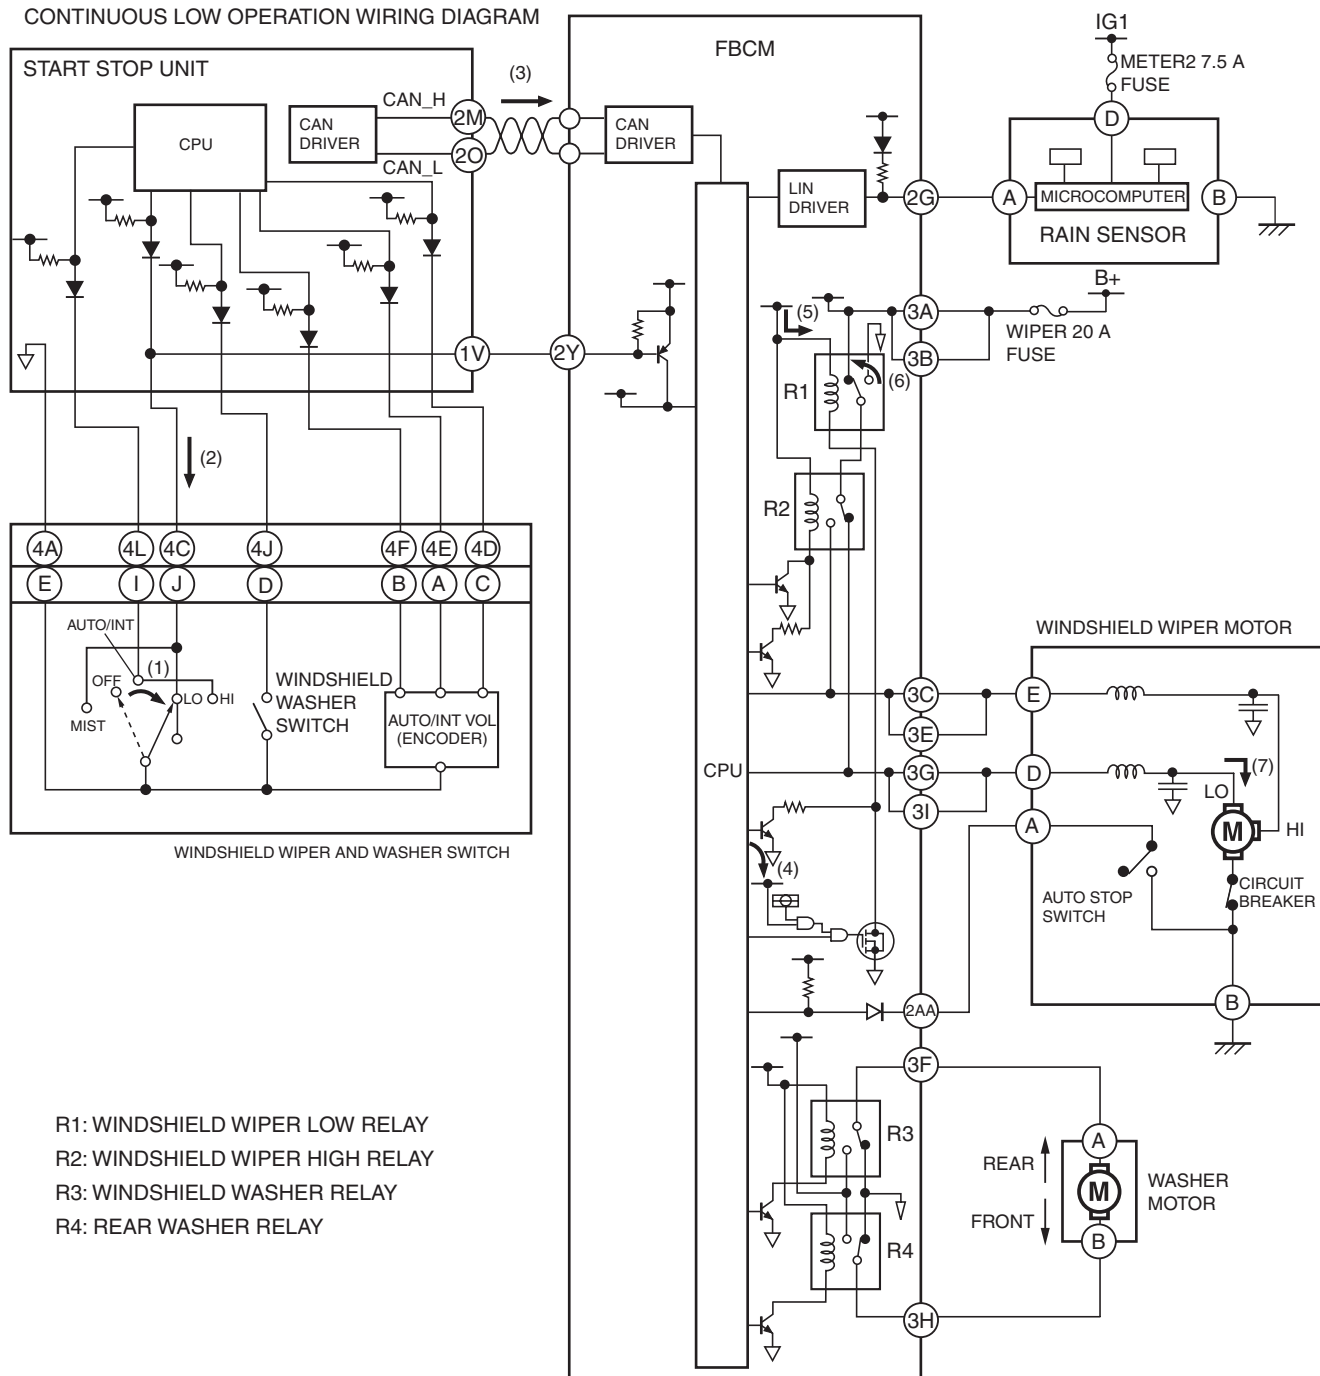


Continuous high operation


1. When the wiper and washer switch is moved to the HI position with the ignition switched ON (engine off or on) (1), the start stop unit detects a windshield wiper switch signal (HI).(2)
2. When the start stop unit detects a windshield wiper switch signal (HI), it send a windshield wiper switch position signal (HI) to the front body control module (FBCM) as a CAN signal.(3)
3. When the front body control module (FBCM) receives the windshield wiper switch position signal (HI), it supplies the base current from the internal CPU to transistors A and B (4), and collector current flows from the internal power supply (5), turning the windshield wiper low relay and windshield wiper high relay on.(6)
4. When the windshield wiper low relay and windshield wiper high relay are turned on, current flows from the battery to the windshield wiper motor and the windshield wipers operate continuously at high speed.(7)

With wiper and washer switch on right side

CONTINUOUS HIGH OPERATION BLOCK DIAGRAM

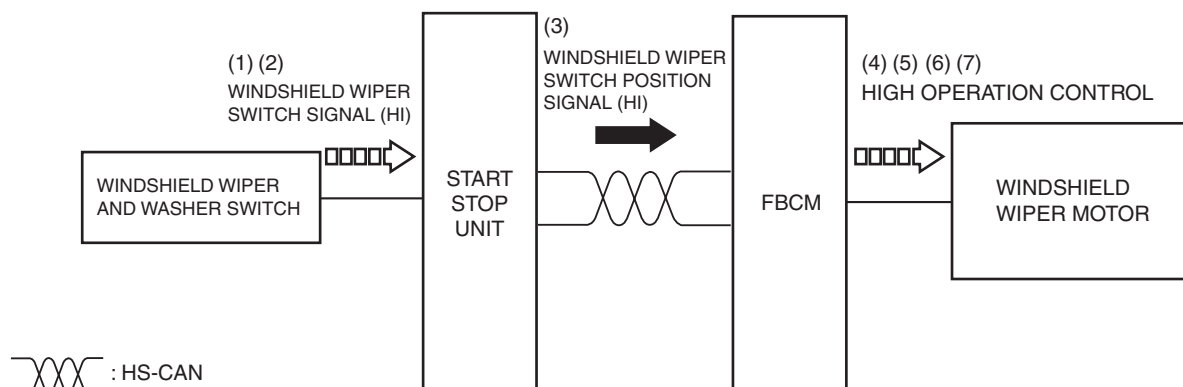


CONTINUOUS HIGH OPERATION WIRING DIAGRAM

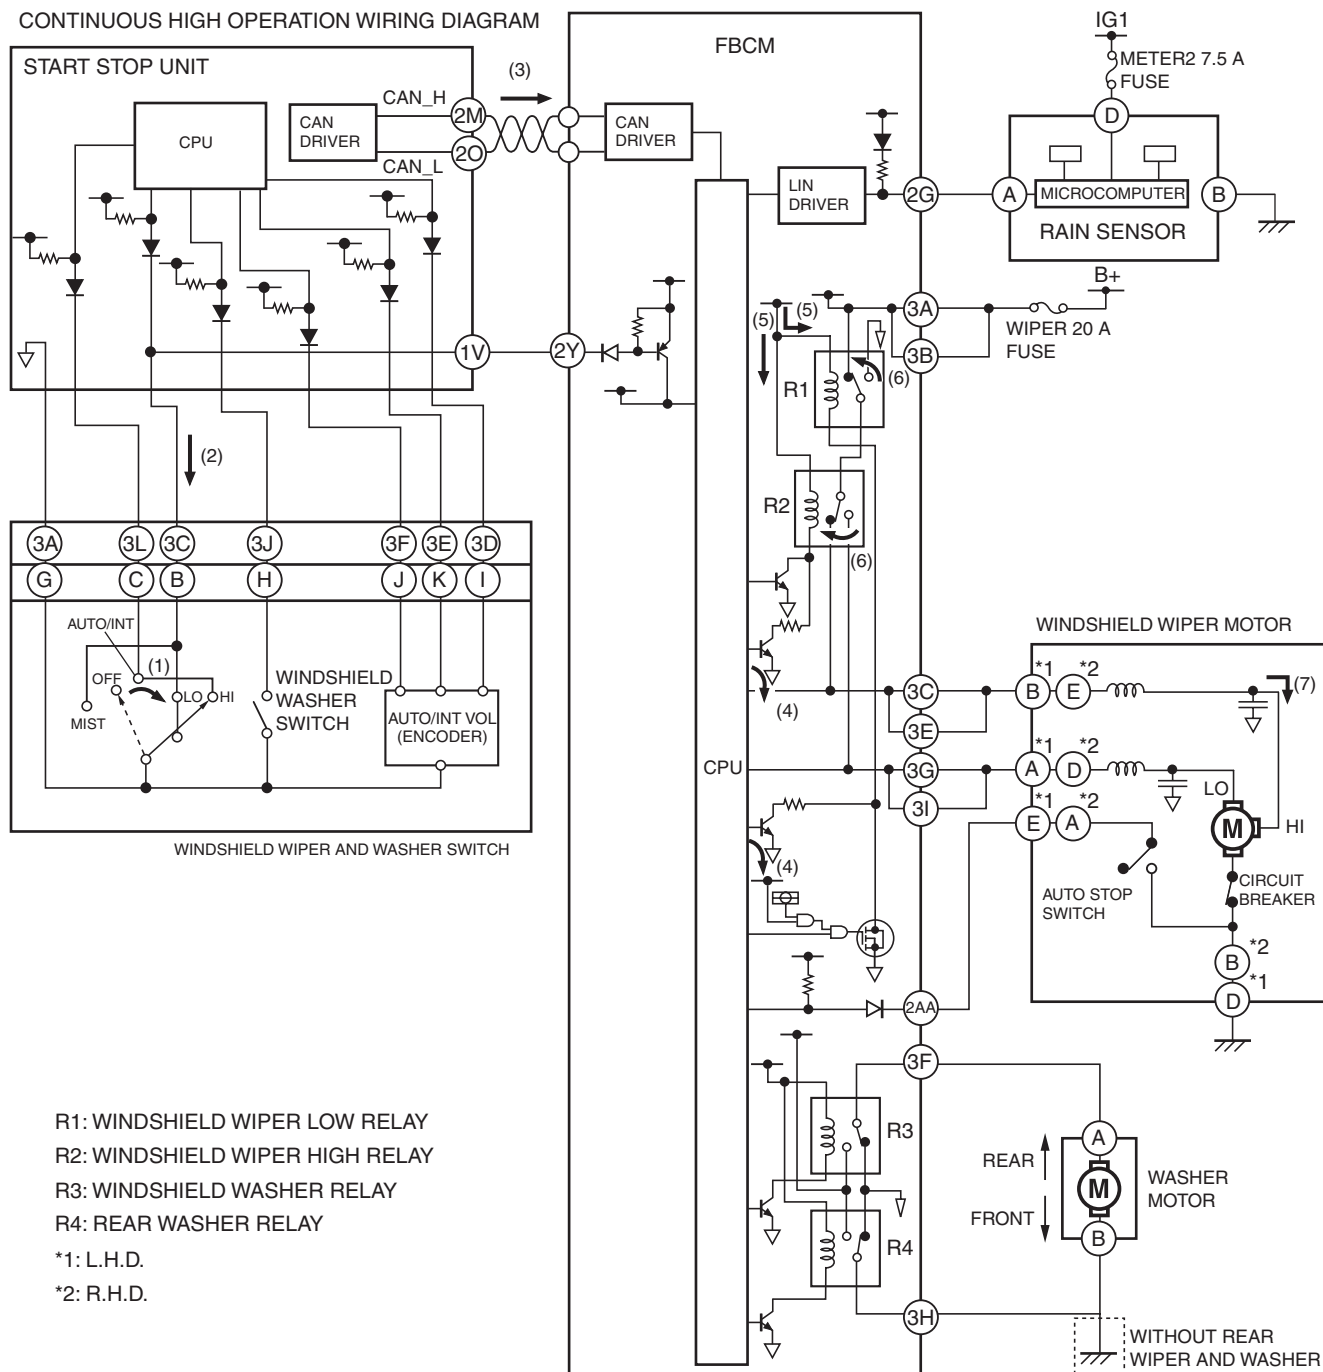


With wiper and washer switch on left side

CONTINUOUS HIGH OPERATION BLOCK DIAGRAM

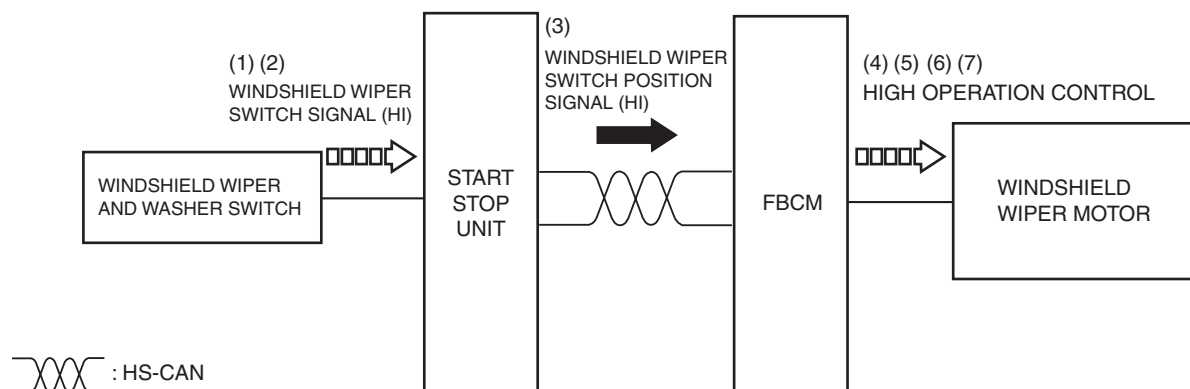


CONTINUOUS HIGH OPERATION WIRING DIAGRAM

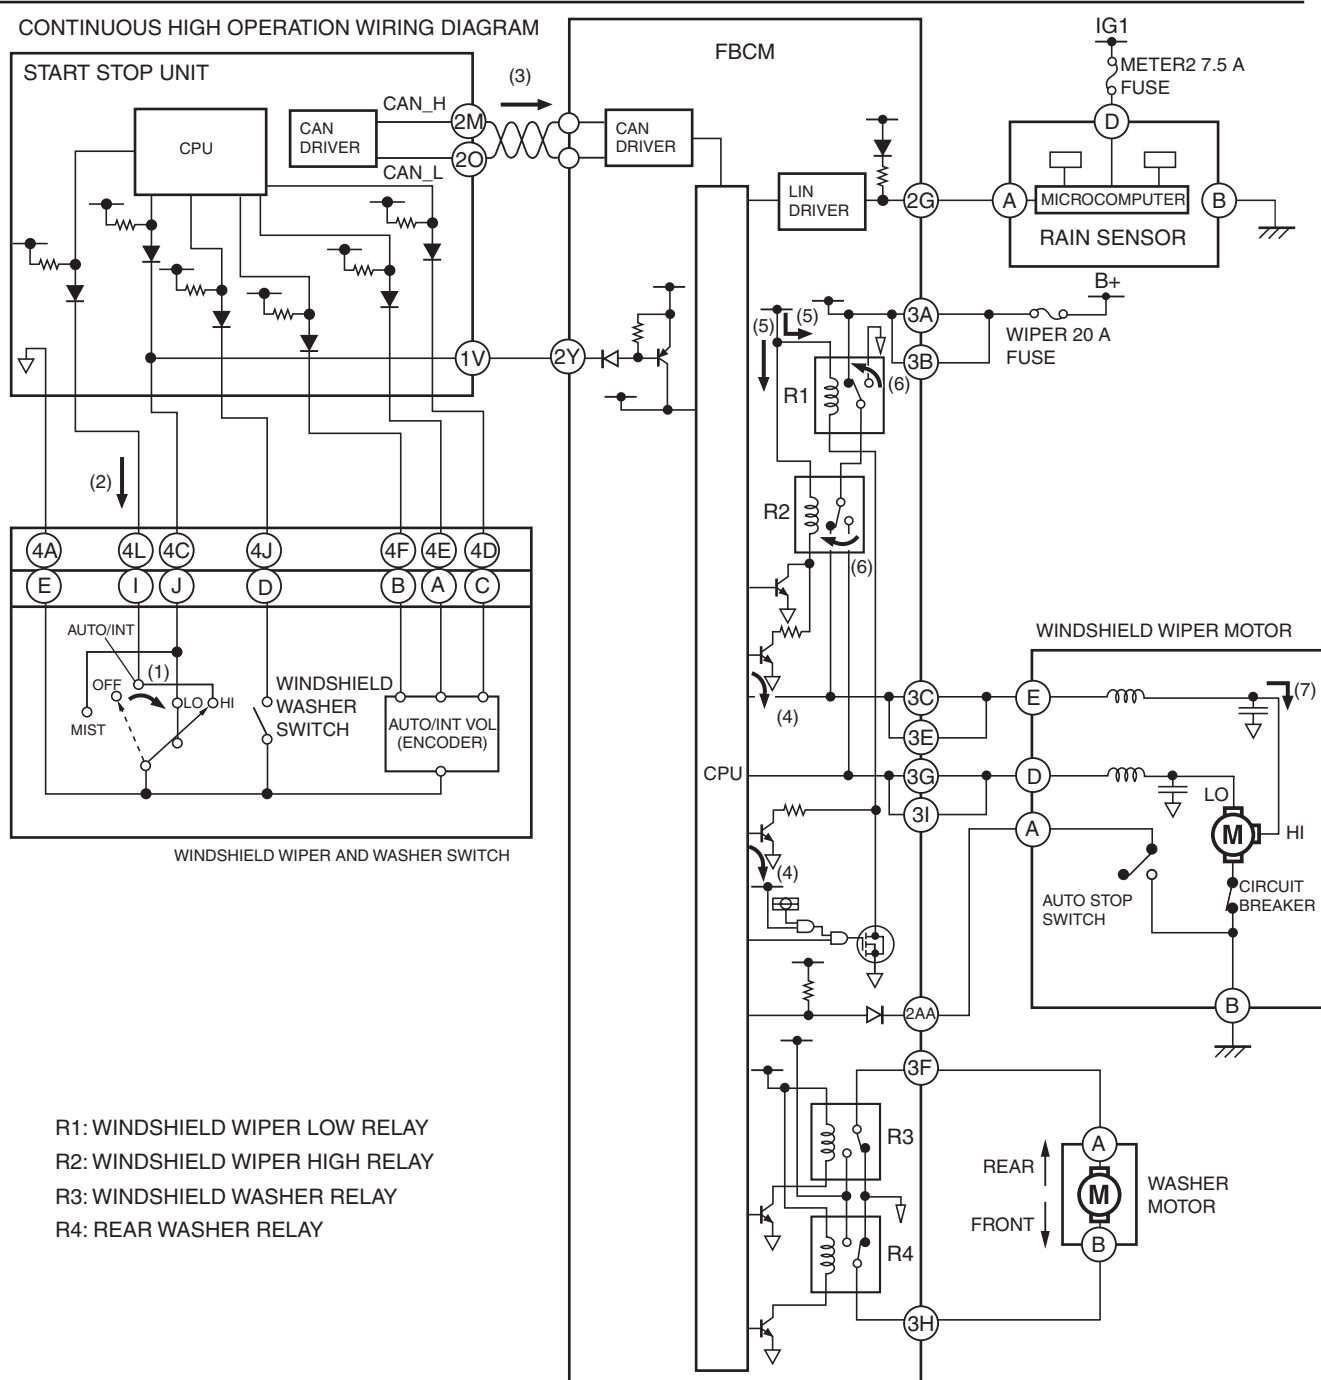


Auto-stop operation

- The auto stop switch inside the windshield wiper motor operates as follows according to the operation position of the windshield wipers.
 - Windshield wipers stopped in park position: On
 - Windshield wipers stopped in position other than park: Off
- When the wiper and washer switch is in the OFF position (1) during windshield wiper operation, the windshield wipers operate continuously because the auto stop switch is off.
- The auto stop switch turns on when the windshield wipers move to the park position.(2)
- When the front body control module (FBCM) detects that the auto stop switch is on, it stops the base current to the transistor (3) and turns off the windshield wiper low relay, and the windshield wipers stop at the park position.

With wiper and washer switch on right side

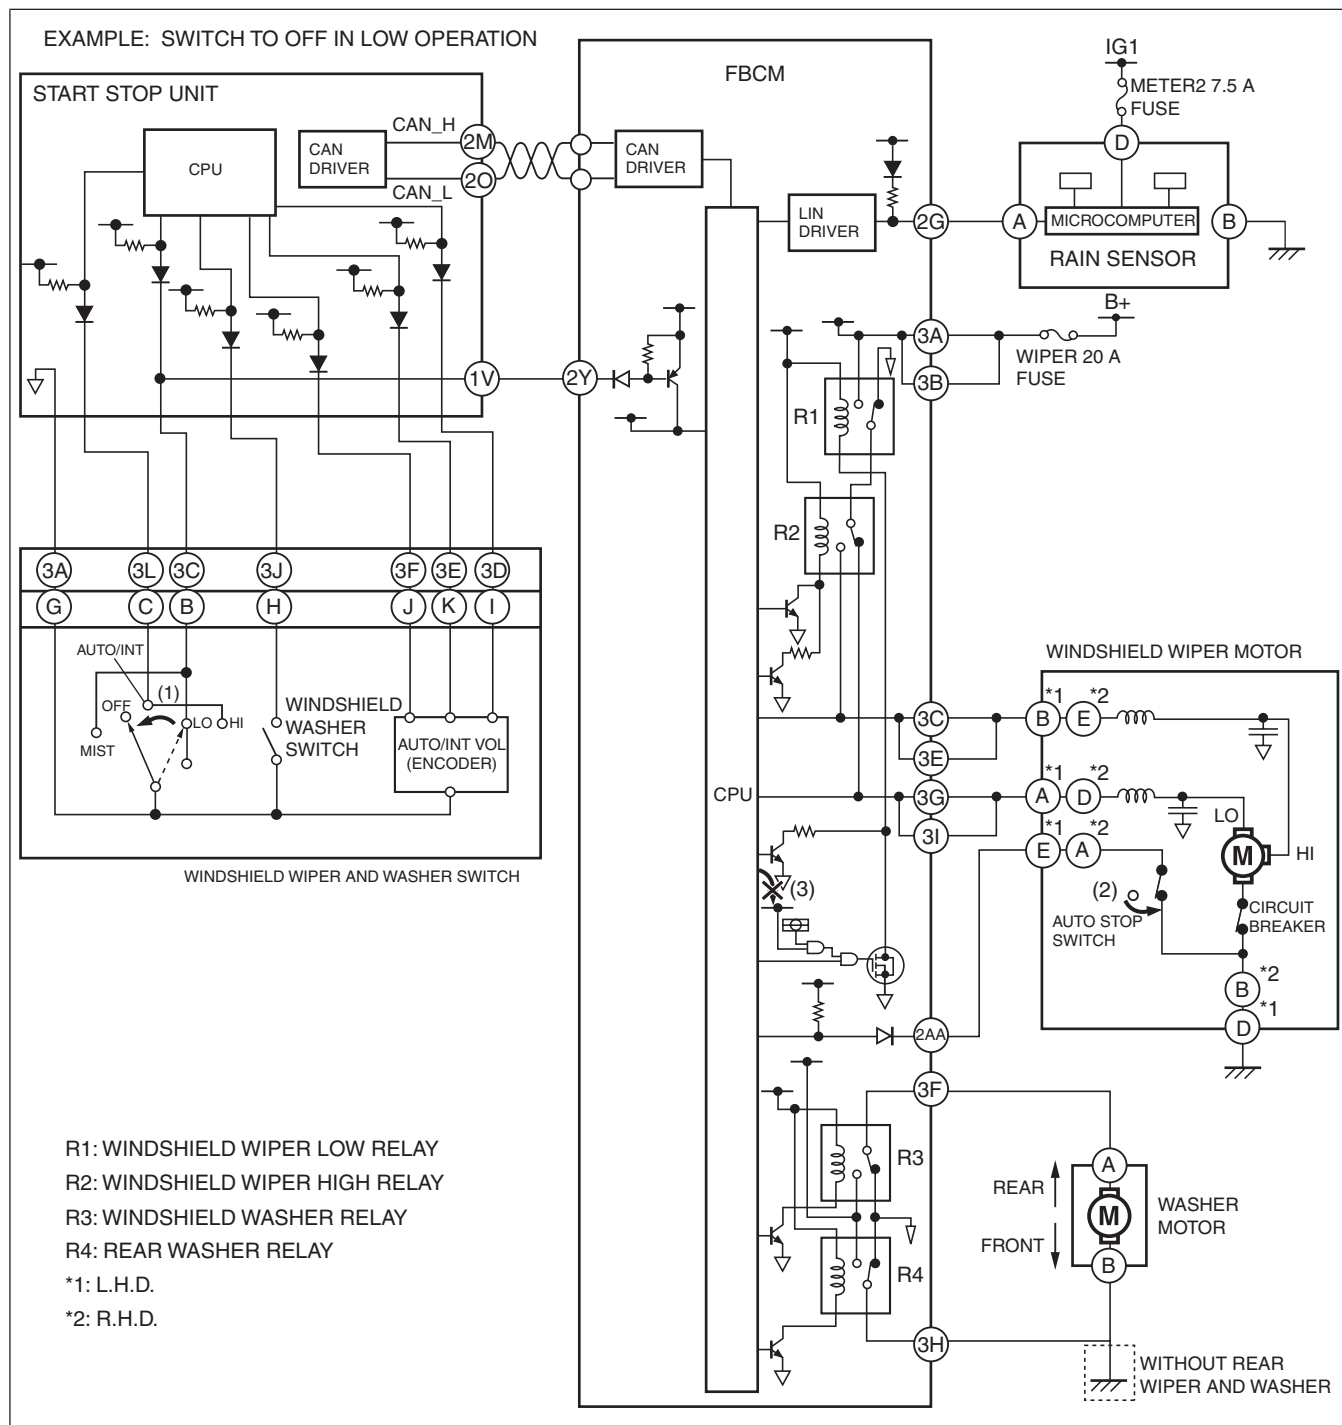

With wiper and washer switch on left side

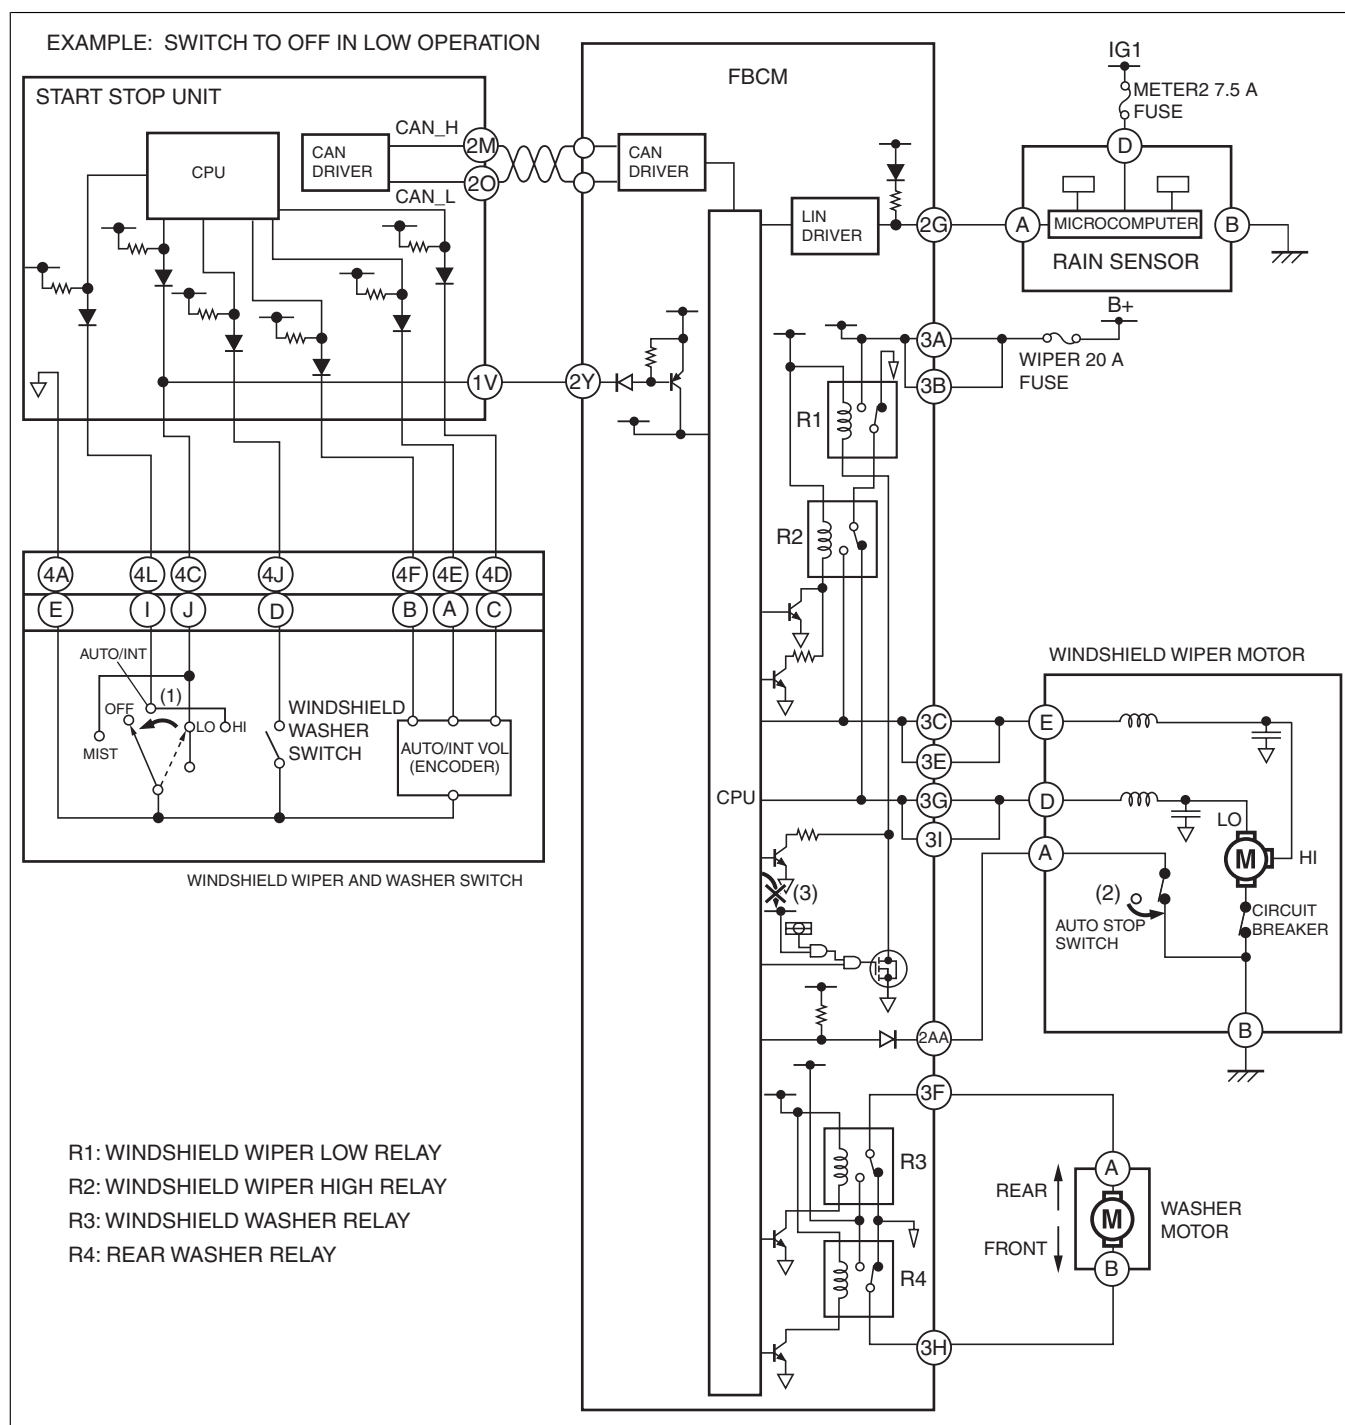


ac5wzn00001293

One-touch wiper operation


1. When the wiper and washer switch is moved up with the ignition switched ON (engine off or on) (1), the start stop unit detects a windshield wiper switch signal (LO).(2)
2. When the start stop unit detects a windshield wiper switch signal (LO), it send a windshield wiper switch position signal (LO) to the front body control module (FBCM) as a CAN signal.(3)
3. When the front body control module (FBCM) receives the windshield wiper switch position signal (LO), it supplies the base current from the internal CPU to transistor A (4), and collector current flows from the internal power supply (5), turning the windshield wiper low relay on.(6)
4. When the windshield wiper low relay is turned on, current flows from the battery to the windshield wiper motor and the windshield wipers operate at low speed.(7)

With wiper and washer switch on right side

ONE-TOUCH WIPER OPERATION BLOCK DIAGRAM

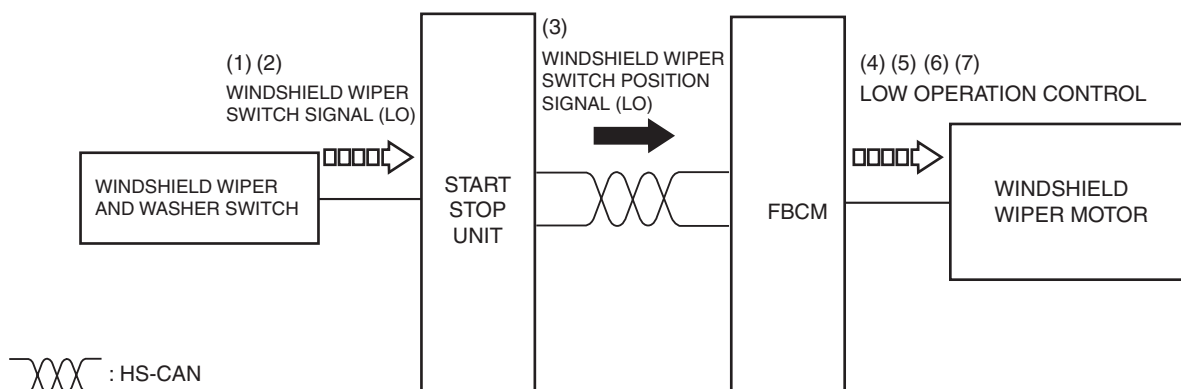


ONE-TOUCH WIPER OPERATION WIRING DIAGRAM

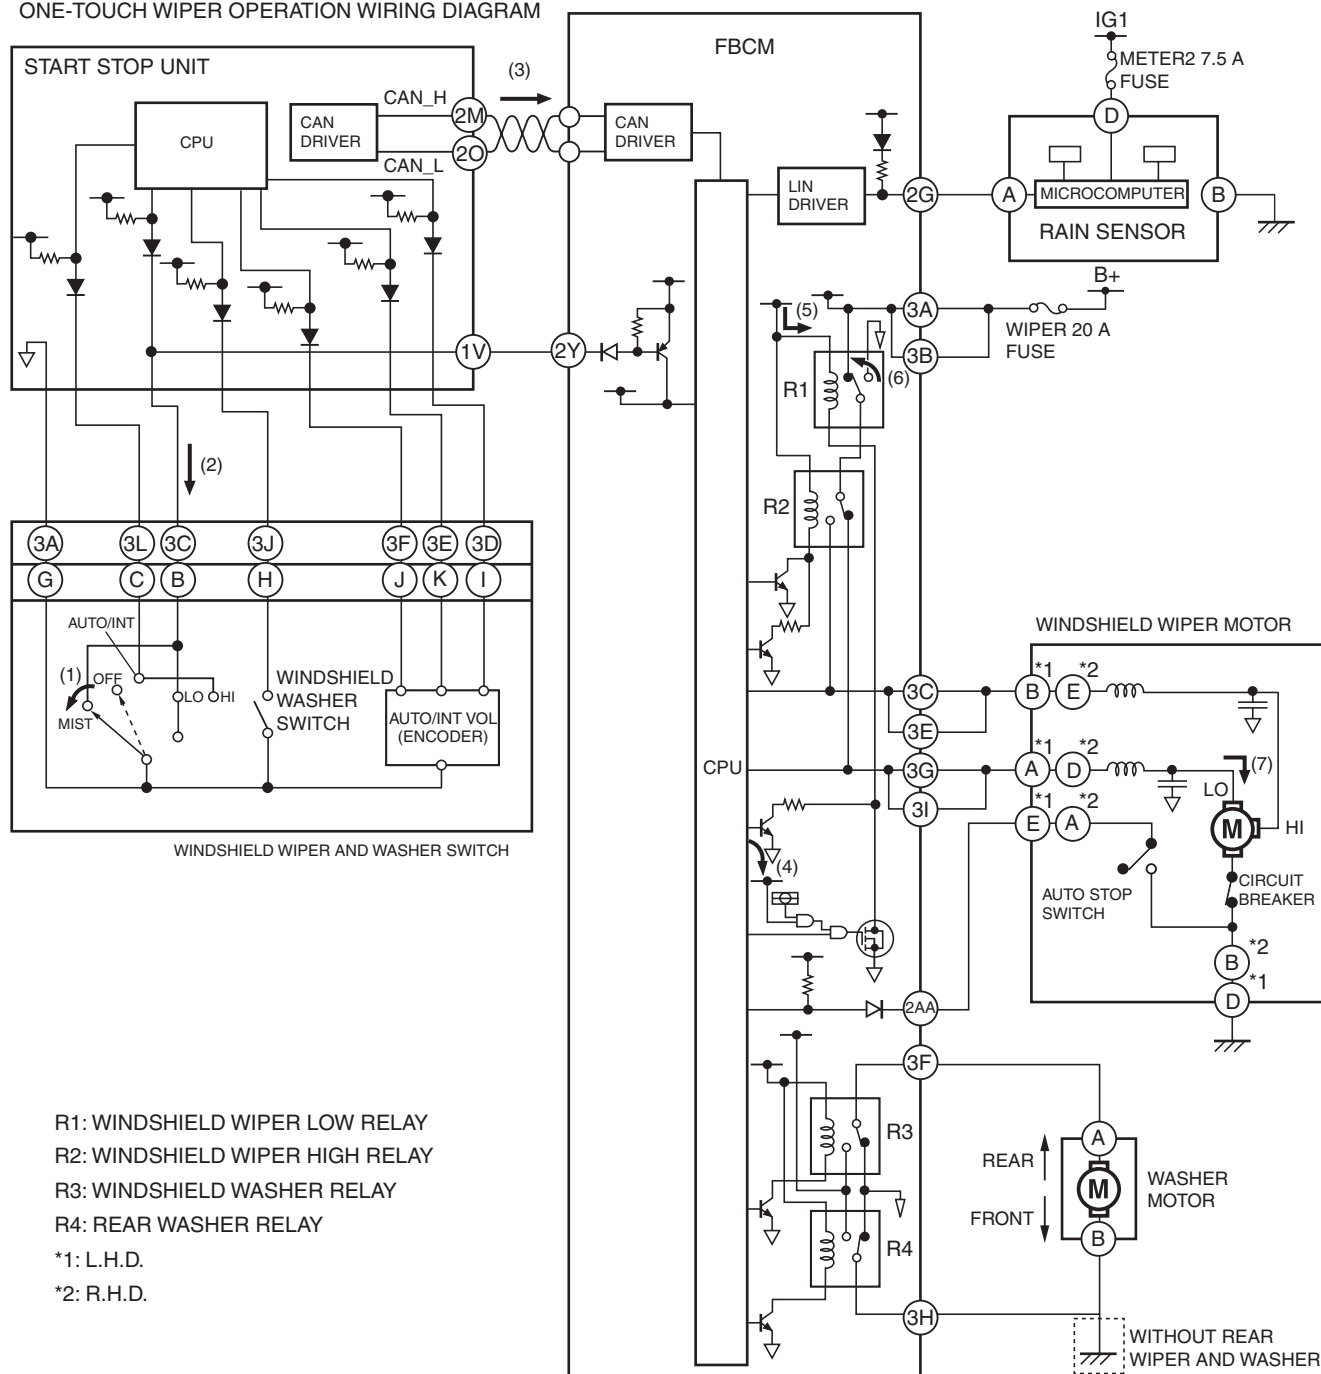


With wiper and washer switch on left side

ONE-TOUCH WIPER OPERATION BLOCK DIAGRAM

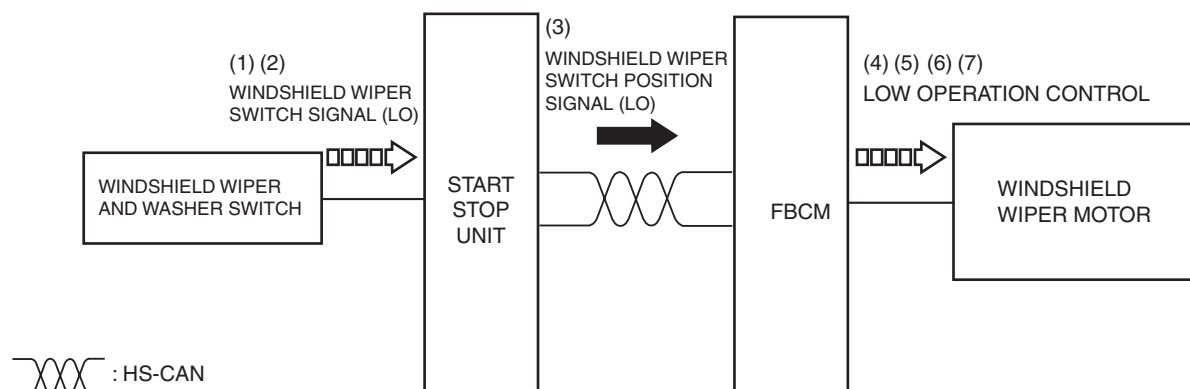

ONE-TOUCH WIPER OPERATION WIRING DIAGRAM

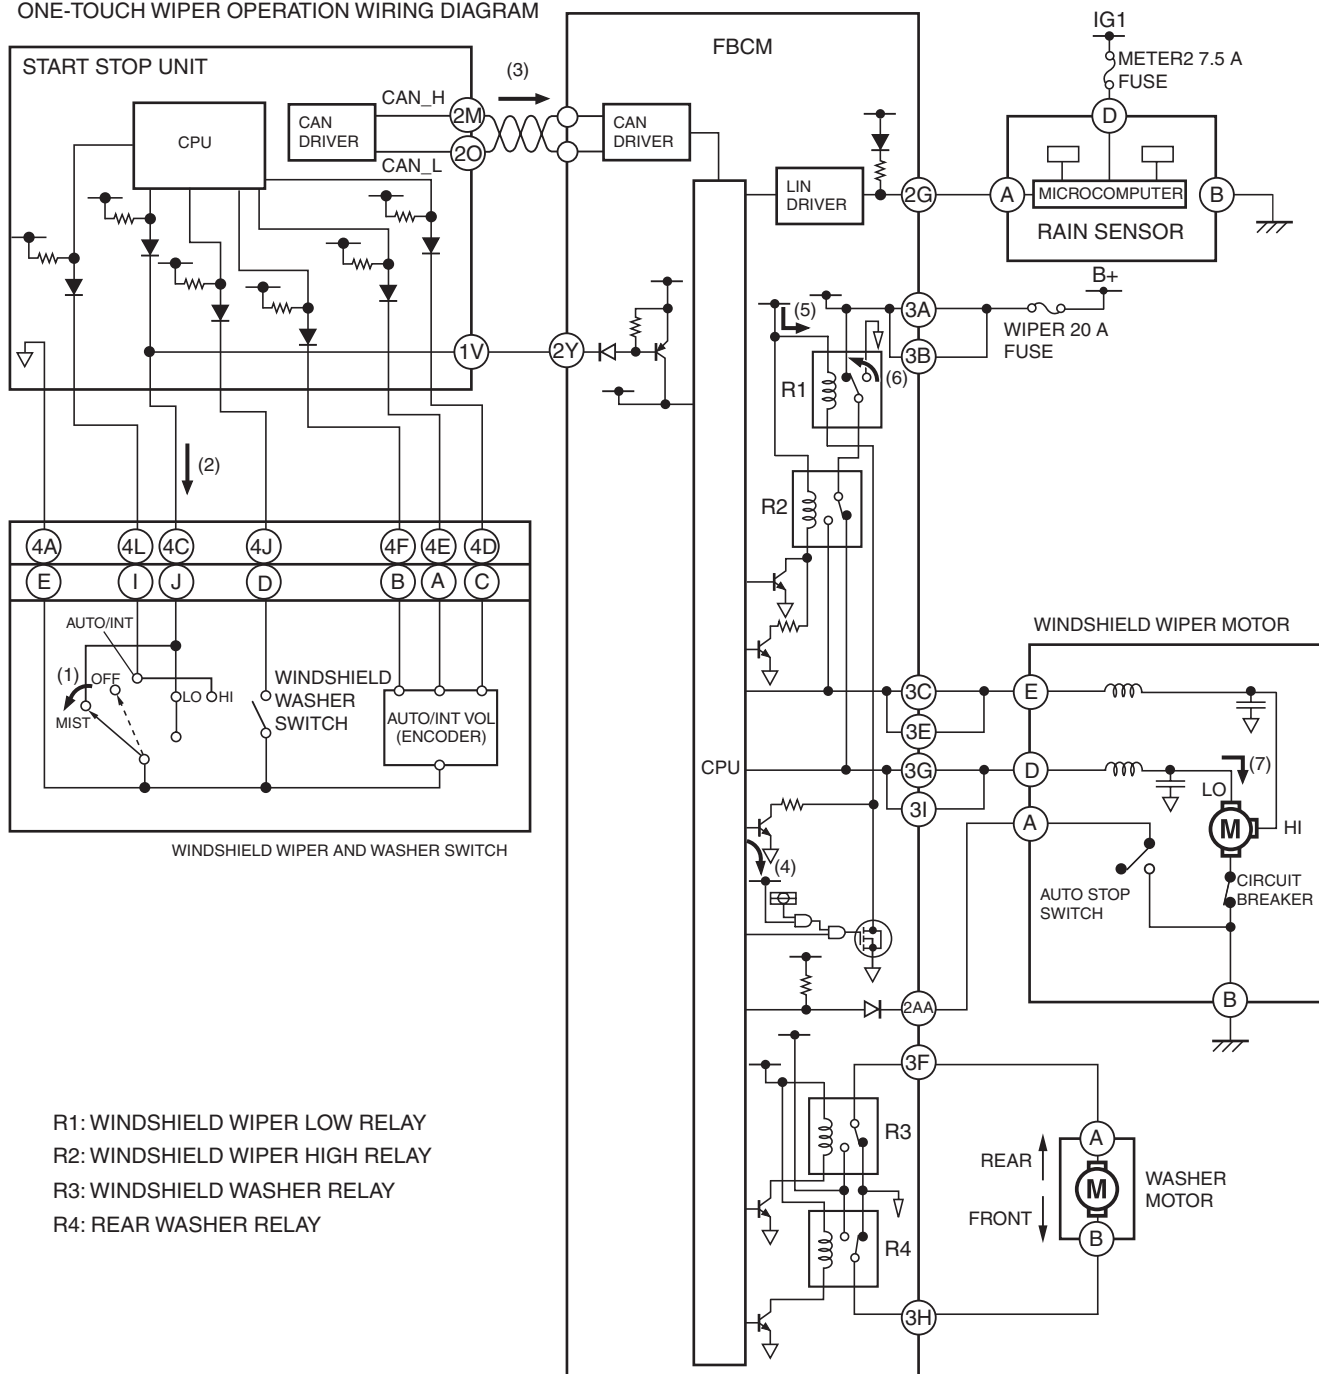


Intermittent wiper operation (without auto wiper system)


1. When the wiper and washer switch is moved to the INT position with the ignition switched ON (engine off or on) (1), the start stop unit detects a windshield wiper switch signal (INT).(2)
2. When the start stop unit detects a windshield wiper switch signal (INT), it send a windshield wiper switch position signal (INT) and an INT volume signal to the front body control module (FBCM) as CAN signals.(3)
3. When the front body control module (FBCM) receives the windshield wiper switch position signal (INT), it supplies the base current from the internal CPU to transistor A (4), and collector current flows from the internal power supply (5), turning the windshield wiper low relay on.(6)
4. When the windshield wiper low relay is turned on, current flows from the battery to the windshield wiper motor and the windshield wipers operate continuously at low speed.(7)
5. The windshield wipers stop at the park position due to the auto stop operation, and after a certain period of time has elapsed, which was calculated based on the INT volume signal, the front body control module (FBCM) operates the windshield wipers at a low speed. By repeating this, the windshield wipers operate intermittently. (8)

With wiper and washer switch on right side

INTERMITTENT WIPER OPERATION BLOCK DIAGRAM

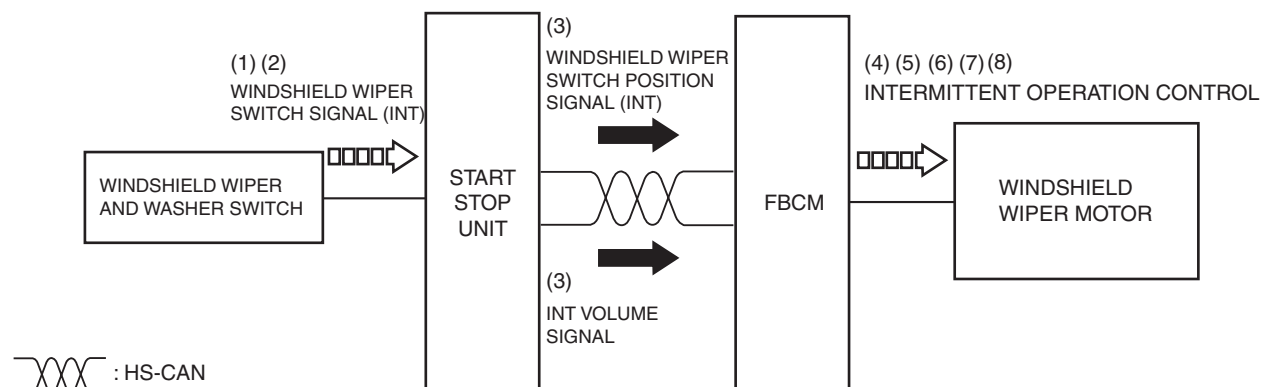


INTERMITTENT WIPER OPERATION WIRING DIAGRAM

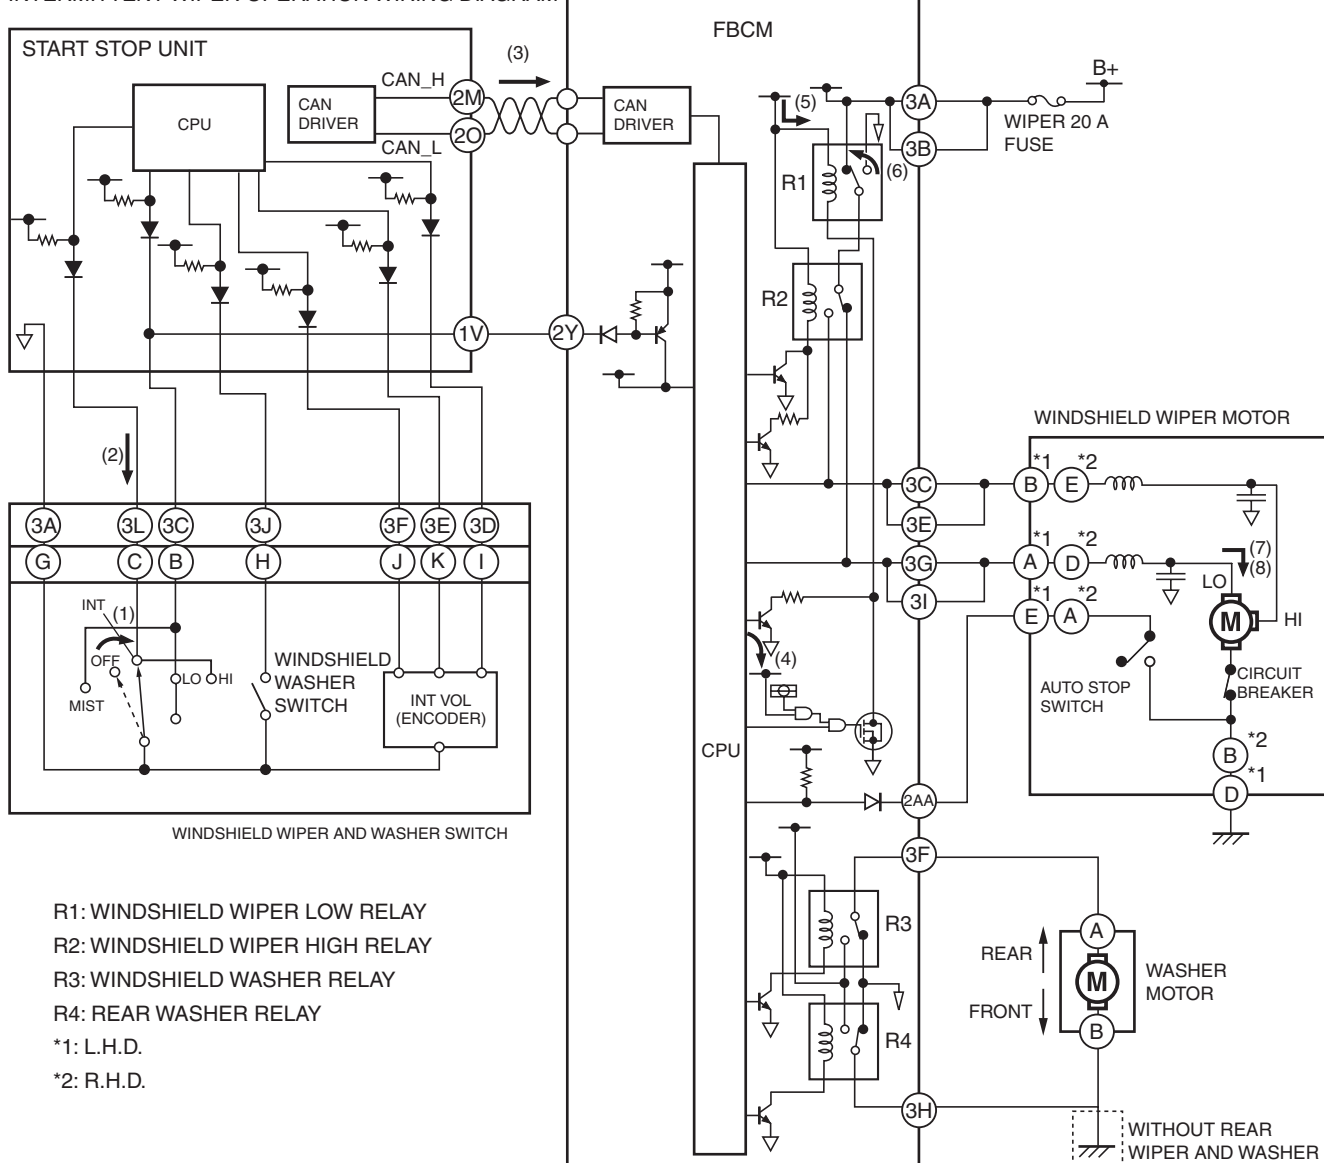


With wiper and washer switch on left side

INTERMITTENT WIPER OPERATION BLOCK DIAGRAM

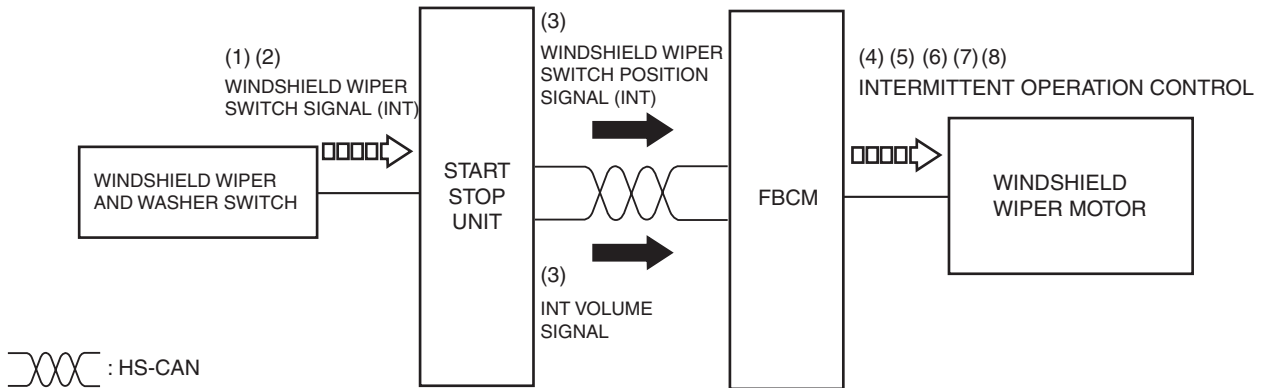

INTERMITTENT WIPER OPERATION WIRING DIAGRAM

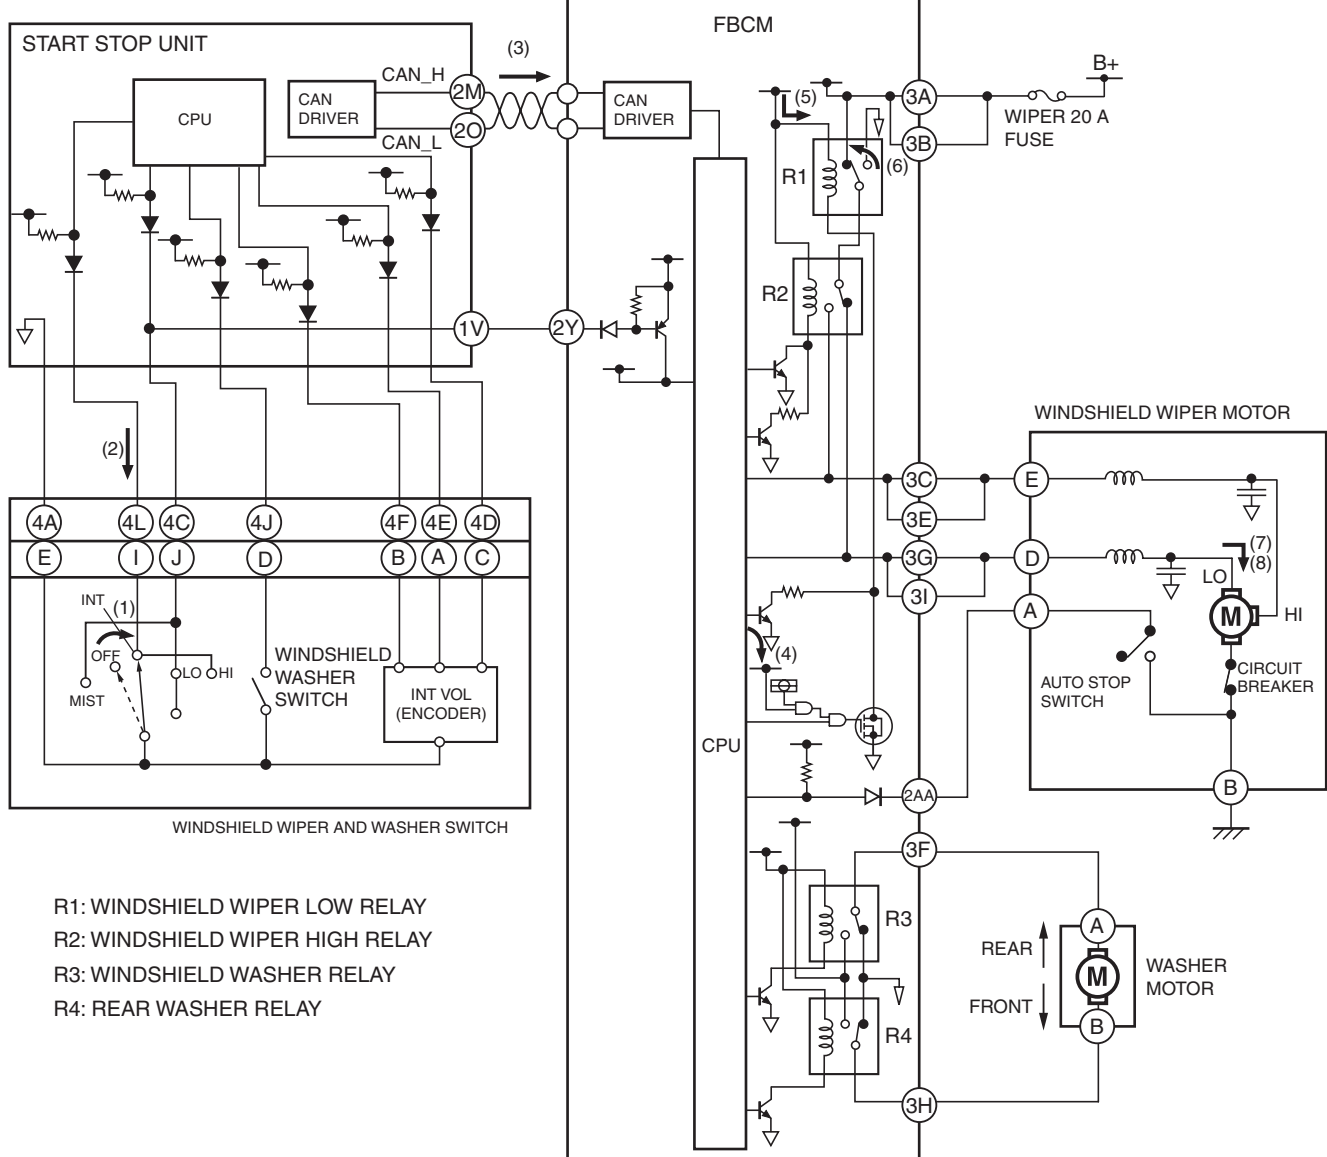

ac5wzn00001295

Auto wiper operation (with auto wiper system)

- Refer to AUTO WIPER SYSTEM for a detailed explanation of the auto wiper operation. (See AUTO WIPER SYSTEM.)

Synchronized washer and wiper operation


1. When the windshield washer switch is turned on with the ignition switched ON (engine off or on) and the windshield wipers not operated (1), the start stop unit detects a windshield washer switch ON signal.(2)
2. When the start stop unit detects a windshield washer switch ON signal, it send a windshield washer operation request signal to the front body control module (FBCM) as a CAN signal.(3)
3. When the front body control module (FBCM) receives the windshield washer operation request signal, it supplies the base current from the internal CPU to transistor C (4), and collector current flows from the internal power supply (5), turning the windshield washer relay on.(6)
4. When the windshield washer relay is turned on, current flows from the power supply inside the front body control module (FBCM) to the washer motor and the washer motor operates, and washer fluid is sprayed from the front washer nozzles.(7)
5. When the front body control module (FBCM) receives the windshield washer operation request signal for a certain period of time, it operates the windshield wipers at low speed.(8)
6. When the windshield washer switch is turned off, the operation stops after the windshield wipers operate two times.

Note


- If the headlight cleaner operates automatically while the windshield washer is operating, the operation stops after the windshield wipers operate four times.
- If the windshield washer switch is turned on while the windshield wipers are operating, windshield wiper operation is continued and the windshield washer operation, from (3) to (7), is performed.

With wiper and washer switch on right side

SYNCHRONIZED WASHER AND WIPER OPERATION BLOCK DIAGRAM

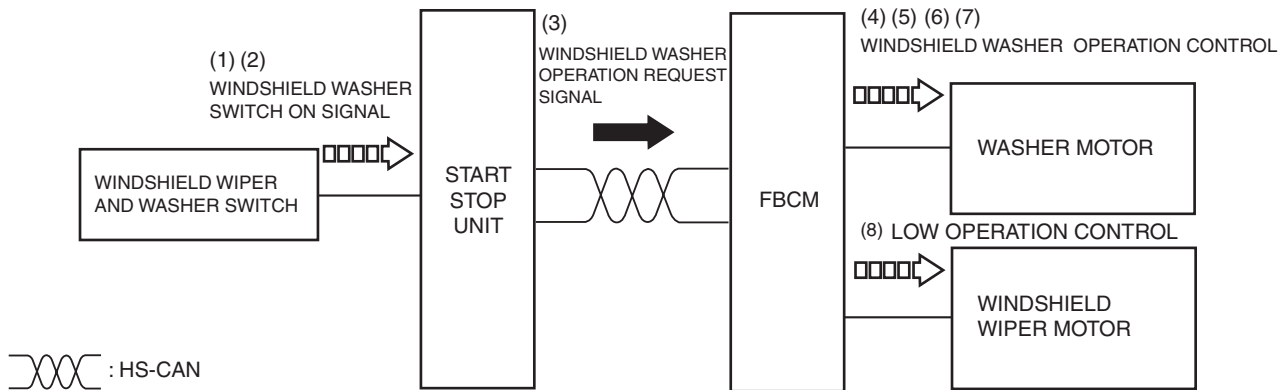


SYNCHRONIZED WASHER AND WIPER OPERATION WIRING DIAGRAM

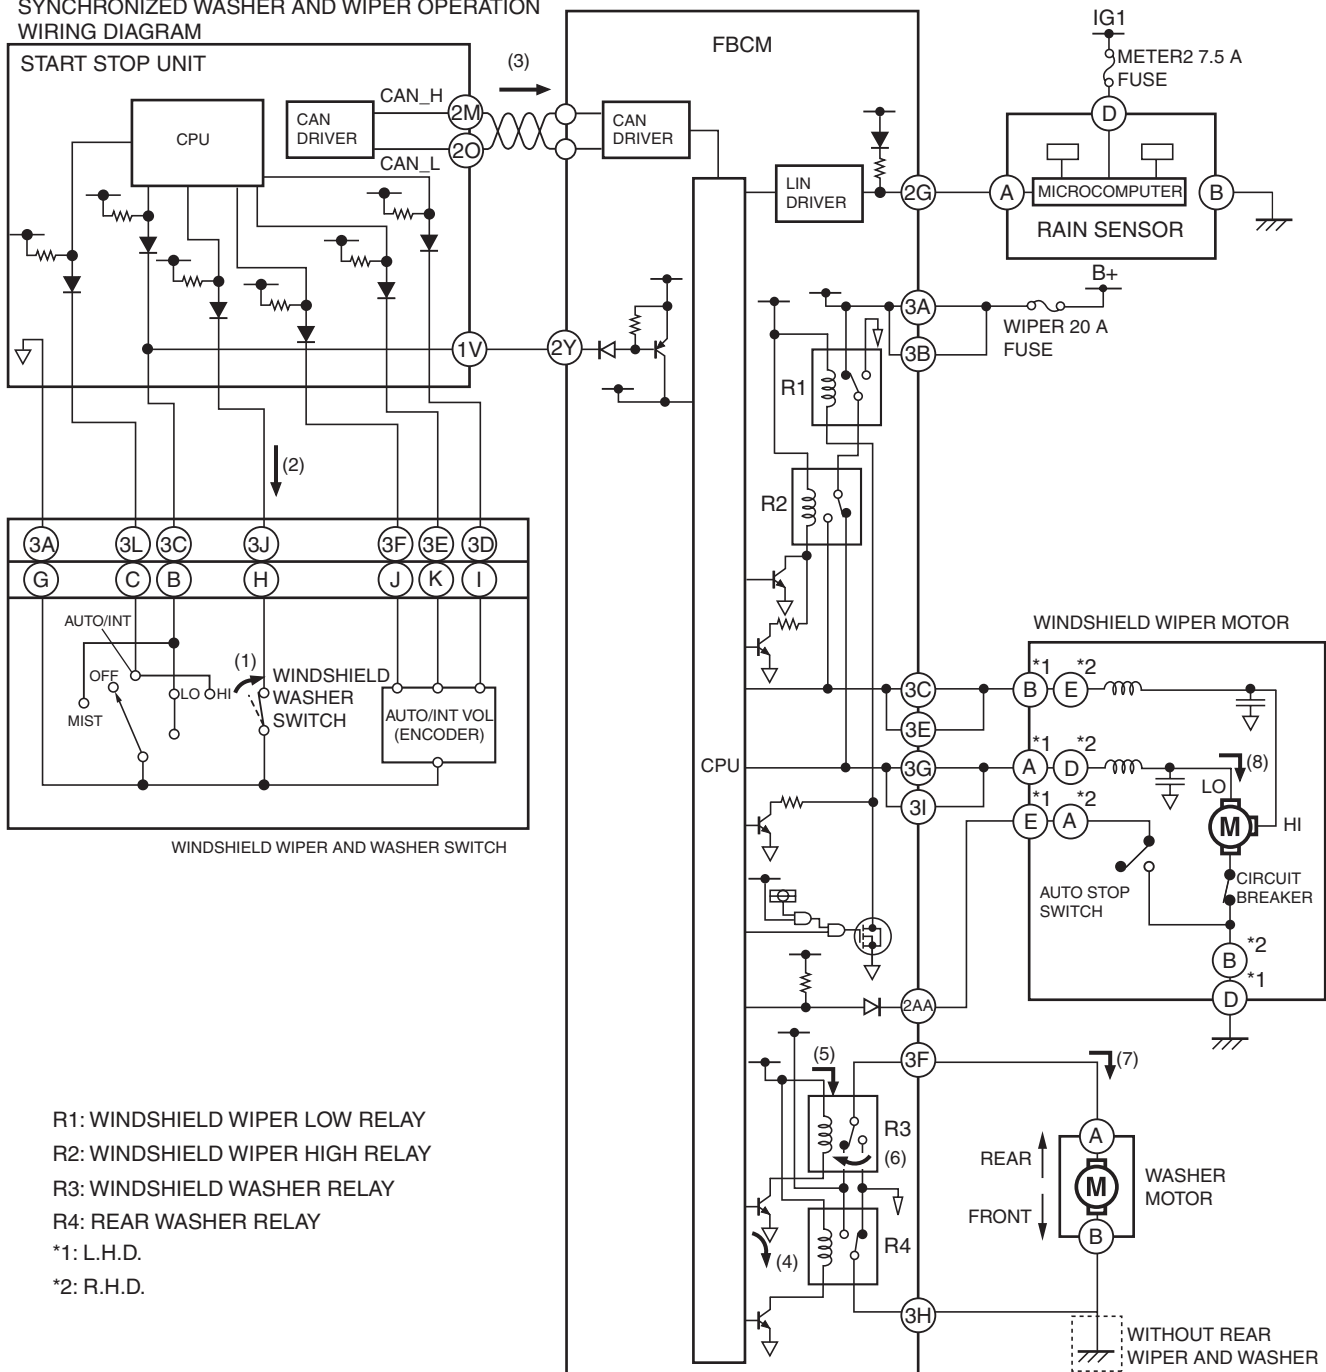


With wiper and washer switch on left side

SYNCHRONIZED WASHER AND WIPER OPERATION BLOCK DIAGRAM

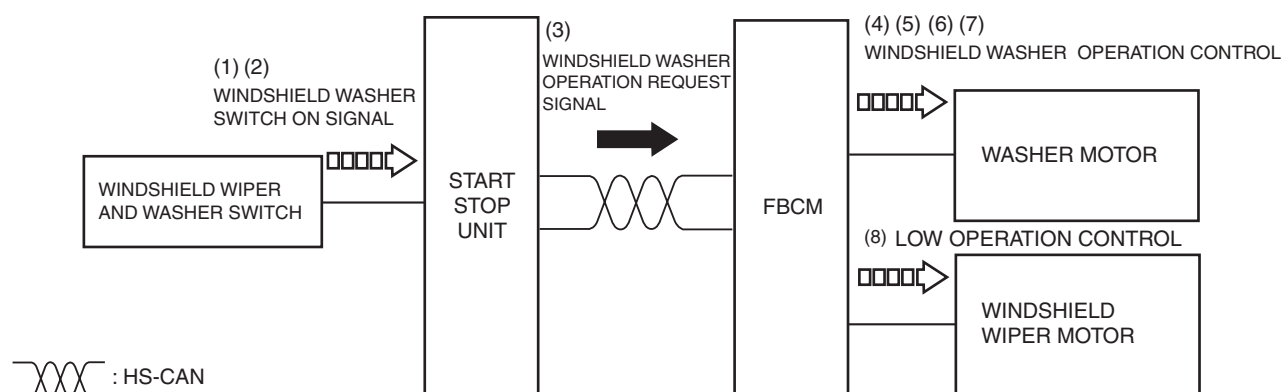


SYNCHRONIZED WASHER AND WIPER OPERATION WIRING DIAGRAM

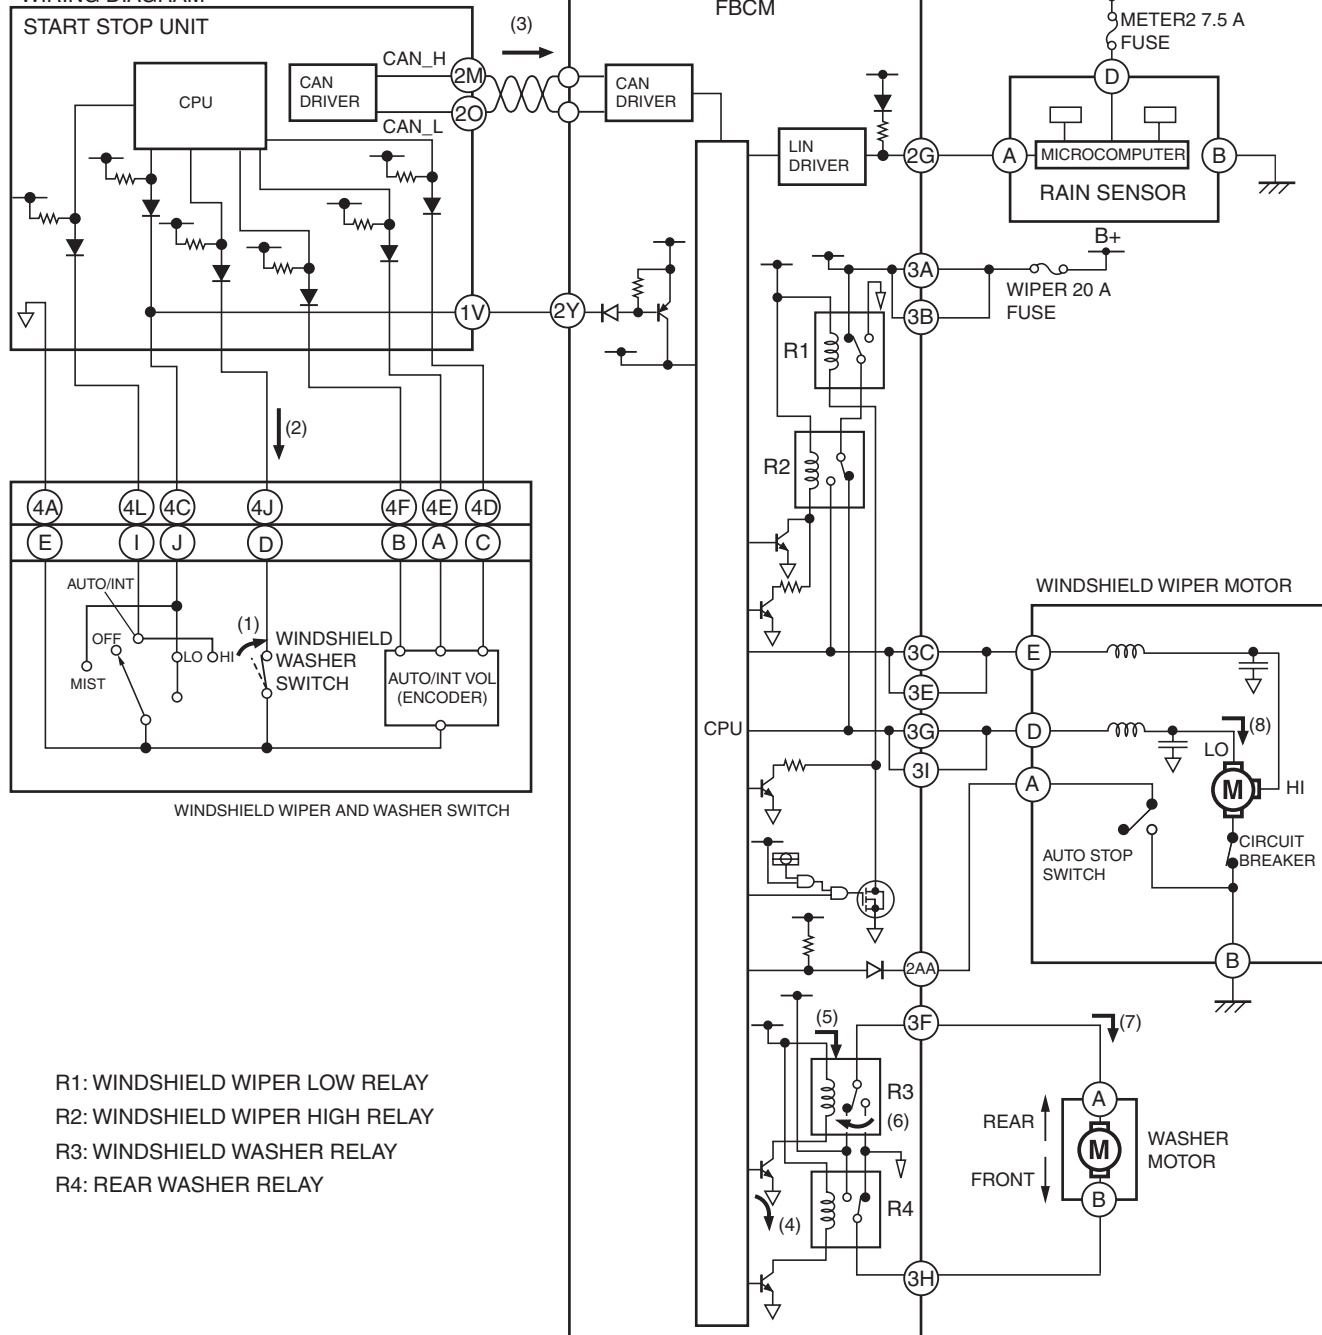

LO/HI detection function

- The LO/HI detection function is used in the fail-safe function during a system malfunction.
 - The front body control module (FBCM) detects that the wiper and washer switch is in the LO or HI position and monitors it.

With wiper and washer switch on right side

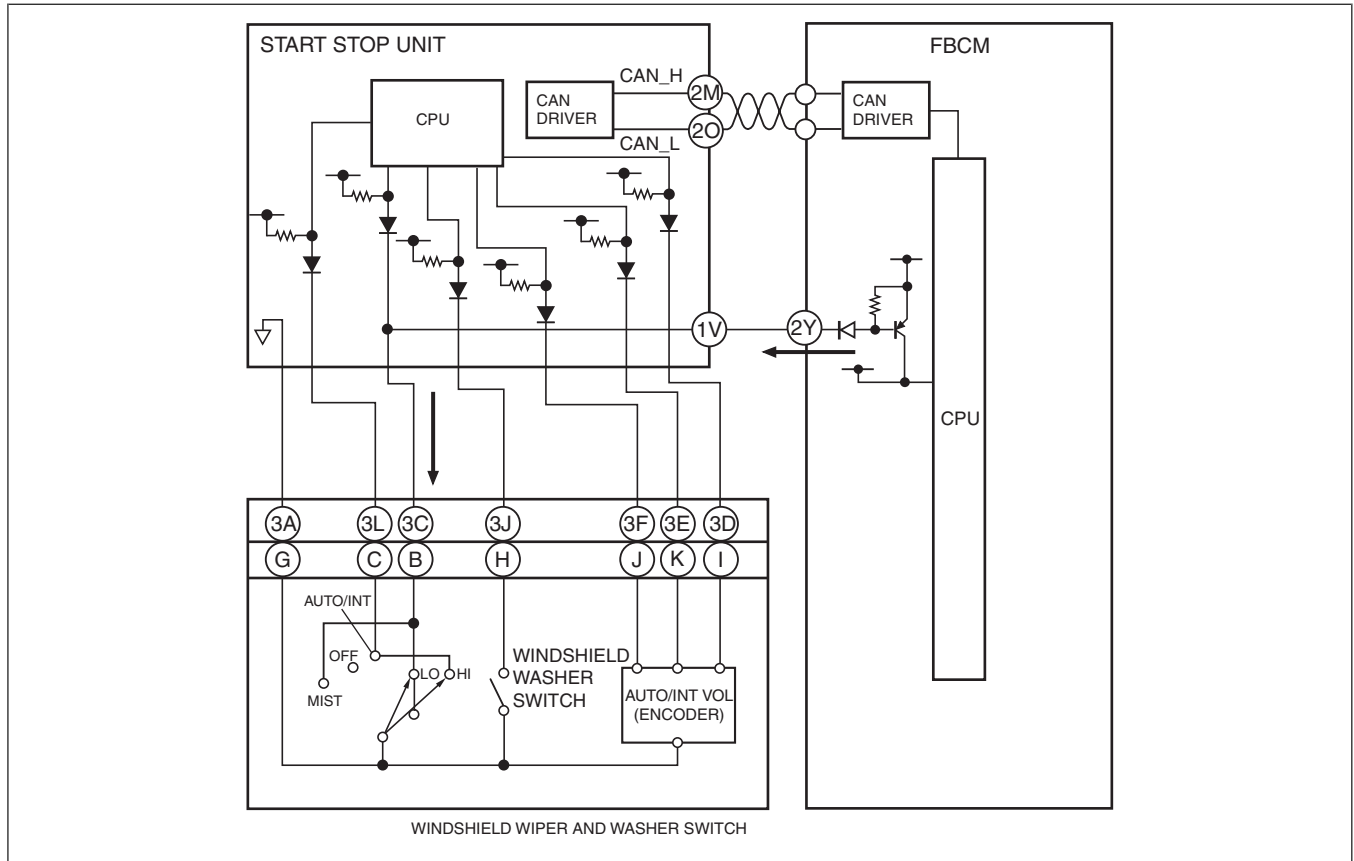

With wiper and washer switch on left side

