


## CONTROL VALVE BODY DISASSEMBLY

id051700661400

### Structural View

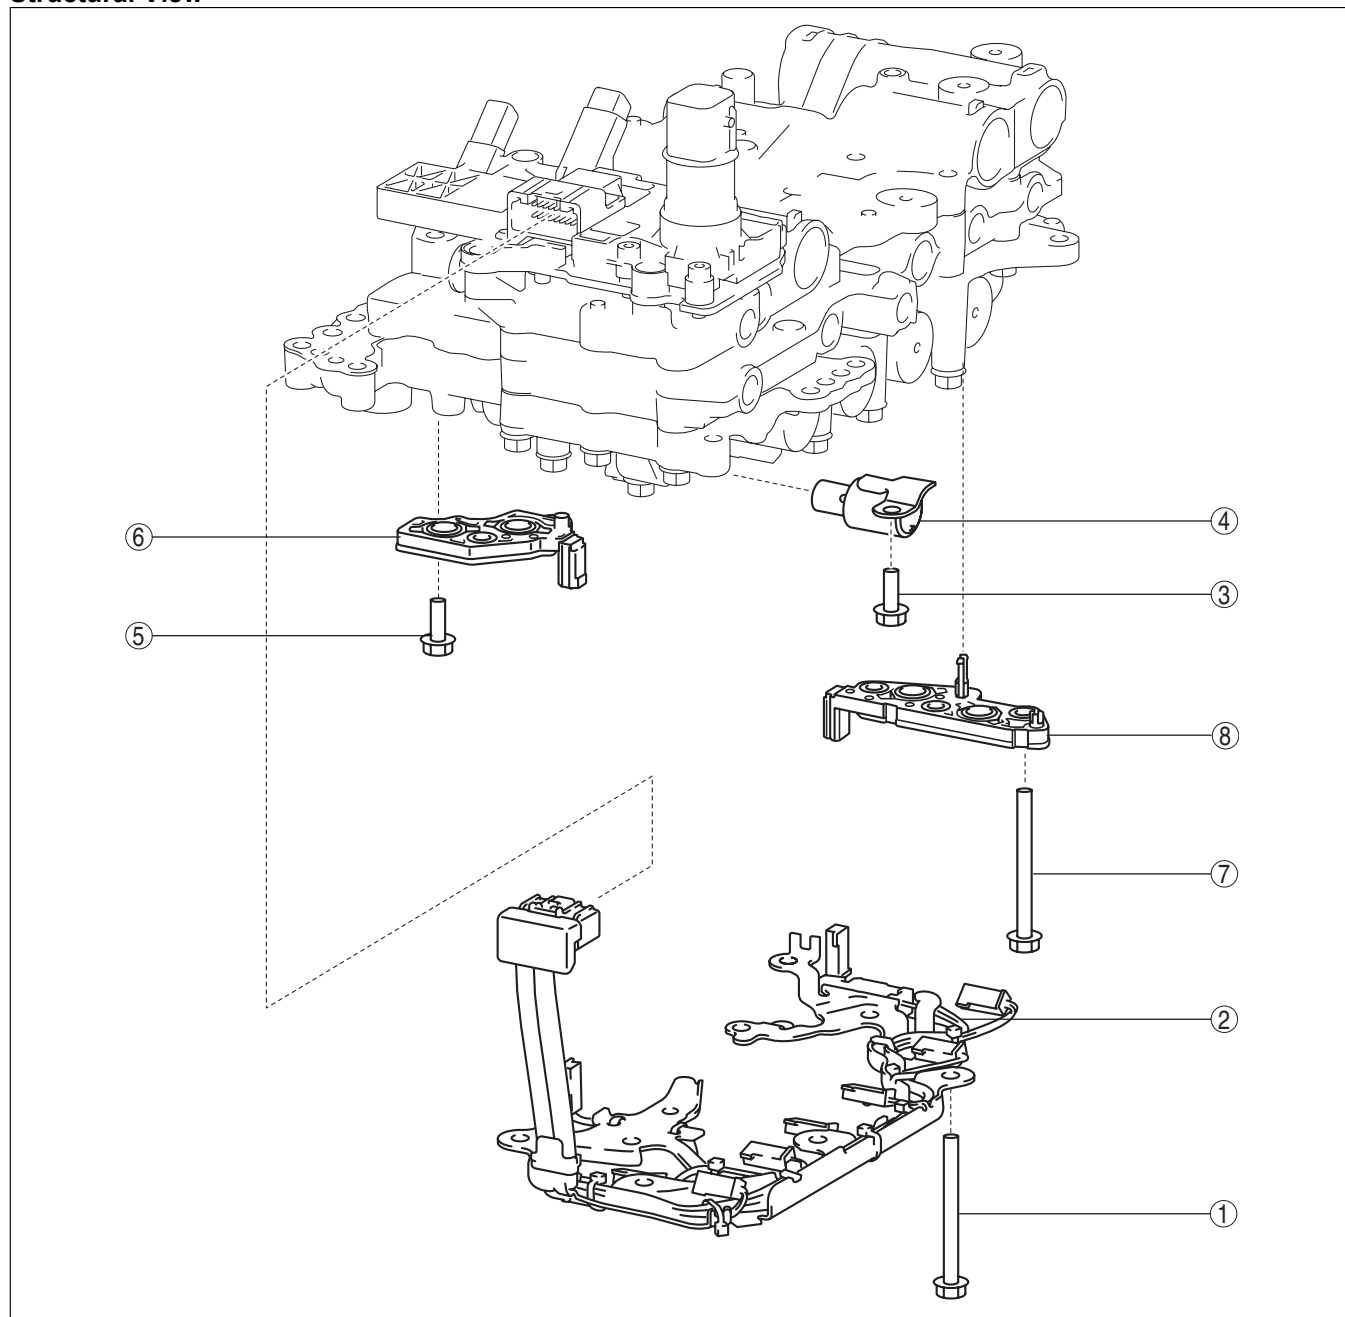

azzjw00001499

1	8 bolts
2	Coupler component
3	Bolt
4	ON/OFF solenoid
5	3 bolts


6	Oil pressure switch B
7	3 bolts
8	Oil pressure switch A

### Disassembly Procedure


#### Caution

- Disassemble the control valve body and replace the malfunctioning part only if there is a malfunction in the control valve body determined by the troubleshooting procedure and using the vehicle diagnostic tester (M-MDS). However, if there is a malfunction in the parts other than the following, replace the control valve body with a new one because the parts other than the following are not shipped from the factory as a single component.
  - ON/OFF solenoid

- Oil pressure switch A
  - Oil pressure switch B
  - Coupler component
  - Do not drop or apply an impact to the control valve body. Replace the control valve body with a new one if it was dropped or received an impact.
  - Placing the TCM side pointed downward on a workbench directly could damage the TCM. If the TCM side is placed pointed downward, place the control valve body on an impact-absorbing material so that the TCM does not contact the workbench directly.
- A: TCM**  
**B: Impact-absorbing material**

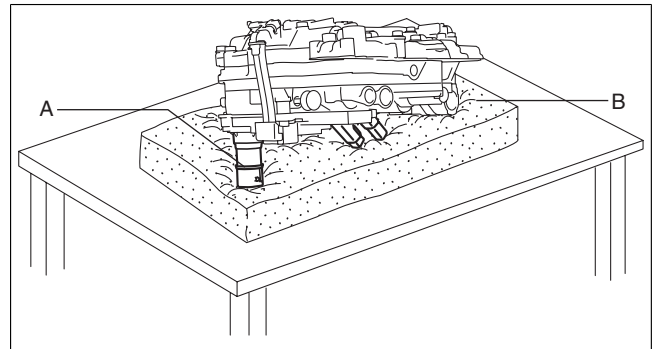

azzjiw00001500

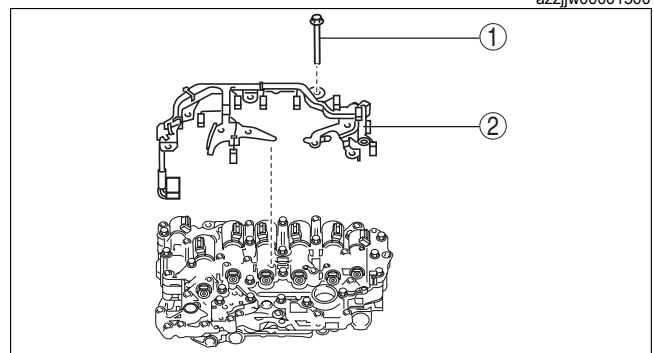


azzjiw00000900

1. Remove the coupler component using the following procedure.


(1) Disconnect the connector shown in the figure.

#### Caution

- If a connector is disconnected, do not pull the wiring harness. Pull the connector at a straight after releasing the lock.

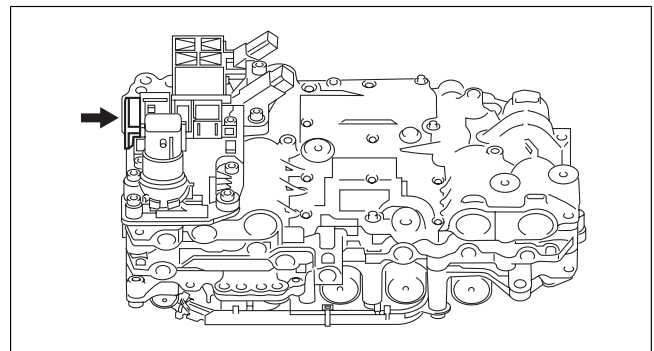

azzjiw00000896

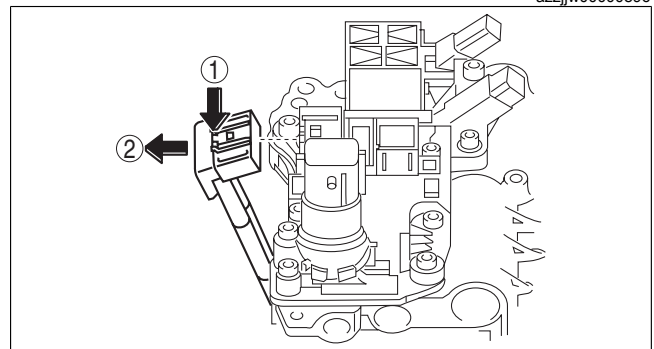

azzjiw00000897

- (2) Place the control valve body on an impact-absorbing material with the TCM side facing downward as shown in the figure.

### Caution

- Placing the TCM side pointed downward on a workbench directly could damage the TCM. If the TCM side is placed pointed downward, place the control valve body on an impact-absorbing material so that the TCM does not contact the workbench directly.
- After removing the coupler component, if the control valve body is placed on the workbench with the TCM side facing upward, the pins securing the solenoids shown in the figure could fall off and become lost.

If the solenoid installation position shown in the figure is changed, it will cause a malfunction. To prevent the pin securing the solenoid from falling, always place the control valve body on an impact-absorbing material with the TCM side facing downward after removing the coupler component.

A : TCM

B : Impact-absorbing material

A : Shift solenoid No.1


B : Shift solenoid No.4

C : TCC control solenoid


D : Shift solenoid No.3

E : Shift solenoid No.2

F : Pressure control solenoid

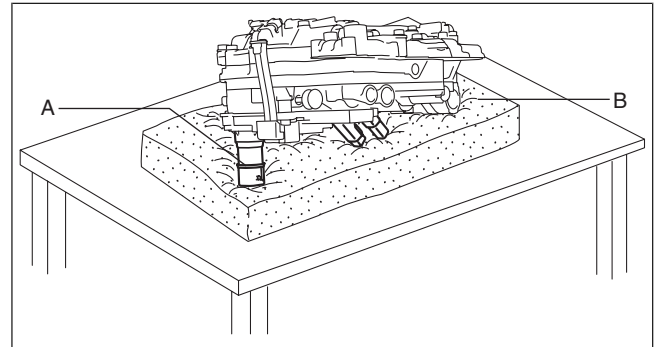


azzjjw00001500

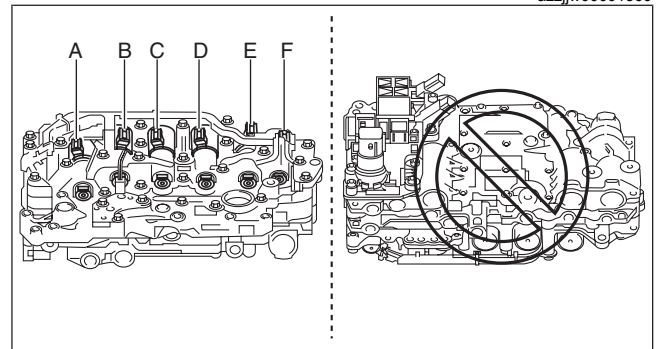

azzjjw00001501

(3) Remove the bolts shown in the figure.

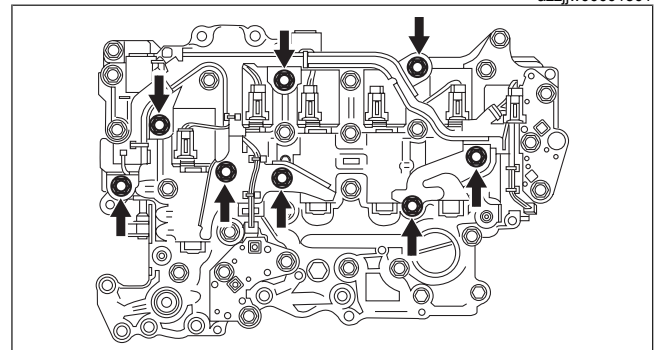

azzjjw00000902


(4) Disconnect the connectors shown in the figure.

### Caution

- If a connector is disconnected, do not pull the wiring harness. Pull the connector at a straight after releasing the lock.

### Caution


- For the connector shown in the figure, pull the connector at a straight after releasing the lock using a precision flathead screwdriver.

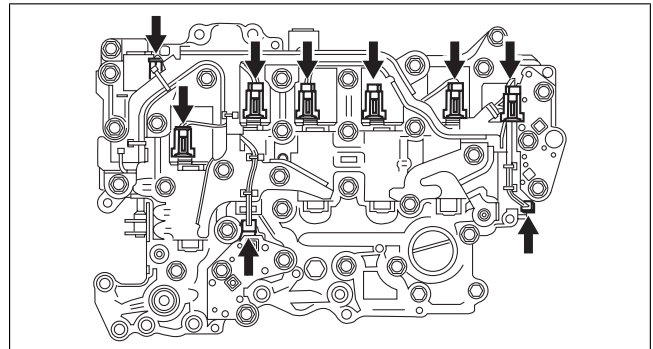

azzjiw00000903


### Caution

- Be careful not to damage the connector using a precision flathead screwdriver.

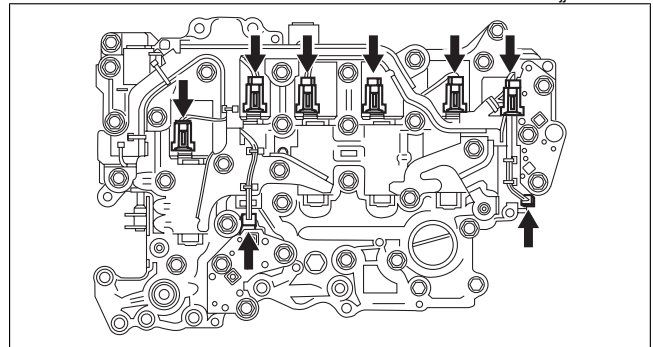

azzjiw00000904


A : Precision flathead screwdriver

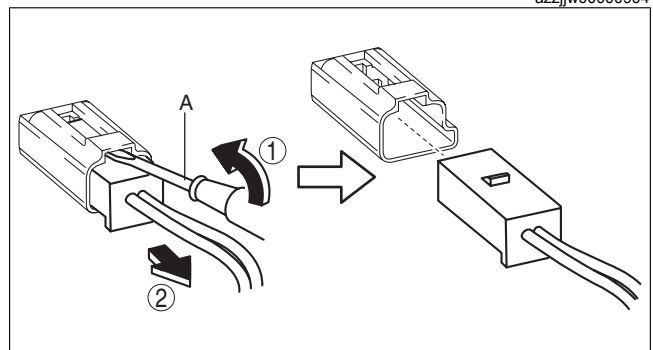

azzjiw00000905


(5) Remove the coupler component.

1	8 bolts
2	Coupler component

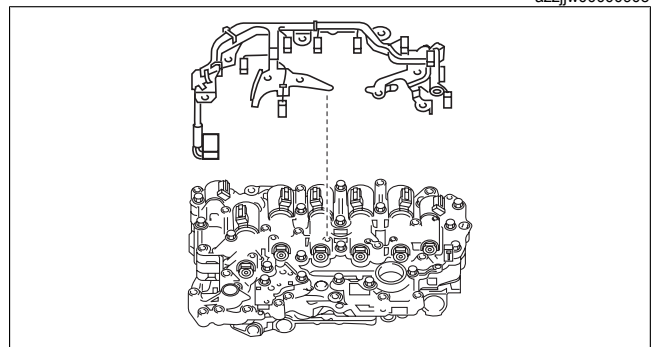


azzjiw00000906

2. Remove the ON/OFF solenoid using the following procedure:

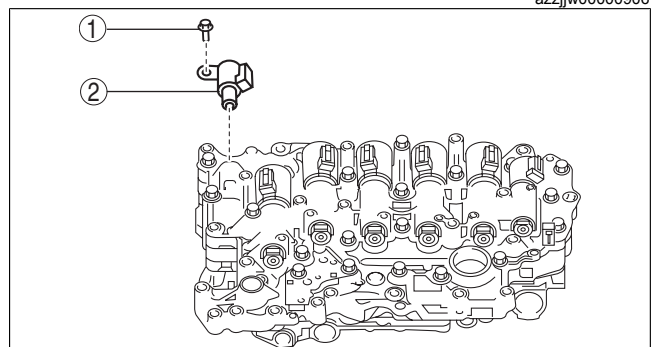

azzjiw00000907


(1) Remove the bolt shown in the figure.

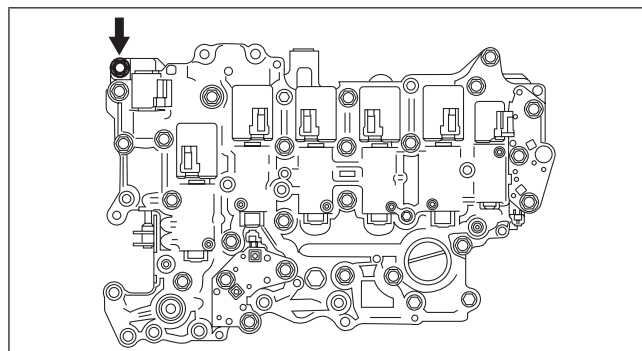

azzjjw00000908


(2) Remove the ON/OFF solenoid.

1	Bolt
2	ON/OFF solenoid

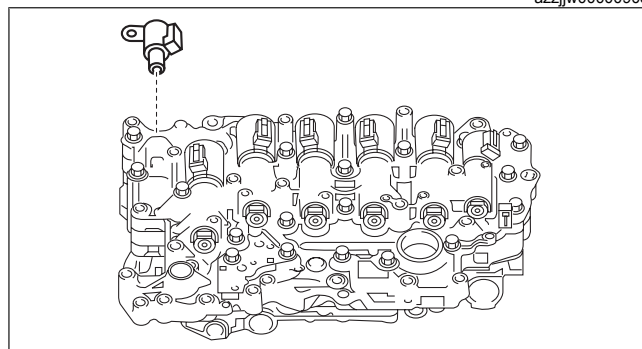


azzjjw00000909

3. Remove oil pressure switch B using the following procedure:

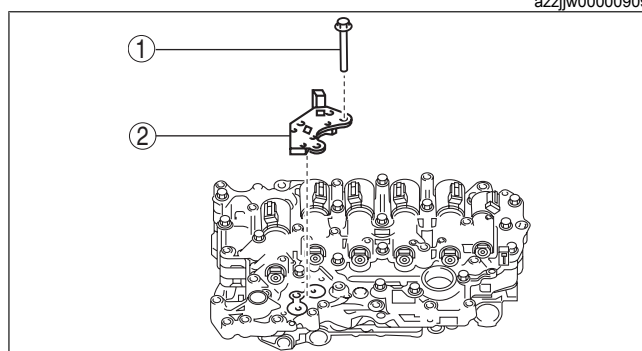

azzjjw00000910


(1) Remove the bolts shown in the figure.

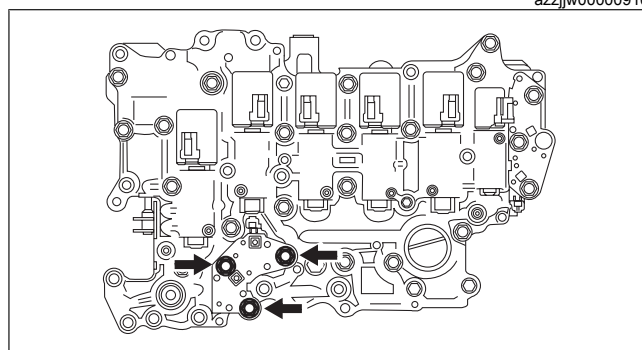

azzjjw00000911


(2) Remove oil pressure switch B.

1	3 bolts
2	Oil pressure switch B

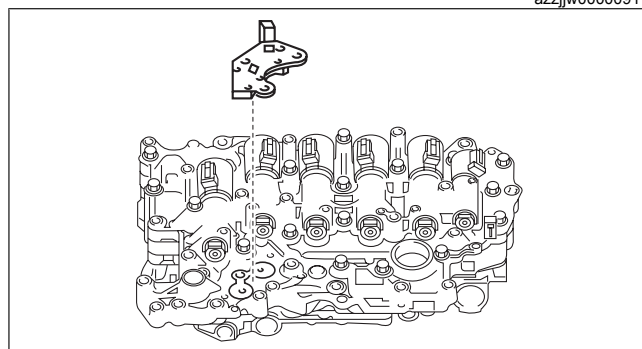


azzjjw00000912

4. Remove oil pressure switch A using the following procedure:

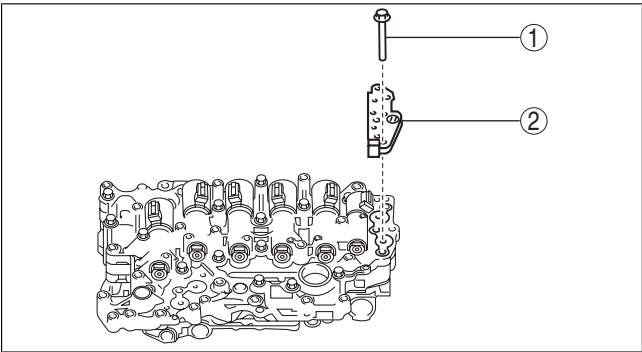


azzjiw00000913

(1) Remove the bolts shown in the figure.

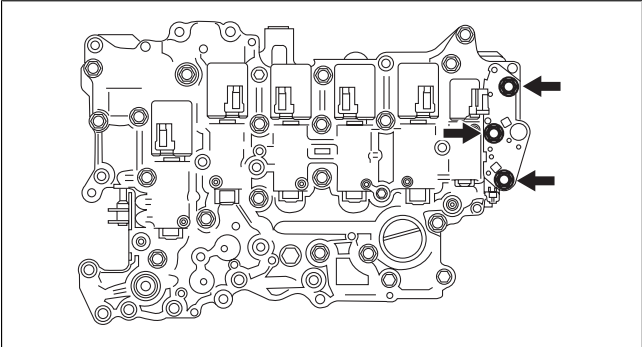

azzjiw00000914


(2) Disengage oil pressure switch A tab.  
A : Tab

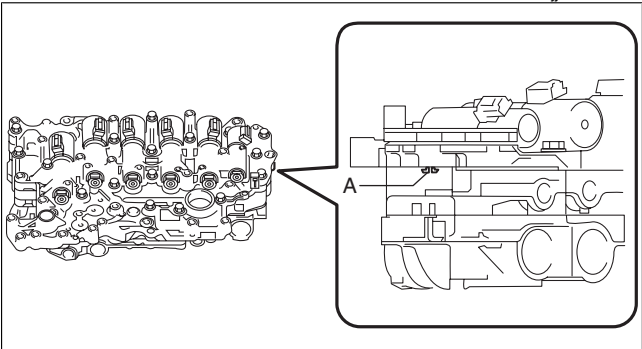

azzjiw00000915

(3) Remove oil pressure switch A.

1	3 bolts
2	Oil pressure switch A

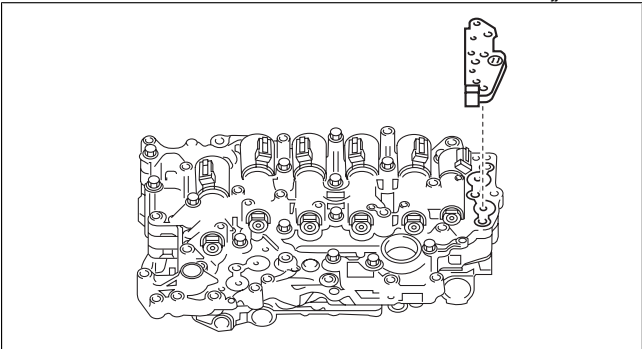

azzjiw00000916