
User's Manual for Trash Classification Line

EOF

Table of Contents	2
Getting Started	3
Voice recognition Manual	4

Getting Started

After the main program of the server is operated, the client program is operated. And After operating the lane, place the plastic waste on top. If you want to change the garbage classification model, you can press the button and ask to change it to the classification model you want to change. Classifiable models are the plastic bottle label classification model and the glass bottle iron lid classification model. When the corresponding garbage is identified on the camera on the lane, the lane is operated so that it can be classified. If you want to stop the lane, you can press the stop lane button in the server GUI. And to get back up and running, you can press the operate lane button.

Voice recognition Manual

- Questions & Answers
- Q1. What is the current classification model?
- A1. check model
- Q2. Tell me all the classification models available
- A2. plastic bottle label classification model and glass bottle iron lid classification model are available.
- Q3. Please change it to a plastic bottle label classification model
- A3. change plastic bottle label classification model
- Q4. Please change it to a glass bottle iron lid classification model
- A4. change glass bottle iron lid classification model
- Q5. Get the lane running
- A5. running lane
- Q6. Stop the lane
- A6. Stop lane