



If install SW3 for switch between 48K timing and 128K timing, need to cut 2 wires as show in the picture. If don't use SW3, default timing is 128K

If install SW4 to switch between PAL and NTSC, need to cut 4 wire as show in the picture. If don't use SW4, default mode is PAL