

AIRPORT DIAGRAM

AL-582 (FAA)

SEATTLE-TACOMA INTL (SEA)  
SEATTLE, WASHINGTON

ATIS  
118.0  
SEATTLE TOWER  
119.9 239.3  
(RWYS 16C-34C, 16L-34R)  
120.95 239.3  
(RWY 16R-34L)  
GND CON  
121.7  
CLNC DEL  
128.0

D


CAUTION: Pilots are cautioned not to mistake Twy T for a landing surface.

JANUARY 2010  
ANNUAL RATE OF CHANGE  
0.2° W

NOTE: Twy A (south of Twy G) restricted to aircraft with wingspan 225' and smaller.

NW-1, 01 MAY 2014 to 29 MAY 2014

NW-1, 01 MAY 2014 to 29 MAY 2014

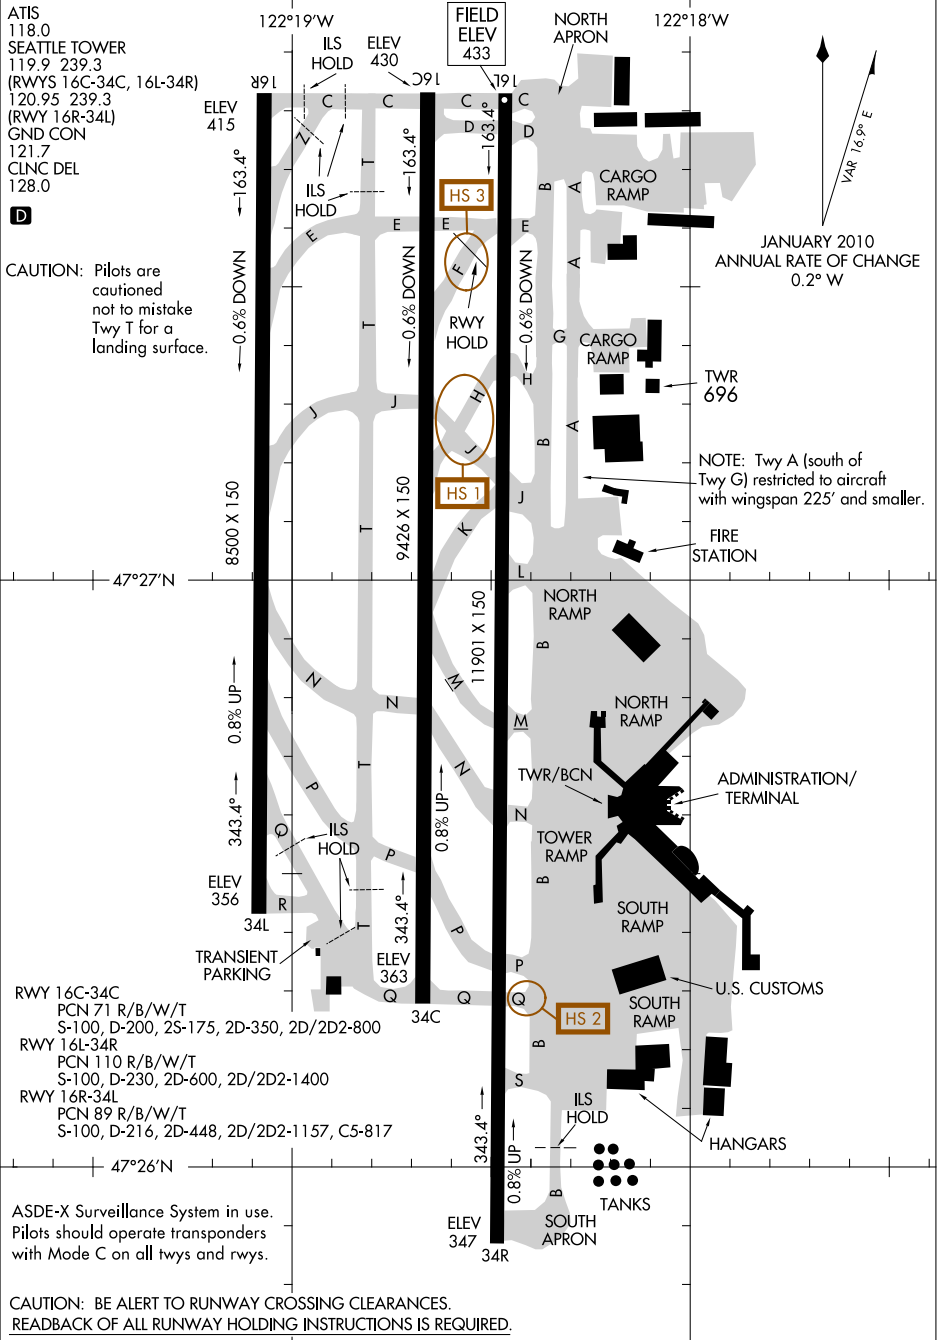

ASDE-X Surveillance System in use.  
Pilots should operate transponders with Mode C on all twys and rwys.

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

AIRPORT DIAGRAM

SEATTLE, WASHINGTON  
SEATTLE-TACOMA INTL (SEA)