



INSTRUCTION MANUAL STEAM IRON




SW-607

Please read these instructions for use and have a good look at the illustration before using the appliance

Main features and structure:

The product has many functions such as temperature regulating, Spraying, Dry Ironing, Steam, Strong steam, Self-Cleaning Function, Anti-Calc Function, Anti-Drip function, Auto-Shut off function etc. and is with characteristics: luxury shape, high heat efficiency, easy using, good ironing result, work saving and time saving, and so on

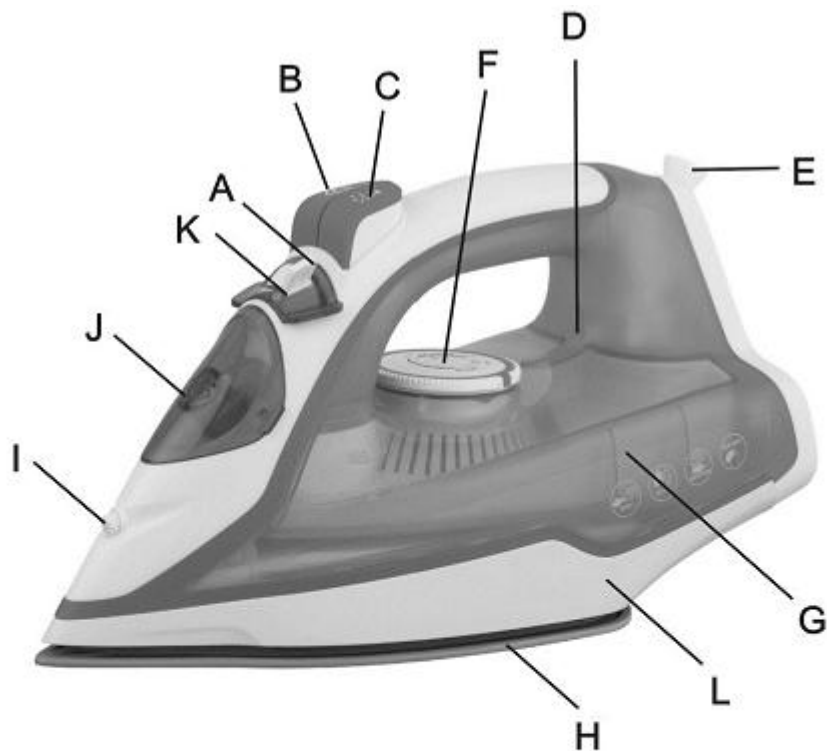

A: Steam selector
B: Shot of steam button
C: Spray button
D: Indicator light
E: Power cord
F: Temperature setting dial

G: Water tank
H: Soleplate
I: Spray
J: Water inlet cover
K: Self clean button
L: Skirt

Read all instructions before using the iron

For house hold use only

1. Use the iron for its intended purpose, for ironing fabrics on board.
2. To protect against burns or injury to persons, do not iron or steam fabrics while being worn on the body.
3. The iron should always be turned 'OFF' before plugging or unplugging from outlet. Never pull cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surface. Allow the iron to cool completely before storing.
5. Always disconnect iron from electrical outlet for filling or emptying water and when not in use.
6. To avoid risk of electric shock, do not operate iron with a damaged cord or if the iron has been dropped or damaged. For repair, take it to an authorized Surya Service center.
7. Close supervision is necessary for this appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
8. Burns can occur from touching hot metal parts, hot water, or steam. Hot water may leak from the iron. Use caution when filling or turning the steam iron upside down.
9. To protect against burns or injury to persons, do not direct steam toward the body when ironing.
10. The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

How to fill with water:

Make sure the iron is turned off and the power cord is unplugged from the electrical outlet.

1. Set the 'Variable' steam knob to the '0' position before filling the iron with water.
2. Open the 'Water Fill' Opening and fill the Tank up to the 'MAX' Line on the tank.
3. The water level can be observed through the transparent part of the tank, when iron placed vertically, in case of water level becomes low, refill the tank, following the procedure described in steps 1 to 3 above.
4. Pour out the remaining water after use.

Note:

Most tap water can be used in this iron. Do not use water additives or substitute water such as linen or scented water in the steam iron, they can stain fabrics or damage the iron. Do not fill the water more than the 'MAX' position.

How to use as dry iron:

1. Position the iron vertically.
2. Plug the iron.
3. Set Steam regulating Knob to MIN position.
4. Preheat the iron until the indicator light goes out.

Now dry ironing can begin.

How to use the spray:

Before using the spray feature, check the fabric label for ironing instructions because some fabrics may be spotted or stained with moisture.

The spray feature is particularly helpful for removing stubborn wrinkles and where extra dampening is needed. The spray may be use with steam or dry ironing. Simply pump the Spray Mist knob when spray is desired.

How to use as steam iron:

Fill the iron as described in ‘ How to fill with water’.

- 1).Position the iron vertically and turn the Temperature Control Dial to the steam position.
- 2).Plug the Cord into the electrical outlet.
- 3).Set the Temperature Control Dial to the steam position. Steam Ironing is only possible when at higher temperature settings indicated with ‘MAX’ mark; otherwise the water will leak from the soleplate.
- 4).Preheat the iron until the indicator light goes out. The light will turn off when the indicated setting reaches the correct temperature.
- 5).Turn the Temperature regulating knob to the required setting for different types of fabric.

Now steam ironing can begin.

How to use the burst of steam:

The burst of steam feature provides additional steam for removing stubborn wrinkles. It may be used with steam or fry ironing.

Press the Power Steam button to release the surge of steam. Pressing the button several times may be necessary to prime the surge system. Wait a few seconds for the steam to penetrate the fabric before pressing the button again for more steam.

Note:

For optimum steam quality, do not apply more than three successive shots after the indicator light goes off.

Anti-Calc Function:

The anti-calc function is a permanet system loacated inside the water tank to eliminate impurities from the water and to reduce the problems connected with limescale build-up.

To prolong the efficiency of this system, follow these steps occasionally:

- 1).Unplug the iron and allow it to cool down.
- 2).Locate the water cup that accompanied the iron. Fill it with water 3/4 full. Add 1 teaspoon of salt to water and fill the water tank with this solution.
- 3).Leave the solution in the water tank for 15 minites, shaking occasionally, and then empty it.
- 4).Fill the water tank a second time with salt water solution, shaking occasionally and empty it again after 15 minites.
- 5).Fill the tank with fresh water to rinse and empty.

Anti-Drip Function:

This system controls the water flow to the soleplate at all times. Below a certain temperature, the anti-drip function cuts off the flow of water and stops the iron from dripping onto the fabric.

After each use:

- 1). Turn the iron off and unplug.
- 2). Empty the iron immediately after using. Do not store the iron with water in it.
- 3). Wait until the iron has cooled before storing it, and always set it on the HELL Rest to protect the soleplate from scratches, corrosion or stains.
- 4). After letting iron cool down completely, store the iron vertically in a safe place.

Outside surface of the iron:

After unplugging and cooling the iron, simply wipe off with a damp cloth and if necessary, use a mild detergent.

NEVER USE ANY HARSH CLEANERS.

Soleplate :

Starch and other residue may be easily removed from the soleplate with a damp cloth.

To avoid scratches the finishing, never use a metallic pad to clean the Soleplate, and never place the iron on a rough surface. If synthetics are ironed at too high temperature not only is the fabric usually ruined, but the iron Soleplate is often covered with the melted remains of the synthetic fabric. The best way to remove synthetic residue from the Soleplate is to heat the iron and to iron over an old cotton rag.

CAUTION :

Never Use steam iron cleaners in the iron, since they may damage the working parts of the iron.

Maintenance: Self Cleaning :

IMPORTANT : Your iron will give the best ironing results and last longest if you apply the Self Cleaning once a month, or more depending upon the usage.

1. Filling the water tank up to half with water.
2. Position the iron on its rear heel.
3. Select the temperature control dial to 'MAX'.
4. Plug the iron.
5. Allow the iron to heat up until the indicator light first goes out.
6. Unplug the iron from the electrical outlet.
7. Keep the iron horizontally over the sink.
8. Press down the 'Self Clean' button all the time. Boiling water and steam will now emit from the holes in the soleplate.
9. Move the iron forwards and backwards while this happens; go on letting steam and water escape until the water tank is virtually empty.
10. Release the 'Self Clean' button.

11. Plug in the iron
12. Set the temperature dial to the 'MAX' position, let the iron heat up again, the remainder of the water inside the steam chamber will now vaporize and leave the iron through the soleplate.
13. During this process of dry steaming it is advised to use it over an old piece of cloth.

Attentions:

1. Please read the owner's manual before using the product.
2. Before using, please check the voltage of the product if it is the same with the one in your home.
3. When using steam ironing, you are recommended to use distilled water.
4. During the iron is electrified, operator must not leave, must not let children touch the iron.
5. When filling water or pouring out remaining water. Please pull out the plug first.
6. After using, turn the temperature regulating knob to "0", pull out the plug, put the iron on the smooth and stable place vertically.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
9. The iron must not be left unattended while it is connected to the supply mains
10. The plug must be removed from the socket-outlet before the water reservoir is filled with water
11. The iron must be used and rested on a stable surface.
12. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
14. Children should be supervised to ensure that they do not play with the appliance.