




MCU

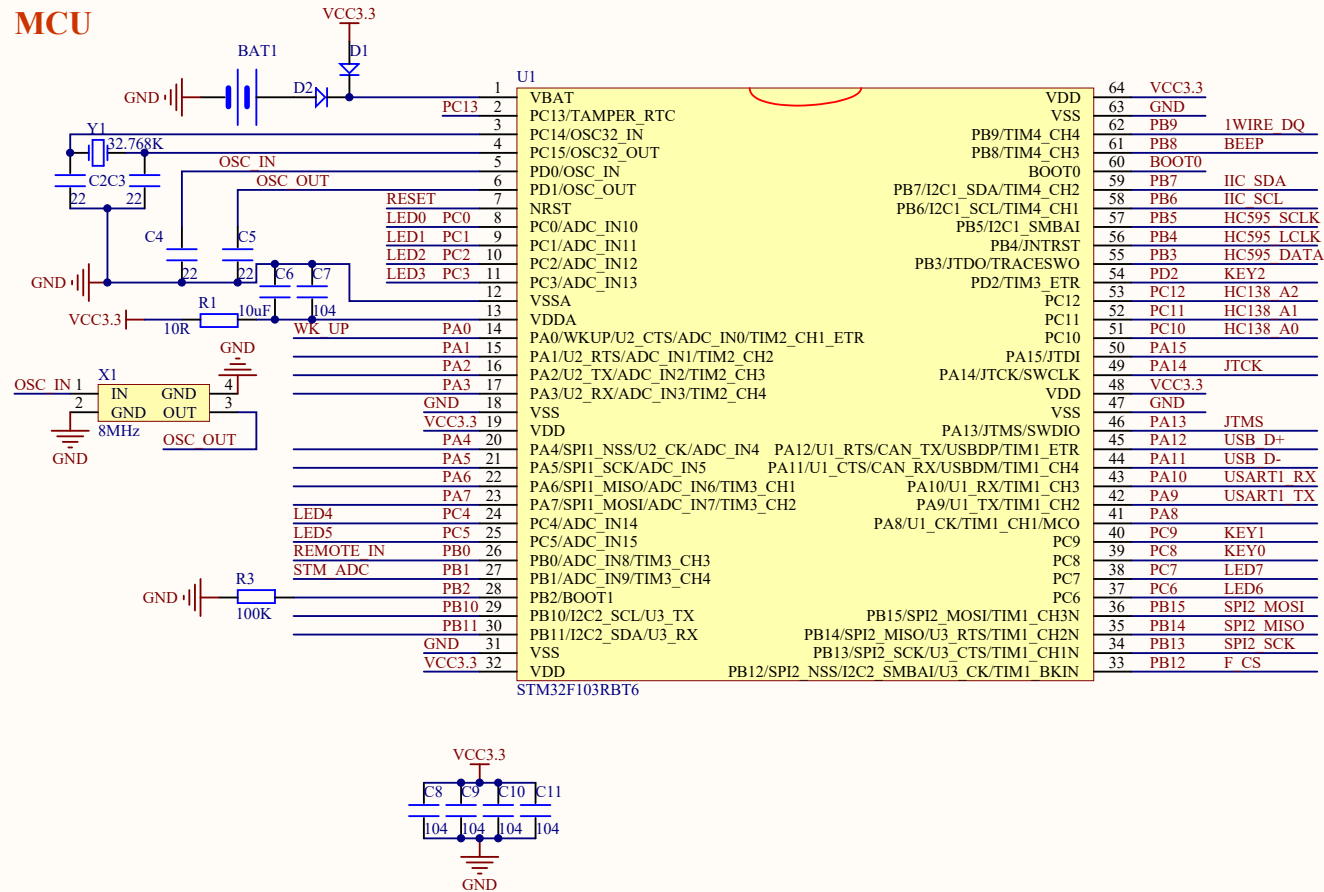


EXTEND I/O

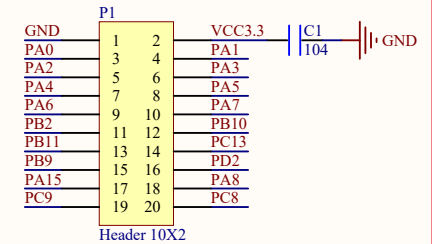

BOOT0

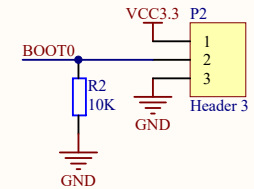

RESET

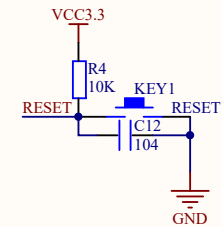

Title:		Cannot open file E:\protel
STM32 EDU CORE		
Author:	Size:	
ATOM@ALIENTEK	SheetSize	
Date:	File:	
2021/4/8	CORE.SchDoc	
Revision:	Version:	
V1.0	Version	

1



2



3



4



B



3




20




C

D


DAP

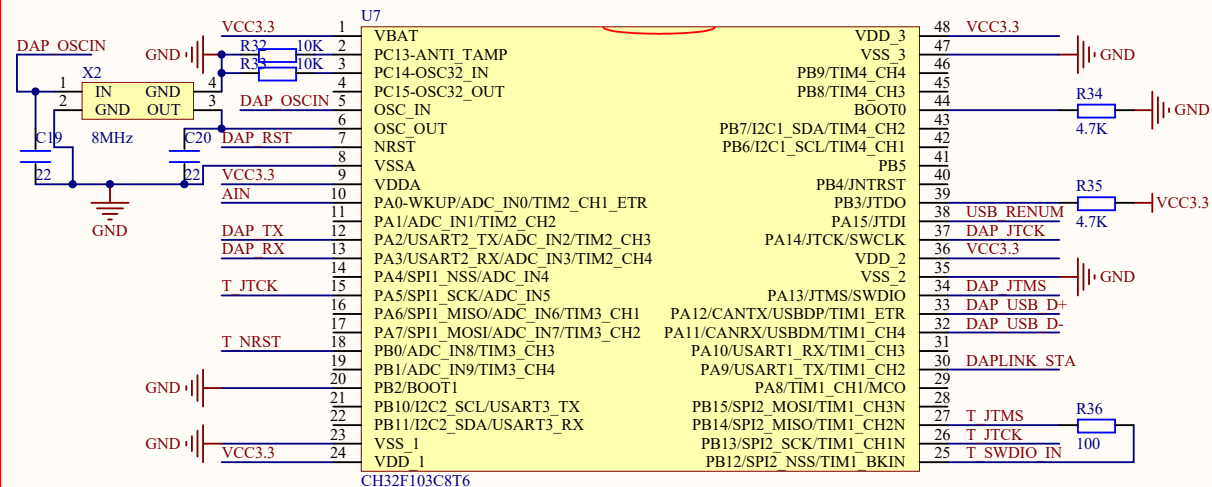


DAP STA LED

 


DAP SWD

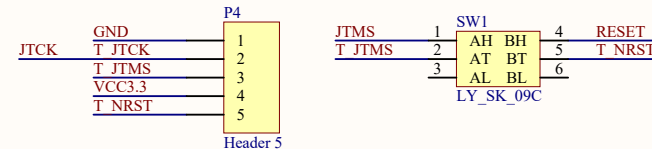


DAP USB

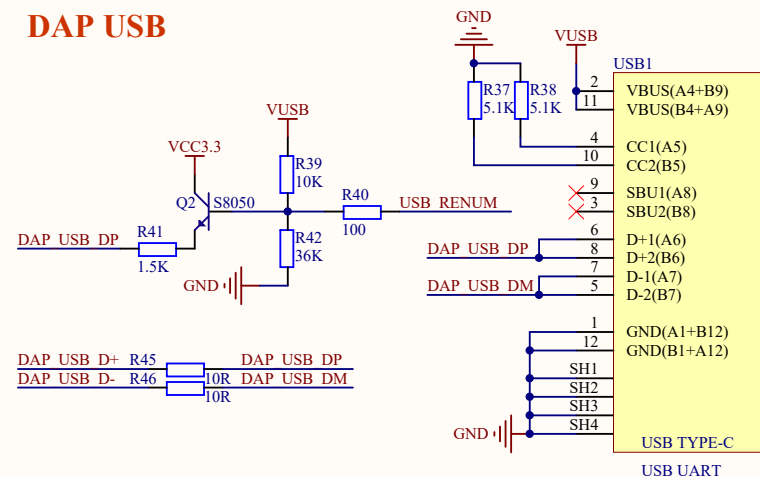


ON BOARD POWER SOURCE

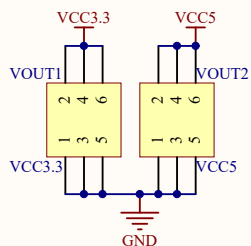

POWER

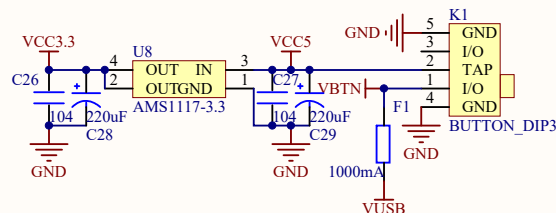

USB

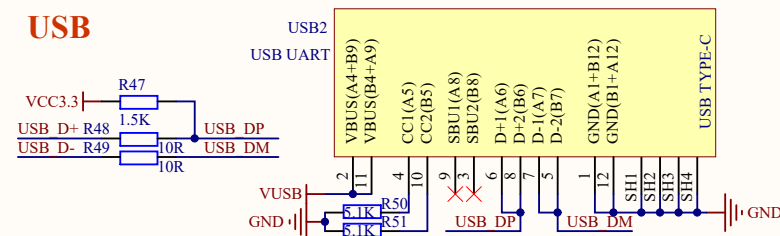

Title:		Cannot open file E:\protel
STM32 EDU JTAG&POWER		
Author:	Size:	
ATOM@ALIENTEK	SheetSize	
Date:	File:	
2021/4/8	JTAG&POWER.SchDoc	
Revision:	Version:	
V1.0	Version:	

