

# CO326: Industrial Networks

## Lab 03 - Serial Port I/O

Deadline- 18/4/2020

---

### Introduction

In Lab 03B, you will be doing the remaining 2 parts of Lab 03. Here, you will be involved in developing an interface circuit using a PIC microcontroller that communicates serially with the field devices and the computer.

---

### Part 04: Designing a serial interfacing device with a PIC microcontroller

This part of the lab will focus on creating an interfacing device that communicates via a serial port of a computer or a controller. We use a PIC microcontroller in this interface design where its internal USART is used to communicate with the serial port of the PC/Controller. The input pins get digital signals from the sensors in the field and output pins give binary numbers to control the actuators in the field.

The lab experiment will be done using “Proteus” with a PIC microcontroller. The microcontroller is to be programmed with “MPLAB X IDE” which is an integrated development environment used for the development of embedded applications on PIC and dsPIC microcontrollers. With Proteus, the compiled program will be loaded onto the microcontroller and the functionality will be tested with a virtual terminal connected to the device.


### Required Tools

To complete this part of the Lab you will need “Proteus” which was used in the previous lab and “MPLAB X IDE” along with some other components associated with “MPLAB”. The list of required new tools is as follows,

1. MPLAB® X IDE v5.35 (<https://www.microchip.com/mplab/mplab-x-ide>)
  - <https://www.microchip.com/mplabx-ide-windows-installer>
2. MPLAB® XC8 Compiler v2.10 (<https://www.microchip.com/mplab/compilers>)
  - <https://www.microchip.com/mplabxc8windows>
3. Microchip Libraries for Applications - MLA (<https://www.microchip.com/mplab/microchip-libraries-for-applications>)
  - [http://ww1.microchip.com/downloads/en/softwarelibrary/mla\\_v2017\\_03\\_06\\_windows\\_installer.exe](http://ww1.microchip.com/downloads/en/softwarelibrary/mla_v2017_03_06_windows_installer.exe)
4. Code Configurator V3.0 on MPLAB X IDE
  - Steps to set up
    - i. Install and run MPLAB IDE
    - ii. Tools -> Plugins -> Available Plugins
    - iii. Select “MPLAB @ Code Configurator” from the available list and click install.


## Steps to Complete the Lab

1. As the first step, you have to create a firmware project in “Proteus” with PIC18F26K20 (choose Create Firmware Project in the last step of New Project Wizard and choose PIC18F26K20 as the controller) and implement the following setup using the PIC18F26K20 microcontroller, 3 LEDs of different colours and a virtual terminal. Note how RX, TX in microcontroller are connected to RX, TX in virtual terminal.

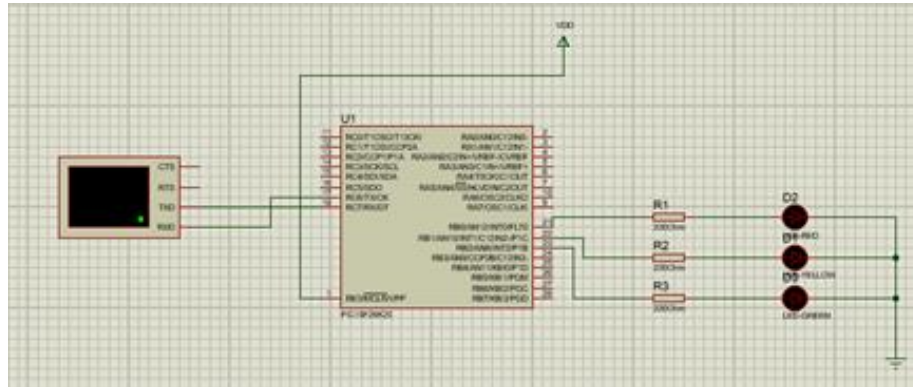

**Figure 1: Screenshot of “Proteus” setup to be implemented**

2. Now, we need to program the PIC18F26K20 microcontroller with “MPLAB X IDE” so that it can serially communicate with an external device (here, the virtual terminal). The steps you need to follow in order to generate a program code that can do this (using MPLAB) are as follows.
  - a. Create a new project in “MPLAB”
    - i. File -> New Project
    - ii. Select “Standalone project” under “MicroChip Embedded” and click Next
    - iii. Now, select the device “PIC18F26K20” from the list and click Next
    - iv. From the “Compiler” window you have to select the “XC8” compiler which we already have installed
    - v. Give a project name and a location and click “Finish” to create the project.
    - vi. Created project will have the folder structure as in Figure 2.

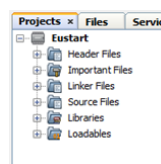


**Figure 2: Screenshot the folder structure created for project**

- b. Once the project is created, we'll be using “Code Configurator” in MPLAB to generate the source code needed to build our serial interface. You can start “Code Configurator” and change the configurations using the steps given below.
  - i. Start the “Code Configurator” as the first step.

- Tools -> Embedded -> MPL @ Code Configurator V2.0
- ii. Then it will open a window asking to save the configuration file (e.g. MyConig.mc3). Save it.

(NOTE: If you find difficulty in identifying the components of the MCC interface, refer to the help documentation of the MCC.)

- iii. Now you will see the MCC user interface within the “MPLAB IDE”. You have to change the following configurations as the initial step.
  - System Clock Settings
    - In the “Composer Area”, under the “Easy steps” you will find the clock settings. You have to change the settings as follows
      - i. System Clock Settings : INTOSC
      - ii. Internal Clock : 8MHz

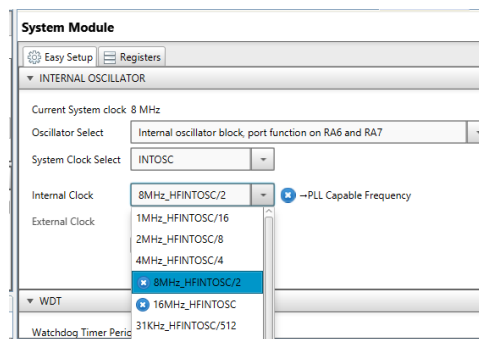

**Figure 3: Screenshot of the System clock settings**

- Register settings
  - Under the “Registers” section in the “Composer Area” do the following changes in respective registers.
    - i. CONFIG1H
      - IESO : Disable the Oscillator Switchover mode
      - FOSC : Internal oscillator block, port function on RA6, RA7
      - FCEMN: Disable the fail safe clock monitor
    - ii. CONFIG3H
      - PBADEN : Set portB pins to digital on reset
- iv. As the next step you have to configure the input output pins which are to connect the LEDs. Use “Pin Manager Grid View Area”. Then follow the steps given below
  - Use the package as “PDIP28”.
  - As you are going to connect 3 LEDs, you will need 3 pins. Click on 3 pins to use them. As they are used as output pins, you have to click on the output part. (e.g. pin 0,1,2 in portB . These 3 ports should be the ports that you used in the “Proteus” design to connect the 3 LEDs )

| Output - MPLAB® Code Configurator |          |           | Notifications [MCC] |   |   | Pin Manager: Grid View x |   |   |    |          |    |    |    |    |    |    |          |    |    |    |    |    |    |    |    |    |   |
|-----------------------------------|----------|-----------|---------------------|---|---|--------------------------|---|---|----|----------|----|----|----|----|----|----|----------|----|----|----|----|----|----|----|----|----|---|
| Package:                          | PDIP28   | Pin No:   | 2                   | 3 | 4 | 5                        | 6 | 7 | 10 | 9        | 21 | 22 | 23 | 24 | 25 | 26 | 27       | 28 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 1 |
|                                   |          |           | Port A ▼            |   |   |                          |   |   |    | Port B ▼ |    |    |    |    |    |    | Port C ▼ |    |    |    |    |    |    | E  |    |    |   |
| Module                            | Function | Direction | 0                   | 1 | 2 | 3                        | 4 | 5 | 6  | 7        | 0  | 1  | 2  | 3  | 4  | 5  | 6        | 7  | 0  | 1  | 2  | 3  | 4  | 5  | 6  | 7  | 3 |
| OSC                               | CLKO     | output    |                     |   |   |                          |   |   |    |          |    |    |    |    |    |    |          |    |    |    |    |    |    |    |    |    |   |
| Pin Module ▼                      | GPIO     | input     | 🔒                   | 🔒 | 🔒 | 🔒                        | 🔒 | 🔒 | 🔒  | 🔒        | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒        | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒 |
|                                   | GPIO     | output    | 🔒                   | 🔒 | 🔒 | 🔒                        | 🔒 | 🔒 | 🔒  | 🔒        | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒        | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒  | 🔒 |
| RESET                             | MCLR     | input     |                     |   |   |                          |   |   |    |          |    |    |    |    |    |    |          |    |    |    |    |    |    |    |    |    | 🔒 |

**Figure 4: Screenshot of the “Pin Manager Grid View Area”**

- Go to the “Pin Module” in “Composer Area”. Now you will see the selected ports in a table. You can change the visible names of the pins in the “custom names” column in the table ( e.g. Red, Yellow, Green)

| Pin Module                |            |          |             |                          |                                     |                                     |                          |    |  |
|---------------------------|------------|----------|-------------|--------------------------|-------------------------------------|-------------------------------------|--------------------------|----|--|
| Easy Setup Registers      |            |          |             |                          |                                     |                                     |                          |    |  |
| Selected Package : PDIP28 |            |          |             |                          |                                     |                                     |                          |    |  |
| Pin Name▲                 | Module     | Function | Custom Name | Start High               | Analog                              | Output                              | WPU                      | OD |  |
| RB0                       | Pin Module | GPIO     | Red         | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |    |  |
| RB1                       | Pin Module | GPIO     | Yellow      | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |    |  |
| RB2                       | Pin Module | GPIO     | Green       | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |    |  |

**Figure 5: Screenshot of the “Pin Module”**


- v. As the next step you have to configure the “EUSART” module.
- Go to the “Available Resources” section in the “Composer Area”.
  - You will find “EUSART” in the Module column. Click on the add (+) button to add the module to your configuration.

| Start Page x Available Resources x Pin Module x Interrupt Module x System Module x |            |                                    |  |  |
|--|------------|------------------------------------|--|--|
| Module   | Type       | Library                            |  |  |
| Available Libraries ▼  |            |                                    |  |  |
| ADC  | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| CCP2   | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| CMP1   | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| CMP2   | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| CVREF  | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| ECCP1  | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| EUSART   | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| EXT_INT  | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| FVR  | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| HLVD   | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| MEMORY   | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| MSSP   | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| TMR0   | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |
| TMR1   | Peripheral | PIC10 / PIC12 / PIC16 / PIC18 MCUs |  |  |

**Figure 6: Screenshot of the “Available Resources”**

- In the “EUSART” section appearing in the “Composer Area”, change the following settings
  - Mode : Asynchronous
  - Baud Rate : 9600
  - Transmission Bits : 8
  - Reception Bits : 8
  - Data Polarity : Non inverted

- Tick the following options
  - i. Enable EUSART
  - ii. Enable Transmit
  - iii. Enable Receive

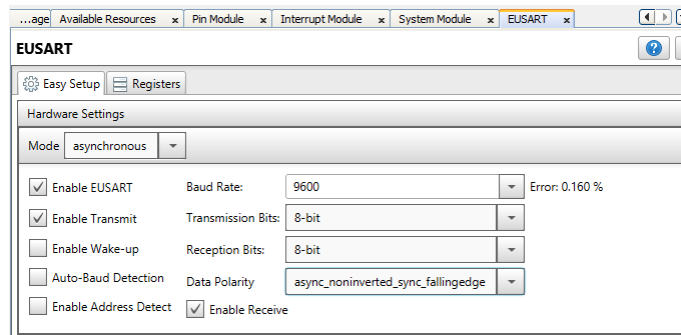

**Figure 7: Screenshot of the “EUSART” settings**

- vi. As the final step of the code configurator you have to generate the code.
  - Go to the “Resource Management MCC” tab in the “Resource Management Area” of the MCC interface and click on the “Generate” button.
  - Then the changes you have done so far to the configurations will be saved to the configuration file which was created initially (e.g. MyConig.mc3).



**Figure 8: Screenshot of the “EUSART” settings**

- Now you can close the MCC by following the same path you opened the MCC.
- c. The next part of the project is that you have to code the three pins such that the LEDs are lighting on user input
  - i. The coding of the pins are done in the “Main.c” file. Open the “Main.c” file in the Editor section. You will find it in, Project -> Source files -> Main.c
  - ii. “MPLab” has already created the template for the main file. What you have to do is, insert the code between the created template such that the LEDs you used are lighted on the user inputs. Follow the instructions below.

You need to send a message through the EUSART module whenever the microcontroller is switched on.

- First create a function called “Send\_String”.


```
void send_string(const char *x)
{
    while (*x)
    {
        EUSART_Write(*x++);
    }
}
```

NOTE: EUSART\_Write(uint8\_t Data) is an inbuilt function which is used to write a single byte of data to EUSART module.

- Then you need to call the function you created to display the message. The message you need to display should be as follows. Second message should display after a 500ms delay to the first one.

Welcome to CO326 Lab3

Press 1 for Red, 2 for Yellow, 3 for Green ...

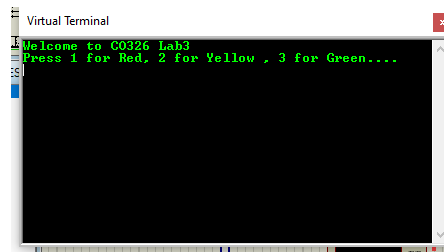

**Figure 9: Screenshot of the virtual terminal in “Proteus” showing how messages should be displayed.**

- As the second step you need to write the code to light up the bulbs on user input. In the “Main.c” template you will find a “while(1){}” code where your application code can go inside. You should code such that 3 numbers light up 3 LEDs respectively and any other key would light off all LEDs. (e.g.: 1 for Red, 2 for Yellow, 3 for Green, any other key - non will light up)

Hints you may need to use in the coding are as follows.

- Use a switch case
- To read the user input, you may use the inbuilt function EUSART\_Read();
  - E.g.: data=EUSART\_Read();  
You need to create a character variable (e.g.: data ) before the main method.
- For lighting up, you can set the pins up using the inbuilt function (these are called “Pin Macros”), “SetHigh” and to light off, use “SetLow”
  - E.g: Red\_SetHigh();
  - E.g: Green\_SetLow();

NOTE: The inbuilt functions or pin macros you need with regard to pins can be found at, Header Files -> MCC Generated Files -> pin\_manager.h

The inbuilt functions for EUSART module can be found at, Header Files -> MCC Generated Files -> eusart.h

- d. After your coding is completed. Now you can compile the project. You need to clean and build the main project.

Production -> Clean and Build Main Project


NOTE: If you find any compilation problem, try changing the C standard from 99 to 90 in the compiler and the linker.

- Right click on the project -> properties -> XC8 Global Options
- Change C standard from c99 to c90 in CX8 Compiler, CX8 Linker.

NOTE: You can refer to the youtube video in the following link for further clarifications.

- <https://youtu.be/jLRTTHI9m94>

3. Now you generated the program code (hex code) for the microcontroller. You have to use this code to program the microcontroller in the “Proteus”.
- a. In “Proteus” switch to “Component Mode” and double click on the PIC18F26K20 device.
- b. Give the path of the hex file to the “Program File” in the “Edit Component” window.

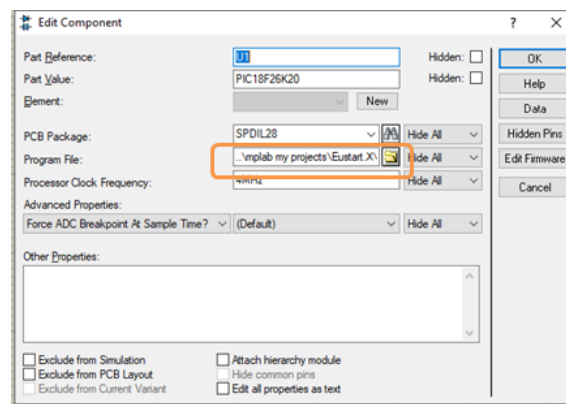


**Figure 10: Screenshot of the “Edit Component” window of PIC18F26K20**

NOTE: You can find the hex file at the following path from the directory you saved your MPLAB project

..\<ProjectName>\dist\default\production\<ProjectName>.X.production.hex

- c. Then you have to run the simulation and test the component by entering user inputs at the virtual terminal.

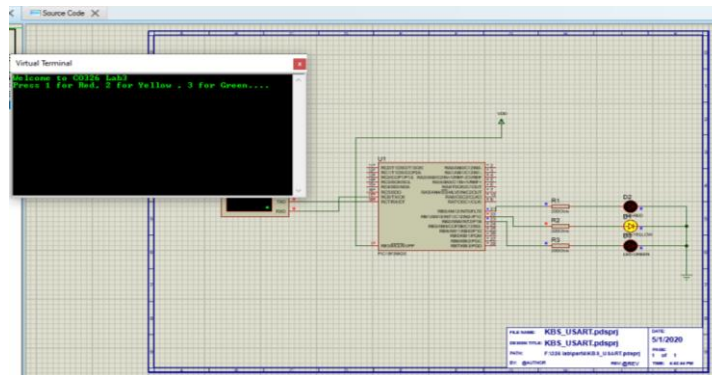

**Figure 11: Screenshot of the “Proteus” with working setup**

## Submission

Take screenshots of

- I. The Proteus setup
- II. The Proteus setup all stages LEDs (lighting, not lighting)

Text Document of

- I. Main.c file of the “MPLAB” project

Create a folder named “Lab03\_Part4” and put the above screenshots and the text file in it and submit it along with the other submissions for Lab03B.

---


## Part 05: Communicating with the serial device designed in “Proteus” using computer

In this part of the lab you will connect a serial port to the “Proteus” setup and that port will be connected to another serial port on the computer. Then with the virtual terminal of “Proteus” and a “Tera Term” terminal opened at the other serial port, you have to transmit data to light up the LEDs. (You will be using the same virtual ports and the virtual connection established in Part 01 for this part as well.)

### Steps to Complete the Lab


1. As the initial step you have to implement the following setup in “Proteus”.



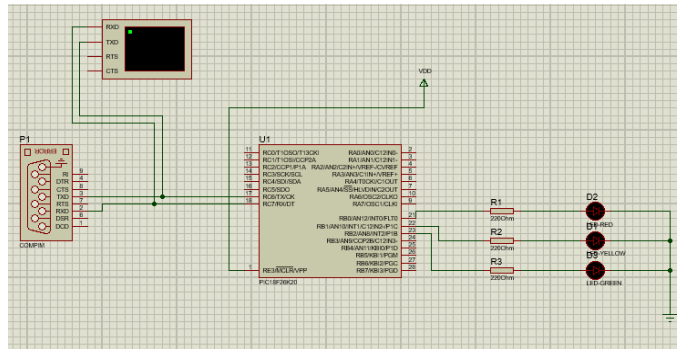

**Figure 12: Screenshot of the “Proteus” setup to be implemented**

2. Now you have to follow the steps done at part 03 and modify part 04 to create a communication between two serial ports to communicate with the microcontroller.

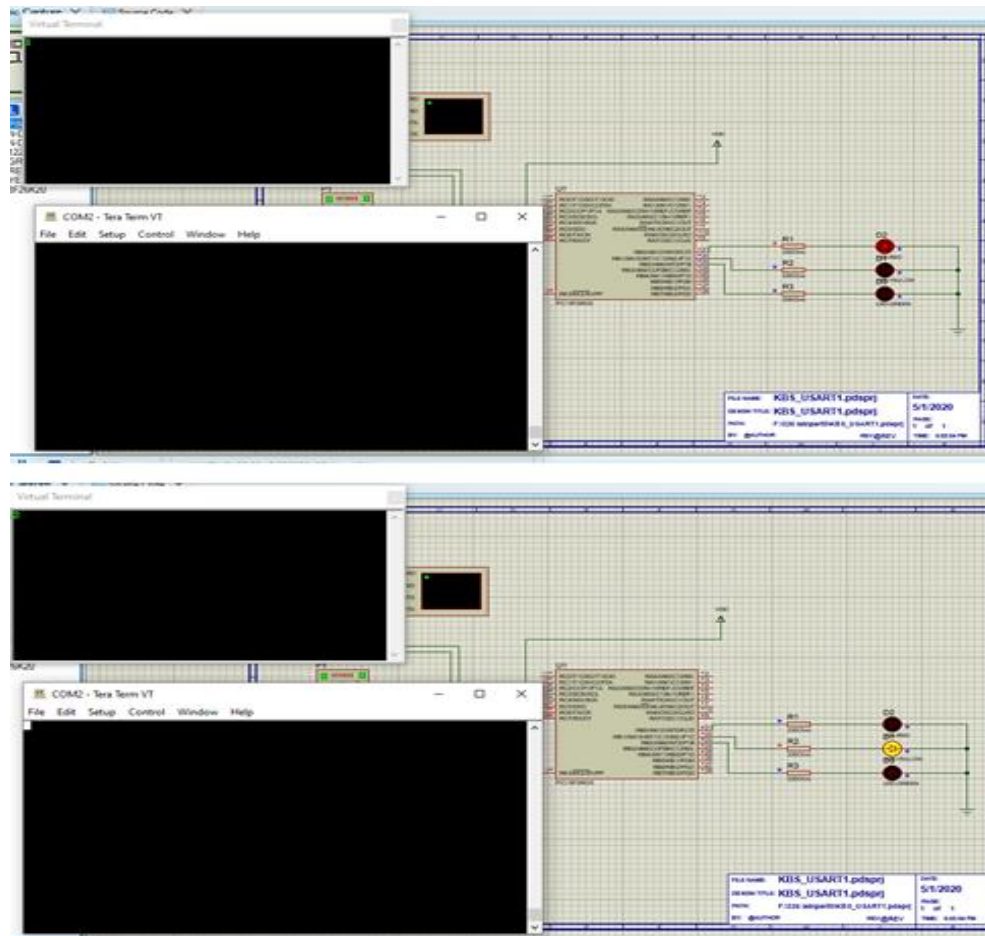

**Figure 13: Screenshot showing the serial port communication in virtual terminal of “Proteus” and “Tera Term” terminal to light up LEDs**

## Submission

Take screenshots of

- I. The Proteus setup
- II. Serial data (text) transfer between two virtual ports performed with Tera Term terminal and virtual terminal in Proteus for all stages of LEDs.

Create a folder named “Lab03\_Part5” and put the above screenshots in it and submit it along with the other submissions for Lab03B.