



# Linear Power Supply User Manual

by Pulse Forge

## Product Overview

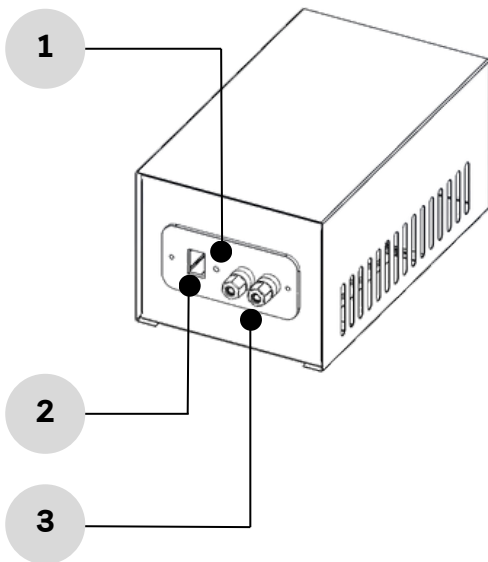

1. LED Indicator
2. Power Switch
3. Output Terminals

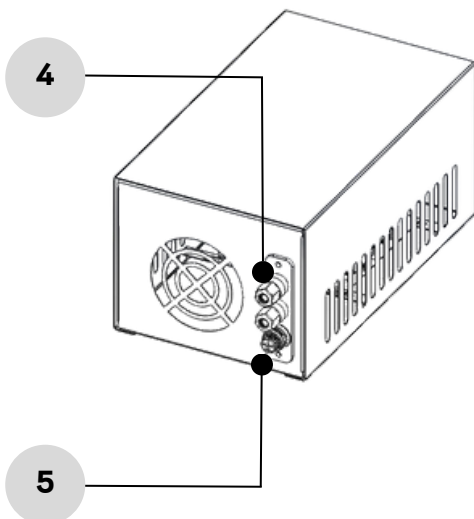

4. Input Terminals
5. Fuse Holder

## Instructions for Use

- Make sure the power switch is switched off.
- Plug in the power supply to power and apply the input voltage (Must be in the 13V-15V range) at the input terminals.
- Connect the load to the output terminals and switch on the power switch.

## LED Indicator

- The LED will be switched on in green when the device is functioning properly.
- The color of the LED turns to red when the fuse has blown and needs replacement.

## Fuse Replacement

- If the LED turns red after the device is switched on, then the fuse should be replaced.
- For this, open the fuse holder cap on the back of the device.
- Replace the fuse and

## Technical Details

- Input Voltage: 13-15 V r.m.s.
- Output Voltage: 10V
- Fuse Specification: 12A
- Max. Current: 8A

# Pulse Forge