



Proton Pack & Neutrons Wand Operation

EEPROM Menus

There are two EEPROM menus available which can be accessed to adjust and save configurations onto either the Proton Pack and Neutrons Wand EEPROM memory. These are the **EEPROM LED Menu** and the **EEPROM Configuration Menu**.


⚠ **NOTICE:** The EEPROM memory has a specified life of 100,000 write/erase cycles. You will generally not reach this limit in your lifetime, but if you did, it can be disabled to bypass it. Refer to the Advanced User Configurations below for more information.

EEPROM LED Menu

The EEPROM LED Menu can be used to configure different LED setups for your Proton Pack. All changes can be saved directly to the Proton Pack EEPROM and will be loaded automatically even if you turn off the power to your devices.

To access the EEPROM LED Menu System, hold down the **Intensify Button** and toggle the right hand **Top Toggle** button 5 times (up and down). You will then hear a beep noise and your bargraph will light up to indicate you are in the EEPROM LED Menu System. The Neutrons Wand barrel and all the Proton Pack LEDs will light up to the default Spectral Custom colours when you enter the EEPROM LED Menu.

📌 **Note:** EEPROM menus can only be reached while both the Neutrons Wand and Proton Pack are powered down.

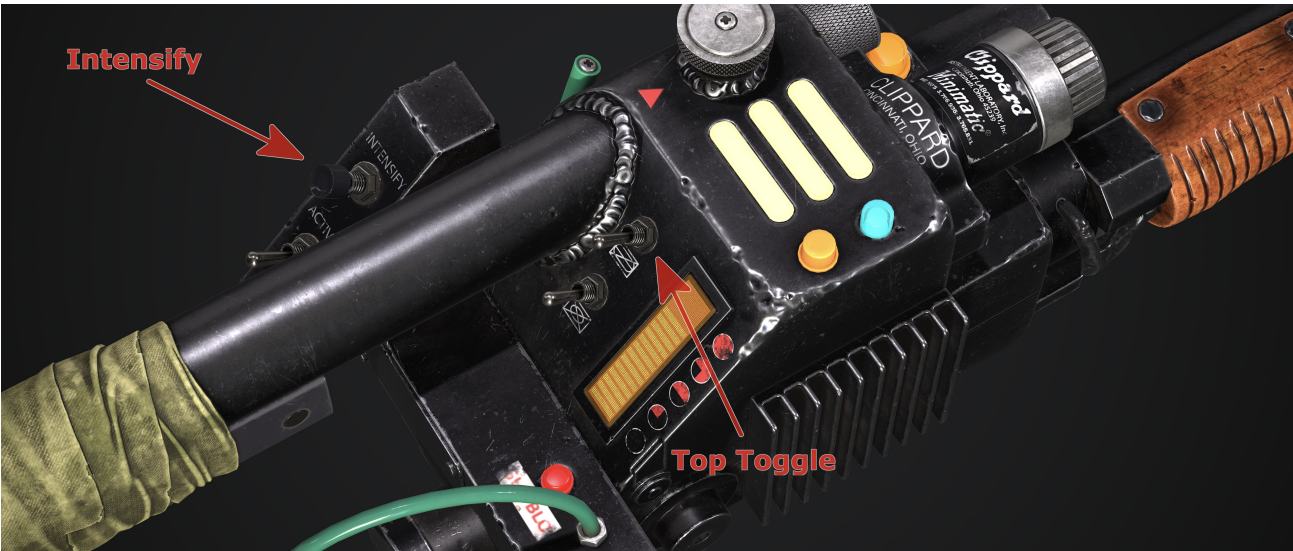

EEPROM LED Menu Level 1

Option	Purpose	Intensify Button	Barrel Wing Button
5	Save or Clear the EEPROM settings	Clear all the LED settings in the Proton Pack EEPROM. The Proton Pack will instead load the software defined defaults the next time you turn the battery power off.	Save the current settings to the Proton Pack EEPROM.
4	Cyclotron LED Count Toggle / Spectral Custom (Barrel) Colour	Toggle between 40, 20 or 12 LEDs for your Cyclotron.	(Barrel Wing Button + Top Dial) Changes the colour hue of the Neutrons Wand barrel for the Spectral Custom mode.
3	Power Cell LED Count Toggle / Spectral Custom (Power Cell) Colour	Toggle between 15 or 13 LEDs for your Power Cell.	(Barrel Wing Button + Top Dial) Changes the colour hue of the Power Cell for the Spectral Custom mode.
2	Inner Cyclotron LED Count Toggle / Spectral Custom (Cyclotron) Colour	Toggle Between 35, 24, 23 or 12 LEDs for your Inner Cyclotron Cake.	(Barrel Wing Button + Top Dial) Changes the colour hue of the Cyclotron Lid for the Spectral Custom mode.
1	Inner Cyclotron GRB Toggle / Spectral Custom (Inner Cyclotron) Colour	Toggle your Inner Cyclotron from RGB or GRB LEDs.	(Barrel Wing Button + Top Dial) Changes the colour hue of the Inner Cyclotron (Cake) for the Spectral Custom mode.

 
EEPROM Configuration Menu

The EEPROM Configuration Menu can be used to save certain behaviours of your Neutrona Wand and Proton Pack as the standard settings.


To access the EEPROM Configuration Menu, hold down the **Intensify Button** and toggle the right hand **Bottom Toggle** button 5 times (up and down). You will then hear a beep noise and your bargraph will light up to indicate you are in the EEPROM Configuration Menu System.

To access the EEPROM Configuration menus, use the **Top Dial** on the top of the wand. When you reach the a new menu level, the Slo-blo LED and other lights on the Neutrona Wand will illuminate to indicate these menu levels, along with audio cues from the system.

```
Menu Level 1 -> No additional wand lights will be illuminated
Menu Level 2 -> Slo-Blo illuminated
Menu Level 3 -> Slo-Blo and vent light illuminated
Menu Level 4 -> Slo-Blo, vent light, and top gun box light illuminated
Menu Level 5 -> Slo-Blo; vent light, top gun box light, and front gun box light illuminated
```

 **Note:** EEPROM menus can only be reached while both the Neutrona Wand and Proton Pack are powered down.

Please note whatever settings you have temporarily changed in the regular menus and sub menus will be applied automatically and saved if you exit the EEPROM menu by saving the settings.

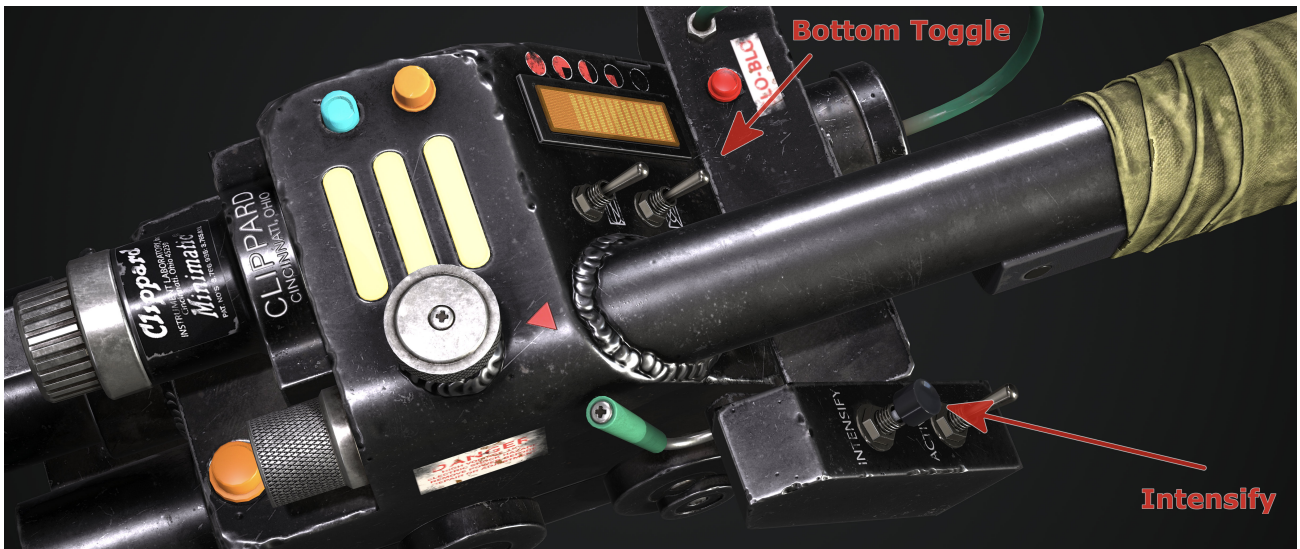



EEPROM Configuration Menu Level 1

Option	Purpose	Intensify Button	Barrel Wing Button
5	Save or Clear the EEPROM settings	Clear all the configuration only settings in the Proton Pack and Neutrons Wand EEPROM. <i>The Proton Pack and Neutrons Wand will instead load the software defined defaults the next time the battery power is turn back on.</i>	Save the current settings to the Proton Pack and Neutrons Wand EEPROM.
4	Firing Mode Selection / Spectral Modes	Cycle through VG/CTS operation modes to set as your default. ³	Enable/Disable the Spectral Modes.
3	Overheating / Smoke	Enable/Disable Overheating Ability	Enable/Disable Smoke Effects
2	Cyclotron LED Control	Cyclotron rotation direction. Clockwise or counter clockwise.	Enable/Disable the Cyclotron Lid Ring Simulation in Afterlife (2021) mode. ONLY applies to use of the 12 or 20 LED hardware options.
1	Sound Effects	Enable/Disable the proton stream impact sound effects.	Enable/Disable extra Neutrons Wand sound effects to be played by the Proton Pack.

³ Choose between Video Game and Cross the Streams (CTS) operation modes. Cross the Streams modes is like what you see in the films.

EEPROM Configuration Menu Level 2

Option	Purpose	Intensify Button	Barrel Wing Button
5	Quick Vent / Wand Boot Errors	<p>Enable/Disable the Quick Venting feature. When enabled, you can manually vent your Proton Pack by pressing the Intensify button while the top right toggle switch is switched down.</p> <p> Super Hero mode only</p>	<p>Enable to disable the Wand boot error mode. When enabled, if you turn on the Neutrons Wand while the top right toggle is up and activated, the Neutrons Wand enters an error mode and remains locked out until the switches are all turned off.</p> <p> Super Hero mode only</p>
4	Auto Vent Light Intensity / Barrel LED Count	Enable/Disable the Auto Vent Light Intensity. When enabled, the vent light will adjust the intensity based on the power level of the wand.	Set the barrel led count between 5 (default), 48 and 60.
3	Beep Loop / VGA Colour Mode Toggles	Enable/Disable the looping beep sound effect in Afterlife Mode.	Cycle through VG color modes. ⁵
2	Overheat Lights	Enable/Disable the N-Filter LEDs from strobing during overheating.	Enable/Disable the Proton Pack lights to turn off during overheating. When disabled, after ramping down to a slower pace, the lights stay on.
1	Default Year Mode / Overheat Sync to Fan	Set your default year mode between 1984/1989/Afterlife/Default. When set, the system will ignore the year mode toggle switch during bootup. However the toggle switch can still be used while the Proton Pack is on. If set to Default, the system picks the year mode based on the position of the year mode toggle switch in the Proton Pack.	Enable/Disable the overheat sync to fan. When enabled, the fan connections in the Proton Pack will only activate at the same time as the smoke connections. When disabled, the fan connections activate slightly after the smoke connections which allows some build of smoke before the fans activate.

⁵ Enables/disables the video game colour modes for the Proton Pack's Power Cell and Cyclotron lights. This only affects the pack when in Video Game mode, not for CTS modes, and offers the following states:

- Disable all the video game colours (Power Cell remains blue, Cyclotron remains red).
- Enable only the Power Cell LEDs to change colors (requires RGB Power Cell such as that offered by Frutto Technology).
- Enable only the Cyclotron LEDs to change colors (requires RGB replacement such as a Neopixel ring).

- Enable both the Power Cell and Cyclotron to use video game colours.

EEPROM Configuration Menu Level 3

Option	Purpose	Intensify Button	Barrel Wing Button
5	System Default Volume / Neutrons Wand Year Mode	Hold the Intensify Button down while turning the top dial to adjust and set the default volume for the system. (Uses audio beeps for indication of volume.)	Set the year mode your Neutrons Wand operates in. Options are: 1984/1989/Afterlife and System Default. When set to System Default, the Neutrons Wand matches the same year mode as that the Proton Pack is in.
4	Invert Bargraph / Bargraph Overheat Blinking	Toggles inverting of the bargraph in the Neutrons Wand (depending on installation orientation).	Enable/Disable the bargraph to blink on and off during overheat. When disabled, the bargraph will ramp down and turn off during the overheat sequence before ramping back up when overheating has finished.
3	Bargraph Animations / Bargraph Firing Animations	Toggle between animation modes as default for the idle bargraph: Super Hero , Bargraph Original , or System Default . System Default chooses the default animation based on the year mode and system mode.	Toggle between animation modes as default for the bargraph when firing: Super Hero , Bargraph Original , or System Default . System Default chooses the default animation based on the year mode and system mode.
2	Demo Light Mode / Cyclotron 3 LED Toggle	Enable/Disable the Demo Light mode. When enabled, the Proton Pack and Neutrons Wand will automatically boot up as soon as the system has power.	Toggle between 1 LED or 3 LEDs in each cyclotron lens in 1984/1989 year mode.
1	System Mode / CTS Override	Toggle between the available system operation modes: Super Hero or Mode Original	Toggle between options for default CTS mode: 1984 , 1989 , Afterlife , or System Default . System Default automatically chooses the CTS mode based on the current year mode of your system.

EEPROM Configuration Menu Level 4

Adjust the vent smoke duration during overheat events and overheat start delay for each wand power level.

Option	Purpose	Intensify Button + Top Dial	Barrel Wing Button + Top Dial
5	Power Level 5	Smoke vent duration during overheat Range: 2 to 60 seconds Default: 6 seconds	Overheat start delay Range: 2 to 60 seconds Default: 12 seconds

4	Power Level 4	Smoke vent duration during overheat Range: 2 to 60 seconds Default: 5 seconds	Overheat start delay Range: 2 to 60 seconds Default: 15 seconds
3	Power Level 3	Smoke vent duration during overheat Range: 2 to 60 seconds Default: 4 seconds	Overheat start delay Range: 2 to 60 seconds Default: 20 seconds
2	Power Level 2	Smoke vent duration during overheat Range: 2 to 60 seconds Default: 3 seconds	Overheat start delay Range: 2 to 60 seconds Default: 30 seconds
1	Power Level 1	Smoke vent duration during overheat Range: 2 to 60 seconds Default: 2 seconds	Overheat start delay Range: 2 to 60 seconds Default: 60 seconds

EEPROM Configuration Menu Level 5

Toggles overheating ability and continuous smoke effects during firing for each wand power level. The continuous smoke effects will randomly activate for very short bursts while continuously firing for long periods.

⚠ WARNING

Running your smoke devices for long periods can potentially damage them, and/or reduce battery life. Adjust these settings with caution and use at your own risk!

Option	Purpose	Intensify Button	Barrel Wing Button
5	Power Level 5	Enable/Disable Overheating Default: enabled	Enable/Disable continuous firing smoke effects Default: enabled
4	Power Level 4	Enable/Disable Overheating Default: disabled	Enable/Disable continuous firing smoke effects Default: enabled
3	Power Level 3	Enable/Disable Overheating Default: disabled	Enable/Disable continuous firing smoke effects Default: enabled
2	Power Level 2	Enable/Disable Overheating Default: disabled	Enable/Disable continuous firing smoke effects Default: enabled
1	Power Level 1	Enable/Disable Overheating Default: disabled	Enable/Disable continuous firing smoke effects Default: enabled

Advanced User Configurations

To modify defaults within the software rather than the EEPROM menus, please see the [Advanced Configuration](#) guide.