

Electronic Christmas Tree - User guide

Start using the item

Please gently remove the insulator from the battery holder and the device is ready to use.

Turning on / off

To turn on the device, shortly touch the top ornament. Light running upwards indicates that the device is turned on.

To turn off the device, touch the top ornament for approximately 1s. A blue LED in the lower right corner blinks 6 times, indicating the device will turn off.



Changing battery

The device should operate continuously for 30 hours with a single coin-cell battery. When changing battery please pay particular attention for its polarity. The „+” sign on the battery holder and the one on the new coin cell battery must match to prevent damage.

Technical Info

Battery type: **CR2032** or CR2016 / CR2025

Operating Voltage: 2.7V – 5.5V

Operating Temperature: -40 – +125°C

David Sipos

☎ +36 304379434, +44 7393154926

@ s.dvid@hotmail.com

