


Automation Manual

ENERGIS 8 Channel Managed PDU

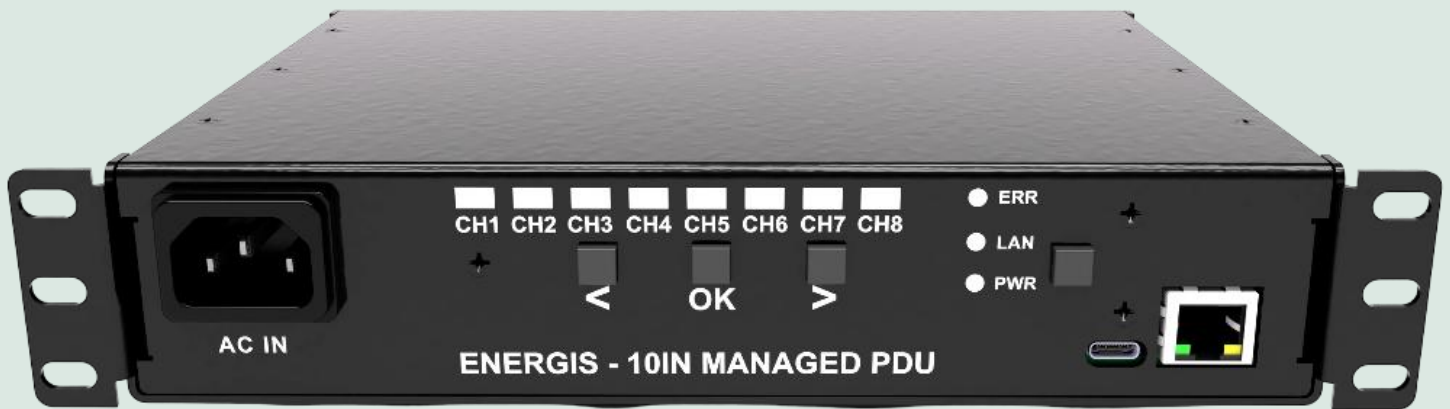

Content

1. Overview.....	4
1.1 Installation and Setup	4
1.1.1 Electrical and Network Connections	4
1.1.2 First Boot	4
2. Local Operation.....	5
2.1 Front Panel Buttons and LEDs	5
2.2 Button functions:	5
3. Command-Line Interface - Serial	6
3.1 Command list	6
4. HTTP API.....	7
4.1 GET /api/status	7
4.2 POST /api/control	8
4.3 GET /api/settings	8
4.4 POST /api/settings	9
5. HTML pages.....	10
5.1 GET /control.html	10
5.2 GET /settings.html	10
5.3 GET /help.html, /user_manual.html, /programming_manual.html ...	11
6. OpenMetrics / Prometheus endpoint.....	12
6.1 Overview	12
6.2 Configuration - Accessing the Endpoint	12
6.3 Available Metrics	13
6.3.1 System	13
6.3.2 Per-Channel	14
6.4 Prometheus Integration	15
6.5 Performance	16
6.6 Implementation Notes	16
7. SNMP interface.....	17
7.1 Submodules	17
7.2 Outlet control (read/write)	18
7.2.1 Per-channel state (INTEGER):	18
7.2.2 Group controls (INTEGER):	18

7.3 Power and energy telemetry	19
7.3.1 Per-channel telemetry:	19
7.4 Rails and temperature	19
7.5 Network configuration mirror	20
7.6 Failure modes and things worth knowing	20
7.7 Summary	20
8. Support	21

1. Overview

The ENERGIS managed PDU is a rack-mount power distribution unit that allows you to switch eight AC outlets individually and monitor voltage, current, power and uptime for each channel. The unit is built around a RP2040 microcontroller running FreeRTOS and communicates over Ethernet and serial. All relays are electromechanical and each channel is designed to handle 16A. HLW8032 power-metering chips measure the AC lines, individually per channel.

The PDU can be controlled locally via the front panel, remotely via a built-in HTTP server and SNMP agent, or through a USB serial console. This manual explains how to connect the unit, configure it and use these interfaces to integrate the PDU into any automation system.

1.1 Installation and Setup

1.1.1 Electrical and Network Connections

1. **Mounting and power** – Install the PDU into a 10-inch equipment rack. Connect the supplied AC power cord to the mains and attach your load devices to the eight IEC outlets. Each relay is rated 16A. The PDU inlet is 16A max, so the sum of all channels must not exceed 16A
2. **Networking** – Plug an Ethernet cable into the RJ-45 jack. By default, the PDU is programmed to use static IP Address, which can be found on the bottom of the device. The network settings can be read and changed via the web interface or the serial console (see below).
3. **USB/serial** – The PDU exposes its console over USB-CDC on the USB-C port. The serial interface operates at **115 200 baud, 8-N-1**. Connect the USB-C port to a host computer and open a terminal program (PuTTY, screen, minicom, etc.); the PDU enumerates as a CDC device without drivers. Note: *The internal HLW8032 power meter uses UART0 at 4 800 baud and it is NOT exposed externally.*

1.1.2 First Boot

On first boot the PDU performs a self-test, initializes the display and relays and loads configuration from its internal EEPROM. The internal power monitor performs a self-check; this makes the Power LED turns on. The eight outlet LEDs will play a pattern and the network LED will come on once a link is detected.

2. Local Operation

2.1 Front Panel Buttons and LEDs

When the device is powered, any interaction with any buttons (Left, Set, Right) will start a 10s selection window, in which the currently selected channel is shown by a blinking orange light. After 10 seconds of inactivity the selection times out and no channel is highlighted.

Each channel has two indicators: a green LED showing whether the channel is on or off. An orange LED showing which channel is currently selected. Within the selection window, the user is able to turn on and off any channel.

Status LEDs:

- **PWR** LED indicates that the PDU is energized, and the internal power is within the expected range.
- **ETH** LED lights when a link is established on the Ethernet port.
- **ERR** LED lights if an internal error is detected; clear it with a long press of the **Set** button.

2.2 Button functions:

- **Left / Right:** Within the selection window, use these buttons to move the selection highlight across the eight channel status LEDs. The highlight wraps around after channel 8.
- **Set:**
 - Outside the selection window, a short press on any button only opens the 10 s window (no step, no toggle).
 - Inside the selection window, a short-press toggles the currently selected channel on/off.
 - Anytime, a long press (>1 s) clears the fault LED.
- **PWR:**
 - Long press (>2s) when the device is powered initiates the low power sleep mode. The PWR LED blinks every second. Short press in active mode has no effect.
 - Short press, when the device is in sleep mode wakes up the device and puts it back in active mode. Long press in sleep mode has no effect.

3. Command-Line Interface - Serial

A comprehensive serial console is available over the USB-C port (USB-CDC). After connecting with a terminal program at 115200 baud basic system health information can be seen, emitted every 60 seconds. Type help to list commands.

3.1 Command list

Command	Description	Example
GENERAL COMMANDS		
HELP	Show available commands and syntax	
SYSINFO	Show system information	
GET_TEMP	Show MCU temperature	
REBOOT	Reboot the PDU. Changes to network settings take effect after reboot.	
BOOTSEL	Put the MCU into boot mode	
CLR_ERR	Clears all errors	
RFS	Restore Factory Settings	
OUTPUT CONTROL AND MEASUREMENT		
SET_CH <ch> <STATE>	Set channel (1-8) to (0 1 ON OFF ALL)	SET_CH 1 1
GET_CH <ch>	Read current state of channel <ch> (1-8 ALL)	GET_CH 3
READ_HLW8032	Read power data for all channels	
READ_HLW8032 <ch>	Read power data for (1-8)	READ_HLW8032 2
CALIBRATE <ch> <V> <I>	Start single (1-8) calibration on given voltage and current	CALIBRATE 2 0 0
AUTO_CAL_ZERO	Zero-calibrate all channels.	
AUTO_CAL_V <voltage>	Voltage-calibrate all channels.	AUTO_CAL_V 230
SHOW_CALIB <ch>	Show calibration data (1-8 ALL)	SHOW_CALIB 5
NETWORK SETTINGS		
NETINFO	Display the current IP, subnet mask, gateway and DNS addresses.	
SET_IP <ip>	Set a static IP address. Requires reboot.	SET_IP 10.10.0.67
SET_SN <mask>	Set the subnet mask.	SET_SN 255.255.255.0
SET_GW <gw>	Set the default gateway.	SET_GW 192.168.1.1
SET_DNS <dns>	Set the DNS server.	SET_DNS 8.8.8.8
CONFIG_NETWORK <ip\$sn\$gw\$dns>	Configure all network settings.	CONFIG_NETWORK 254.176.0.2\$255.255.255.0\$254.176.0.1\$1.1.1.1

4. HTTP API

The embedded HTTP server listens on port 80 and exposes JSON endpoints under `/api/...` plus a few HTML pages (`*.html`) for browsers.

Notes

All API responses use *HTTP/1.1* and include *Connection: close*.
Status codes:

- `GET /api/status` → *200 OK* (JSON body)
- `GET /api/settings` → *200 OK* (JSON body)
- `POST /api/control` → *200 OK* (text body *OK*)
- `POST /api/settings` → *204 No Content* (device reboots).

4.1 GET /api/status

Returns a JSON object with:

- **channels**: array of 8 per-channel objects
{`voltage`, `current`, `uptime`, `power`, `state`}
- **internalTemperature**: die temperature
- **temperatureUnit**: "°C" (or user-selected unit)
- **systemStatus**: overall status string

Example:

```
curl.exe -s http://<pdu-ip>/api/status
```

Response:

```
{
  "channels": [
    { "voltage": 0, "current": 0, "uptime": 0, "power": 0, "state": false },
    { "voltage": 0, "current": 0, "uptime": 0, "power": 0, "state": false },
    { "voltage": 0, "current": 0, "uptime": 0, "power": 0, "state": false },
    { "voltage": 0, "current": 0, "uptime": 0, "power": 0, "state": false },
    { "voltage": 0, "current": 0, "uptime": 0, "power": 0, "state": false },
    { "voltage": 0, "current": 0, "uptime": 0, "power": 0, "state": false },
    { "voltage": 0, "current": 0, "uptime": 0, "power": 0, "state": false },
    { "voltage": 0, "current": 0, "uptime": 0, "power": 0, "state": false }
  ],
  "internalTemperature": 26.97,
  "temperatureUnit": "°C",
  "systemStatus": "OK"
}
```

4.2 POST /api/control

Controls the relays via form-encoded data. Each field name is channelN where N is 1-8:

- set **on** to turn a relay ON,
- set **off** to turn it OFF;
- if a channel field is omitted, that channel is forced OFF.

```
# Turn channel 1 and 3 ON (others OFF)
curl.exe -s -o $null -w "%{http_code}`n" -X POST "http://<pdu-ip>/api/control"
--data "channel1=on&channel3=on"

# Turn channel 3 OFF (and leave others OFF by omission)
curl.exe -s -o $null -w "%{http_code}`n" -X POST "http://<pdu-ip>/api/control"
--data "channel3="
```

All unspecified channels are forced off. A successful request returns 200 OK (body OK). Missing or malformed body returns 400 Bad Request.

4.3 GET /api/settings

Returns the stored network configuration and user preferences in JSON:

```
curl.exe -s "http://<pdu-ip>/api/settings"
```

Example response:

```
{
  "ip":"192.168.0.12",
  "gateway":"192.168.0.1",
  "subnet":"255.255.255.0",
  "dns":"8.8.8.8",
  "device_name":"ENERGIS-1.1.0",
  "location":"Location",
  "temp_unit":"celsius",
  "temperature":33.35,
  "timezone":"",
  "time":"00:00:00",
  "autologout":5
}
```


4.4 POST /api/settings

Updates network parameters and user preferences. Fields include:

- ip,
- mask,
- gateway,
- dns,
- deviceName,
- location,
- tempUnit (C, F or K).

Changes are saved to EEPROM; the device responds **204 No Content** and then **reboots**.

```
curl.exe -s -o $null -w "%{http_code}`n" -X POST "http://<pdu-ip>/api/settings" ^  
--data "ip=192.168.0.12&gateway=192.168.0.1&subnet=255.255.255.0&dns=8.8.8.8&device_name  
=ENERGIS&location=Rack1&temp_unit=celsius"
```

5. HTML pages

5.1 GET /control.html

ENERGIS PDU

Control
Settings
Help
User Manual
Programming Manual

Control

Manage power channels and monitor real-time data.

Channel	Switch	Voltage (V)	Current (A)	Uptime (s)	Power (W)
1	<input type="checkbox"/>	0.00	0.00	0	0.00
2	<input type="checkbox"/>	0.00	0.00	0	0.00
3	<input type="checkbox"/>	0.00	0.00	0	0.00
4	<input type="checkbox"/>	0.00	0.00	0	0.00
5	<input type="checkbox"/>	0.00	0.00	0	0.00
6	<input type="checkbox"/>	0.00	0.00	0	0.00
7	<input type="checkbox"/>	0.00	0.00	0	0.00
8	<input type="checkbox"/>	0.00	0.00	0	0.00

Apply Changes

All On

All Off

Internal Temperature:33.8°C

System Status:OK

Control UI, uses `/api/status` and `/api/control` under the hood.

5.2 GET /settings.html

ENERGIS PDU

Control
Settings
Help
User Manual
Programming Manual

Settings

Network Settings

IP Address:

10.10.0.56

Default Gateway:

10.10.0.1

Subnet Mask:

255.255.255.0

DNS Server:

0.0.0.0

Device Settings

Device Name:

ENERGIS-1.1.0

Device Location:

HomeLab

Temperature Unit

☒ Celsius

☐ Fahrenheit

☐ Kelvin

Save Settings

Manuels

User Manual

Programming & Interfacing Manual

Serves an HTML settings page for use in a browser. It displays current network values and allows updating them via a form. Posts to `/api/settings`.

5.3 GET /help.html, /user_manual.html, /programming_manual.html

These endpoints serve small HTML pages.

- `/user_manual.html` and `/programming_manual.html`: simple stubs that link to the PDFs hosted on GitHub Pages:
 - User Manual
https://dvidmakesthings.github.io/HW_10-In-Rack_PDU/Manuals/User_Manual.pdf
 - Programming & Interfacing Manual
https://dvidmakesthings.github.io/HW_10-In-Rack_PDU/Manuals/Automation_Manual.pdf

Internet access is **required** to load those PDFs.

- `/help.html`: a fast help page that is served fully from the device. It does not depend on internet access and is meant for quick reference and basic troubleshooting when you're offline.

HTTP behavior: All three return 200 OK, Content-Type: text/html, Cache-Control: no-cache, and the server closes the connection after sending the body.

What's on /help.html? (fast help, offline-safe)

- Front panel cheatsheet
- Network quick checks
- Web API short guide
- SNMP sanity
- Offline troubleshooting

Why keep Help?

- It gives operators something usable when the site has no internet.
- It points to the full PDFs when WAN is available.
- It reduces support by solving the common "why doesn't it switch / where's my IP / why are values zero" cases directly on the box.

6. OpenMetrics / Prometheus endpoint

6.1 Overview

The ENERGIS PDU exposes a `/metrics` HTTP endpoint that provides runtime telemetry in OpenMetrics/Prometheus text format (version 0.0.4). This plugs directly into Prometheus, Grafana, and similar tools.

6.2 Configuration - Accessing the Endpoint

```
curl.exe http://<pdu-ip-address>/metrics
```

Example response

```
# HELP energis_up 1 if the metrics handler is healthy.
# TYPE energis_up gauge
energis_up 1
# HELP energis_build_info Build and device identifiers.
# TYPE energis_build_info gauge
energis_build_info{version="1.0.0",serial="SN-0167663"} 1
# HELP energis_uptime_seconds_total System uptime in seconds.
# TYPE energis_uptime_seconds_total counter
energis_uptime_seconds_total 27
...
# HELP energis_channel_state Relay state (1=ON, 0=OFF).
# TYPE energis_channel_state gauge
energis_channel_state{ch="1"} 1
# HELP energis_channel_telemetry_valid 1 if cached telemetry for channel is fresh.
# TYPE energis_channel_telemetry_valid gauge
energis_channel_telemetry_valid{ch="1"} 1
# HELP energis_channel_voltage_volts Channel voltage.
# TYPE energis_channel_voltage_volts gauge
energis_channel_voltage_volts{ch="1"} 0.000
# HELP energis_channel_current_amps Channel current.
# TYPE energis_channel_current_amps gauge
energis_channel_current_amps{ch="1"} 0.000
# HELP energis_channel_power_watts Active power per channel.
# TYPE energis_channel_power_watts gauge
energis_channel_power_watts{ch="1"} 0.000
# HELP energis_channel_energy_watt_hours_total Accumulated energy per channel.
# TYPE energis_channel_energy_watt_hours_total counter
energis_channel_energy_watt_hours_total{ch="1"} 0.000
```

6.3 Available Metrics

6.3.1 System

energis_up

Health indicator (gauge; 1 if handler responds)

energis_build_info{version,serial}

Build and device info (gauge; always 1)

energis_uptime_seconds_total

Uptime since boot in seconds (counter)

energis_internal_temperature_celsius

Internal MCU temperature, calibrated (gauge)

energis_temp_calibrated

1 if temperature calibration is applied (gauge)

energis_temp_calibration_mode

Calibration mode (0=none, 1=1pt, 2=2pt) (gauge)

energis_vusb_volts

USB rail voltage (gauge)

energis_vsupply_volts

12 V rail voltage (gauge)

energis_http_requests_total

Total HTTP requests served (counter)

6.3.2 Per-Channel

energis_channel_state{ch}

Relay state: 1=ON, 0=OFF (gauge)

energis_channel_telemetry_valid{ch}

1 if cached telemetry for channel is fresh (gauge)

energis_channel_voltage_volts{ch}

Channel voltage [V] (gauge)

energis_channel_current_amps{ch}

Channel current [A] (gauge)

energis_channel_power_watts{ch}

Active power [W] (gauge)

energis_channel_energy_watt_hours_total{ch}

Accumulated energy in watt-hours (counter)

Values are served from cached snapshots owned by ``MeterTask``. No direct sensor I/O in the handler. Temperature uses the active calibration. If no calibration is stored, defaults are used.

6.4 Prometheus Integration

Add to `prometheus.yml`:

```
scrape_configs:
  - job_name: 'energis-pdu'
    scrape_interval: 15s
    scrape_timeout: 10s
    metrics_path: /metrics
    static_configs:
      - targets: ['192.168.0.22:80']
        labels:
          location: 'rack-1'
          device: 'pdu-main'
```

Example Alerts

```
groups:
  - name: energis
    rules:
      - alert: EnergisHighTemp
        expr: energis_internal_temperature_celsius > 70
        for: 2m
        labels: {severity: warning}
        annotations:
          summary: "ENERGIS MCU hot >70C"

      - alert: EnergisVsupplyLow
        expr: energis_vsupply_volts < 10.8
        for: 1m
        labels: {severity: critical}
        annotations:
          summary: "ENERGIS 12V rail Low"

      - alert: EnergisNoTelemetry
        expr: sum(energis_channel_telemetry_valid) < 8
        for: 2m
        labels: {severity: warning}
        annotations:
          summary: "ENERGIS channel telemetry not fully valid"
```

6.5 Performance

- Static buffer ~4 KB. No heap allocations.
- Non-blocking, minimal CPU load.
- Typical response time < 50 ms
- If the output would overflow the buffer, the handler returns ****503**** to encourage a retry instead of serving a partial payload.

6.6 Implementation Notes

- Reads from `MeterTask_GetTelemetry()` and `MeterTask_GetSystemTelemetry()`
- Uses atomic counters for request accounting.
- OpenMetrics text format compatible with Prometheus 0.0.4.

7. SNMP interface

This firmware exposes a compact **SNMPv1** agent (community public). A static table binds each OID to a getter (and sometimes a setter). The table itself carries the SNMP type and the maximum response length; the getters in the submodules return the bytes to match that declaration. Identity (MIB-II system) lives alongside a private enterprise subtree at **1.3.6.1.4.1.19865** for

- outlets,
- power telemetry,
- rails/temperature, and
- a read-only mirror of network settings.

No request performs heavy work: outlet writes toggle state immediately; reads return cached or computed values with fixed, short encodings.

Two encoding patterns matter:

- Outlet states are **INTEGER (4 bytes)**:
 - GET returns a 32-bit 0 or 1,
 - SET treats any non-zero as “on”.Group controls are also typed as INTEGER.
- Measurements (power, rails, temperature, etc.) and network values are **OCTET STRINGS** containing ASCII like “230.12” or “192.168.0.50”. Parse as text. Buffers are small (≤16 bytes).

7.1 Submodules

System & table layer

Owns the SNMP community (public), publishes the MIB-II system group (sysDescr, sysObjectID=enterprise 1.3.6.1.4.1.19865, sysUpTime, sysContact, sysSN, sysLocation, sysServices), and wires all private OIDs to domain getters/setters. It also defines an initial warmStart trap helper under the same enterprise. The table is “dumb”: it declares type/length and calls into the right function; logic lives in the domain modules.

Key OIDs (system):

- 1.3.6.1.2.1.1.1.0 sysDescr (string)
- 1.3.6.1.2.1.1.2.0 sysObjectID = 1.3.6.1.4.1.19865
- 1.3.6.1.2.1.1.3.0 sysUpTime (TimeTicks)
- 1.3.6.1.2.1.1.4.0 sysContact (string)
- 1.3.6.1.2.1.1.5.0 sysSN (string)
- 1.3.6.1.2.1.1.6.0 sysLocation (string)
- 1.3.6.1.2.1.1.7.0 sysServices (INTEGER)

7.2 Outlet control (read/write)

Eight independent channels and two group triggers. Per-channel GET returns a 4-byte INTEGER (0/1). Per-channel SET: 0 → off, any non-zero → on. Group triggers **apply the action when you write any non-zero**, and their GET encodes whether **all** channels currently match that state. Internally, OID channels are 1..8; drivers use 0..7.

7.2.1 Per-channel state (INTEGER):

- Format:

```
.1.3.6.1.4.1.19865.2.<ch>.0 where <ch>=1..8
```

GET: *int32* 0 or 1

SET: *i* 0 or *i* 1 (non-zero treated as 1) Example (CH3):

```
snmpget -v1 -c public -Oqv <pdu-ip> 1.3.6.1.4.1.19865.2.3.0
```

7.2.2 Group controls (INTEGER):

- All OFF (trigger):

```
.1.3.6.1.4.1.19865.2.9.0
```

GET: '1' only if every channel is off;

SET: non-zero → force all off.

- All ON (trigger):

```
.1.3.6.1.4.1.19865.2.10.0
```

GET: '1' only if every channel is on;

SET: non-zero → force all on.

Implementation detail: per-channel GET always returns **exactly 4 bytes** to match the table's INTEGER declaration. Group GET encodes '0'/'1' via a one-byte helper but the table still declares INTEGER. Managers will still treat these as INTEGER because the table declares INTEGER, the single-byte helper is an internal optimization.

7.3 Power and energy telemetry

Six metrics per channel, all as **ASCII strings** in OCTET STRINGs, pulled from the **cached** metering snapshot (no blocking I/O on the SNMP path). If the cache isn't valid yet, you'll see zeros by design.

7.3.1 Per-channel telemetry:

- Voltage [V]: .1.3.6.1.4.1.19865.5.<ch>.1.0 → "%.2f"
- Current [A]: .1.3.6.1.4.1.19865.5.<ch>.2.0 → "%.3f"
- Power [W]: .1.3.6.1.4.1.19865.5.<ch>.3.0 → "%.1f"
- Power factor: .1.3.6.1.4.1.19865.5.<ch>.4.0 → "%.3f"
- Energy [kWh]: .1.3.6.1.4.1.19865.5.<ch>.5.0 → "%.3f"
- Uptime [s]: .1.3.6.1.4.1.19865.5.<ch>.6.0 → "12345"
(decimal ASCII)

Quick sense of outputs for channel 1:

```
snmpget -v1 -c public -Oqv <pdu-ip> 1.3.6.1.4.1.19865.5.1.1.0 # "230.12"  
snmpget -v1 -c public -Oqv <pdu-ip> 1.3.6.1.4.1.19865.5.1.2.0 # "0.534"  
snmpget -v1 -c public -Oqv <pdu-ip> 1.3.6.1.4.1.19865.5.1.3.0 # "85.3"
```

Formatting is centralized (ftoa, u32toa) and capped at 16 bytes per response. Precision is uniform across channels and metrics.

7.4 Rails and temperature

On-die temperature and board rails, formatted as short ASCII. The module samples Pico ADC for the die sensor (with a tiny low-pass/settle step) and uses HAL helpers for external rails. Everything fits in 16 bytes.

OIDs:

- Die sensor (voltage): .1.3.6.1.4.1.19865.3.1.0 → "%.5f"
- Die temperature [°C]: .1.3.6.1.4.1.19865.3.2.0 → "%.3f"
- V_SUPPLY [V]: .1.3.6.1.4.1.19865.3.3.0 → "%.3f"
- V_USB [V]: .1.3.6.1.4.1.19865.3.4.0 → "%.3f"
- V_SUPPLY divider tap: .1.3.6.1.4.1.19865.3.5.0
- V_USB divider tap: .1.3.6.1.4.1.19865.3.6.0
- Core VREG [V]: .1.3.6.1.4.1.19865.3.7.0 → "%.2f"
- Core VREG status: .1.3.6.1.4.1.19865.3.8.0 →
"OK" | "Overload" | "Hi-Z" | "Unknown"
- Bandgap ref: .1.3.6.1.4.1.19865.3.9.0
- USB PHY rail: .1.3.6.1.4.1.19865.3.10.0
- IO rail: .1.3.6.1.4.1.19865.3.11.0

7.5 Network configuration mirror

Reflects the persisted network config (EEPROM) as dotted-decimal strings. These are not writable via SNMP in this build.

OIDs:

- IP address: `.1.3.6.1.4.1.19865.4.1.0` → "A.B.C.D"
- Subnet mask: `.1.3.6.1.4.1.19865.4.2.0` → "A.B.C.D"
- Gateway: `.1.3.6.1.4.1.19865.4.3.0` → "A.B.C.D"
- DNS server: `.1.3.6.1.4.1.19865.4.4.0` → "A.B.C.D"

7.6 Failure modes and things worth knowing

- **Type discipline:** outlet nodes are 4-byte INTEGERS; telemetry and network are ASCII strings. If your NMS expects numbers everywhere, it will complain on the string nodes. Parse them.
- **“All on/off” asymmetry:** those two reports aggregate state and execute batch writes on any non-zero input; 0 is ignored. Verify final state with per-channel GETs if you need certainty.
- **Small buffers, fixed precision:** string responses are capped at 16 bytes, with formats like "%.2f", "%.3f". If you widen precision in firmware, update the table lengths or you'll truncate.
- **Cached telemetry:** power data is a snapshot from the MeterTask cache. Immediately after enabling a channel, it may read "0.000" until the next update. This path never blocks waiting for the meter.
- **Network fallback:** if EEPROM is blank or inaccessible, the network mirror returns compiled defaults. If your reads show defaults, the storage flow didn't load.
- **Table is authoritative:** per-channel outlet GET always returns exactly 4 bytes to match the table's INTEGER definition, even if the internal code path could compute a one-byte value. Keep your client side tolerant.

7.7 Summary

One static table, four domains. Outlets are writable INTEGER scalars at `.1.3.6.1.4.1.19865.2.<ch>.0`, with two INTEGER triggers for “all off/on.”

Power telemetry is six ASCII string metrics per channel at `.1.3.6.1.4.1.19865.5.<ch>.<metric>.0`, pulled from a non-blocking cache.

Rails/temperature live under `.1.3.6.1.4.1.19865.3.*.0` as short strings.

Network settings are read-only, dotted-decimal strings under `.1.3.6.1.4.1.19865.4.*.0`, with EEPROM-to-default fallback.

Respect types and 16-byte limits, assume cached updates for measurements, and rely on per-channel reads to verify group actions.



8. Support

For firmware updates and source code, visit the project's GitHub repository.
For technical support or to report bugs, contact the maintainer listed in the
SNMP *sysContact* field (dvidmakesthings@gmail.com).