


Add/Edit Camera

Add Camera

The device's network parameters should be configured before adding IP cameras (see [11.1.1 TCP/IPv4 Configuration](#) for details).

Referring to the pictures below, Click on **Add Camera** in the setup panel or **+** in the top right corner of the preview window to pop up the "Add Camera" window as shown below. You can use the "quick add" interface to add an IP Camera or add it manually.

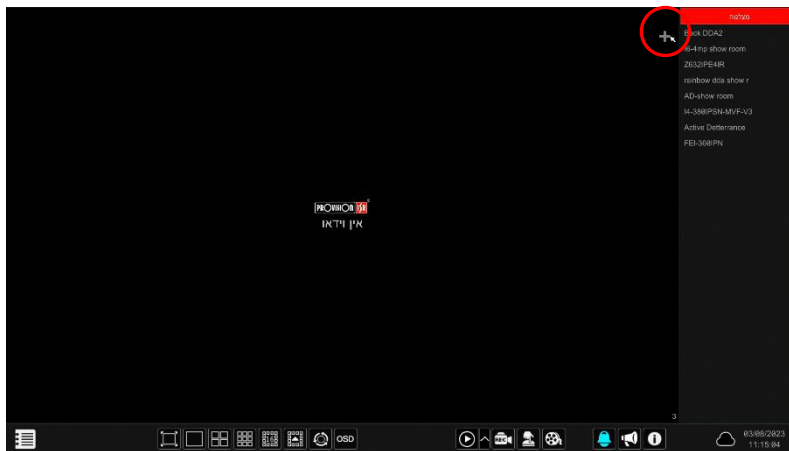


ADDING NEW CAMERA TO NVR

➤ Quick Add


Check mark the desired cameras and click “Add” to add cameras.

Click on “Default Password” to set the default username and password per manufacturer.

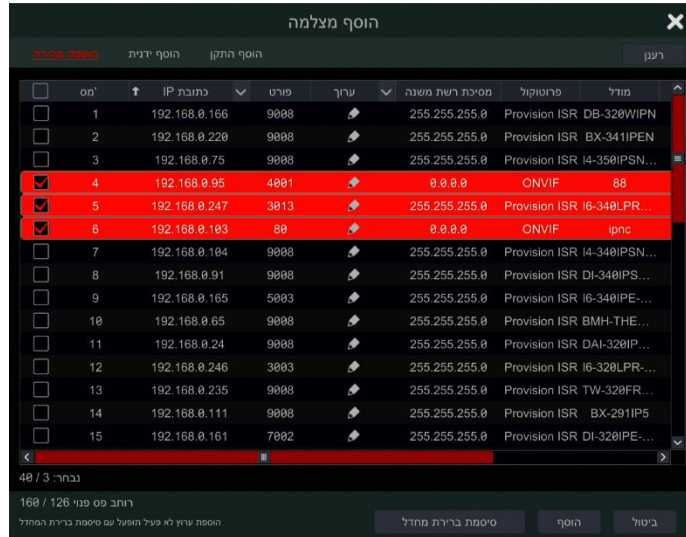

➤ Editing IP Address of Specific Camera


Must be done prior to adding the IPC.


Add” interface, Click  to edit the IP of Set the IP new IP address, subnet mask Input the IPC password and confirm. After camera IP address will change.



From the “Quick a specific IP camera. and default gateway. a few seconds, the

➤ Editing IP Address of Several Cameras

Must be done prior to adding the IPC. From the “Quick Add” interface, Click  next to the “Edit” tab and choose “Batch IP Settings”. Choose the the first IP Address, Subnet Mask and confirm. The IPC Addresses will be set in Make sure that all the target IP addresses example: If you configure 32 cameras and 192.168.1.1, then you need to make sure from 192.168.1.1 to 192.168.1.32 are free)

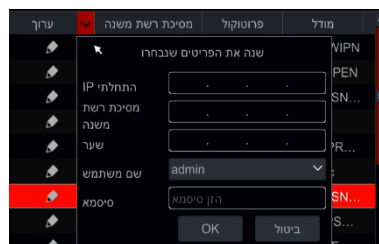


➤ Add Manually

IPv4/IPv6 Input: Input the IP address, port, username, password and protocol of the camera and click “Test” to confirm the settings are correct and that connection can be made with the camera.


Domain Input: If you are using DDNS to connect with the camera, click on the arrow next to the IP address to switch the connection mode from IP to domain.

ADDING NEW CAMERA TO NVR

Once finished, click the “Add” button.

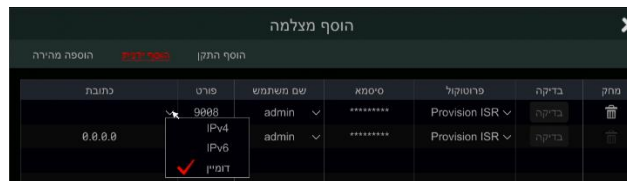

Protocol / RTSP Input: The system has several built-in communication protocols with the camera (Provision-ISR, ONVIF, Hikvision, Dahua). If you wish to add a channel using RTSP, click on the drop-down menu arrow next to the chosen protocol (Default is “Provision-ISR”) and choose “Manage Protocol”. The following window will appear.

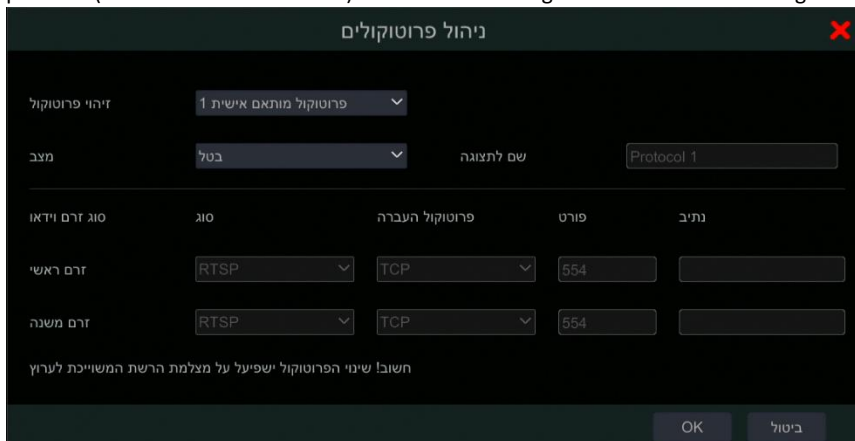


Set a name for the protocol, enable it and set the values as required (Both master-stream and sub-stream values must be entered). Click OK to continue.

ADDING NEW CAMERA TO NVR

Add Recorder

If you wish to view/record channels from another Provision-ISR device on the network you can use this option. Click on “Add Recorder”. The following window will appear.

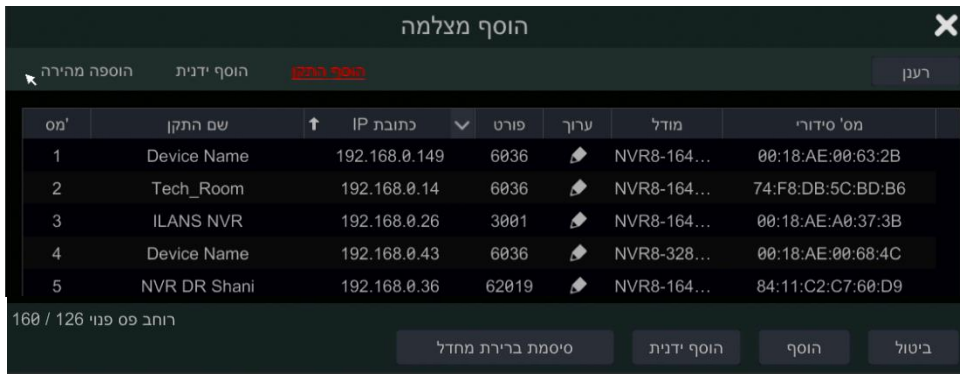


מס'	שם התקן	↑	כתובת IP	↓	פורט	ערוך	מודל	מס' סידורי
1	Device Name		192.168.0.149		6036	🔌	NVR8-164...	00:18:AE:00:63:2B
2	Tech_Room		192.168.0.14		6036	🔌	NVR8-164...	74:F8:DB:5C:BD:B6
3	ILANS NVR		192.168.0.26		3001	🔌	NVR8-164...	00:18:AE:A0:37:3B
4	Device Name		192.168.0.43		6036	🔌	NVR8-328...	00:18:AE:00:68:4C
5	NVR DR Shani		192.168.0.36		62019	🔌	NVR8-164...	84:11:C2:C7:60:D9

160 / 126 רחב פס פנוי

סימט ברית מחדל הוסף ידנית הוסף ביטול

The NVR will display automatically all the supported devices found on the LAN with its details. If you wish to add a channel from any of the displayed devices, double click on it and then double click on the channel you wish to add.

If you wish to add a channel from a recorder located on another network, click on “Add Manually” and input the IP address, port and login credentials for the device, then click on “Test Device” if the connection is well, you will get a list of available channels. Double click on the channel you wish to add.

Click  to delete the camera. Click “Default Password” to set the default username and password per manufacturer.