

Mycodo Manual

Contents

About Mycodo	3
Brief Overview	3
Frequently Asked Questions	4
Upgrading	6
Features	6
Mycodo Client	6
Data	7
Input	7
Math	9
Output	10
PWM	11
Relays	15
Pumps	16
Function	16
PID Controller	16
Conditional	19
Trigger	23
LCDs	25
Methods	26
Universal Options	26
Specific Method Options	26
PID Tuning	27
PID Control Theory	27
Quick Setup Examples	27
Exact Temperature Regulation	28
High Temperature Regulation	28
Configuration Settings	28
General Settings	28
Output Usage Settings	29
Input Settings	29
Measurement Settings	29
Users	30
User Roles	30
Pi Settings	30
Alert Settings	30
Camera Settings	31
Diagnostic Settings	31
Miscellaneous	32
Create an Input Module	32
Dashboard	32
Graphs	32
Gauges	33

Cameras	33
Measurement	33
Output	33
PID Control	34
Live Measurements	34
Asynchronous Graphs	34
Notes	34
Tag Options	34
Note Options	35
Export-Import	35
Dependencies	35
Camera	35
Output Usage	35
Backup-Restore	36
System Information	36
USB Device Persistence Across Reboots	36
Troubleshooting	37
Daemon Not Running	37
Incorrect Database Version	37
More	38
Devices	38
Input Devices	38
Output Devices	39
Edge Detection	39
I2C Multiplexers	39
Analog-to-Digital Converters	39
Device Specific Information	40
LCD Displays	40
Output Device Details	40
Atlas Scientific EZO-PMP	40
Input Device Details	41
Raspberry Pi	41
AM2315	41
AM2320	41
Atlas Scientific pH	41
Atlas Scientific PT-1000	42
BH1750	42
BME280	42
BMP085, BMP180	42
CCS811	43
Chirp	43
DHT11	43
DHT22, AM2302	43
DS18B20	44
DS18S20	44
DS1822	44
DS28EA00	44
DS1825	44
HTU21D	44
K-30	45
MAX31850K	45
MAX31855K	45
MAX31856	45
MAX31865	46
MH-Z16	46
MH-Z19	46
SHT1x	46

SHT31	46
SHT7x	47
TMP006, TMP007	47
TSL2561	47
TSL2591	47
Winsen ZH03B	48
Analog to Digital Converters	48
ADS1x15	48
ADS1256	48
MCP3008	48
MCP342x	48
Diagrams	49
DHT11 Diagrams	49
DS18B20 Diagrams	50
Raspberry Pi and Relay Diagrams	51

About Mycodo

Mycodo is an automated monitoring and regulation system that was built to run on the Raspberry Pi (versions Zero, 1, 2, and 3).

Originally developed for cultivating edible mushrooms, Mycodo has grown to do much more, including growing plants, culturing microorganisms, maintaining animal environments (laboratory honey bee apiary, young mammal and snake egg incubation, aquariums, herptariums), fermenting and curing tobacco, fermenting and aging foods (beer, cheese, tempeh), cooking food (sous-vide), and more.

The system comprises a backend (daemon) and a frontend (web server). The backend acquires measurements from sensors and devices, and coordinates a diverse set of responses to those measurements, including the ability to modulate outputs (relays, PWM, wireless outlets), regulate environmental conditions with electrical devices under PID control (steady regulation or changing over time), schedule timers, capture photos and stream video, trigger actions when measurements meet certain conditions (modulate relays, execute commands, notify by email, etc.), and more. The frontend is a web interface that enables easy navigation and configuration from any browser-enabled device.

Brief Overview

There are a number of different uses for Mycodo. Some users simply store sensor measurements to monitor conditions remotely, others regulate the environmental conditions of a physical space, while others capture motion-activated or timelapse photography, and more.

Input controllers acquire measurements and store them in a time series database. Measurements typically come from sensors, but may also be configured to use the return value of linux or Python commands, or math equations, making a very powerful system for acquiring and generating data.

Output controllers produce changes to the general input/output (GPIO) pins or may be configured to execute linux or Python commands, enabling a large number of potential uses. There are a few different types of outputs: simple switching of pins (HIGH/LOW), generating pulse-width modulated (PWM) signals, switching 315/433 MHz wireless outlets, as well as executing linux and Python commands. The most common output is using a relay to switch electrical devices on and off.

When Inputs and Outputs are combined, PID controllers may be used to create a feedback loop that uses the Output device to modulate an environmental condition the Input measures. Certain Inputs may be coupled with certain Outputs to create a variety of different control and regulation applications. Beyond simple regulation, Methods may be used to create changing setpoints over time, enabling such things as thermal cyclers, reflow ovens, environmental simulation for terrariums, food and beverage fermentation or curing, and cooking food (sous-vide), to name a few.

Triggers can be set to activate events based on specific dates and times or according to durations of time. Conditionals are used to activates certain events based on the truth of custom user statements (e.g. “Sensor1 > 23 and 10 < Sensor2 < 30”).

Frequently Asked Questions

What should I do if I have an issue?

First, read through this manual to make sure you understand how the system works and you're using the system properly. Also check out the Mycodo Wiki. You may even want to look through recent GitHub Issues. If you haven't resolved your issue by this point, make a New GitHub Issue describing the issue and attaching a sufficient amount of evidence (screenshots, log files, etc.) to aid in diagnosing the issue.

How do I add an Input (like a sensor) to the system if it's not currently supported?

Currently, adding an Input device that's not currently supported can be achieved by two different methods:

The first involves editing several internal Mycodo files. There has been effort to make the addition process as simple as possible. See the Adding Support for a New Input Wiki page for how to do this. All changes will be lost during an upgrade, therefore it is suggested to make a GitHub pull request with your changes to permanently integrate them into Mycodo.

The second way to add an Input is to create a script that obtains and returns a numerical value when executed in the linux system of the Raspberry Pi. This script may be configured to be executed by a "Linux Command" Input type. This will periodically execute the command and store the returned value to the database for use with the rest of the Mycodo system.

How do I set up simple regulation?

Here is how I generally set up Mycodo to monitor and regulate:

1. Determine what environmental condition you want to measure or regulate. Consider the devices that must be coupled to achieve this. For instance, temperature regulation require a temperature sensor as the input and an electric heater (or cooler) as the output.
2. Determine what relays you will need to power your electric devices. The Raspberry Pi is capable of directly switching relays (using a 3.3-volt signal). Remember to select a relay that can handle the load and doesn't exceed the maximum current draw from the Raspberry Pi GPIO pins.
3. See the Device Specific Information for information about what sensors are supported. Acquire sensor(s) and relay(s) and connect them to the Raspberry Pi according to the manufacturer's instructions.
4. On the **Setup** -> **Data** page, create a new input using the drop-down to select the correct sensor or input device. Configure the input with the correct communication pins and other options. Activate the input to begin recording measurements to the database.
5. Go to the **Live** page to ensure there is recent data being acquired from the input.
6. On the **Setup** -> **Output** page, add a relay and configure the GPIO pin that switches it, whether the relay switches On when the signal is HIGH or LOW, and what state (On or Off) to set the relay when Mycodo starts. A pulse-width modulated (PWM) output may also be used, among others.
7. Test the relay by switching it On and Off or generating a PWM signal from the **Setup** -> **Output** page and make sure the device connected to the relay turns On when you select "On", and Off when you select "Off".
8. On the **Setup** -> **Function** page, create a PID controller with the appropriate input, output, and other parameters. Activate the PID controller.
9. On the **Dash** page, create a graph that includes the input measurement, the output that is being used by the PID, and the PID output and setpoint. This provides a good visualization for tuning the PID. See Quick Setup Examples for a greater detail of this process and tuning tips.

Can I communicate with Mycodo from the command line?

Yes, ~/Mycodo/mycodo/mycodo_client.py has this functionality, but there's a lot to be desired. Below may not be the most current list of commands, so it's recommended to execute the installed symlink `mycodo-client --help` to see a full list with descriptions.

```
pi@raspberrypi:~ $ mycodo-client --help
usage: mycodo-client [-h] [--activatecontroller CONTROLLER ID]
                    [--deactivatecontroller CONTROLLER ID] [--pid_pause ID]
                    [--pid_hold ID] [--pid_resume ID] [--pid_get_setpoint ID]
                    [--pid_get_error ID] [--pid_get_integrator ID]
                    [--pid_get_derivator ID] [--pid_get_kp ID]
                    [--pid_get_ki ID] [--pid_get_kd ID]
```

```

[--pid_set_setpoint ID SETPOINT]
[--pid_set_integrator ID INTEGRATOR]
[--pid_set_derivator ID DERIVATOR] [--pid_set_kp ID KP]
[--pid_set_ki ID KI] [--pid_set_kd ID KD] [-c] [--ramuse]
[--lcd_backlight_on LCDID] [--lcd_backlight_off LCDID]
[--lcd_reset LCDID] [--output_state OUTPUTID]
[--output_currently_on OUTPUTID] [--outputoff OUTPUTID]
[--outputon OUTPUTID] [--duration SECONDS]
[--dutyicycle DUTYCYCLE] [-t]

```

Client for Mycodo daemon.

optional arguments:

```

-h, --help            show this help message and exit
--activatecontroller CONTROLLER ID
                        Activate controller. Options: Conditional, LCD, Math,
                        PID, Input
--deactivatecontroller CONTROLLER ID
                        Deactivate controller. Options: Conditional, LCD,
                        Math, PID, Input
--pid_pause ID        Pause PID controller.
--pid_hold ID         Hold PID controller.
--pid_resume ID       Resume PID controller.
--pid_get_setpoint ID
                        Get the setpoint value of the PID controller.
--pid_get_error ID    Get the error value of the PID controller.
--pid_get_integrator ID
                        Get the integrator value of the PID controller.
--pid_get_derivator ID
                        Get the derivator value of the PID controller.
--pid_get_kp ID       Get the Kp gain of the PID controller.
--pid_get_ki ID       Get the Ki gain of the PID controller.
--pid_get_kd ID       Get the Kd gain of the PID controller.
--pid_set_setpoint ID SETPOINT
                        Set the setpoint value of the PID controller.
--pid_set_integrator ID INTEGRATOR
                        Set the integrator value of the PID controller.
--pid_set_derivator ID DERIVATOR
                        Set the derivator value of the PID controller.
--pid_set_kp ID KP    Set the Kp gain of the PID controller.
--pid_set_ki ID KI    Set the Ki gain of the PID controller.
--pid_set_kd ID KD    Set the Kd gain of the PID controller.
-c, --checkdaemon    Check if all active daemon controllers are running
--ramuse             Return the amount of ram used by the Mycodo daemon
--lcd_backlight_on LCDID
                        Turn on LCD backlight with LCD ID
--lcd_backlight_off LCDID
                        Turn off LCD backlight with LCD ID
--lcd_reset LCDID    Reset LCD with LCD ID
--output_state OUTPUTID
                        State of output with output ID
--output_currently_on OUTPUTID
                        How many seconds an output has currently been active
                        for
--outputoff OUTPUTID Turn off output with output ID
--outputon OUTPUTID  Turn on output with output ID
--duration SECONDS   Turn on output for a duration of time (seconds)
--dutyicycle DUTYCYCLE
                        Turn on PWM output for a duty cycle (%)
-t, --terminate      Terminate the daemon

```

Can I variably-control the speed of motors or other devices with the PWM output signal from the PID?

Yes, as long as you have the proper hardware to do that. The PWM signal being produced by the PID should be handled appropriately, whether by a fast-switching solid state relay, an AC modulation circuit, DC modulation circuit, or something else.

I have a PID controller that uses one temperature sensor. If this sensor stops working, my entire PID controller stops working. Is there a way to prevent this by setting up a second sensor to be used in case the first one fails?

Yes, you can use as many sensors as you would like to create a redundant system so your PID doesn't stop working if one or more sensors fail. To do this, follow the below instructions:

1. Add and activate all your sensors. For this example, we will use three temperature sensors, Sensor1, Sensor2, and Sensor3, that return measurements in degrees Celsius.
2. Go to the **Setup** -> **Data** page and add the Math controller "Redundancy".
3. In the options of the Redundancy controller, set the Period, Start Offset, and Max Age.
4. In the options of the Redundancy controller, select Sensor1, Sensor2, and Sensor3 for the Input option and click Save.
5. In the options of the Redundancy controller, change the order you wish to use the sensors under Order of Use. For this example, we will use the default order (Sensor1, Sensor2, Sensor3).
6. In the options of the Redundancy controller, under Measurement Settings, select Celsius for the Measurement Unit and click Save under Measurement Settings.
7. Activate the Redundancy Math controller.
8. Go to the Live page and verify the Redundancy Math controller is working correctly by returning a value from one of the three selected Inputs. If the first sensor is working correctly, it should return this value. You can deactivate the first sensor (mimicking the first sensor stopped working) and see if the second sensor's value is then returned.
9. Go to the **Setup** -> **Function** page and select the new Redundancy Math controller for the PID Measurement option.

The PID controller will now use the measurement returned from the Redundancy Math controller, which in turn will acquire its measurement in the following way:

If a measurement can be found within the Max Age for Sensor1, the measurement for Sensor1 will be returned. If a measurement from Sensor1 could not be acquired, and if a measurement can be found within the Max Age for Sensor2, the measurement for Sensor2 will be returned. If a measurement from Sensor2 could not be acquired, and if a measurement can be found within the Max Age for Sensor3, the measurement for Sensor3 will be returned. If a measurement from Sensor3 could not be acquired, then the Redundancy Math controller will not return a measurement at all (indicating all three sensors are not working). It is advised to set up a Conditional to send a notification email to yourself if one or more measurements are unable to be acquired.

Upgrading

[Gear Icon] -> Upgrade

If you already have Mycodo installed (version $\geq 4.0.0$), you can perform an upgrade to the latest Mycodo Release by either using the Upgrade option in the web interface (recommended) or by issuing the following command in a terminal. A log of the upgrade process is created at `/var/log/mycodo/mycodoupgrade.log`

```
sudo /bin/bash ~/Mycodo/mycodo/scripts/upgrade_commands.sh upgrade
```

Features

The following sections describe the essential modules of Mycodo that can be used to perform functions or communicate with other parts of Mycodo. Each section performs specific tasks or groups of related tasks.

Mycodo Client

-a Output all. -b Output both (this description is quite long). -c arg Output just arg. -long Output all day long.

-p This option has two paragraphs in the description. This is the first.

This is the second. Blank lines may be omitted between options (as above) or left in (as here and below).

-test this is a test

-very-long-option A VMS-style option. Note the adjustment for the required two spaces.

-an-even-longer-option The description can also start on the next line.

-2, -two This option has two variants.

-f FILE, -file=FILE These two options are synonyms; both have arguments.

/V A VMS/DOS-style option.

Data

Setup -> Data

Data includes controllers that produce and store data in the measurement database. Input controllers generally acquire measurements from sensors, but they may also come from executed commands. Math controllers, on the other hand, perform math on already-stored values to create new values that are stored.

Input

Inputs (such as sensors or analog signals) measure environmental conditions, which will be stored in a time-series database (InfluxDB). This database will provide measurements for Graphs, LCDs, PID Controllers, Conditional Statements, and other parts of Mycodo to operate from.

In addition to several supported sensors and devices, a Linux command may be specified that will be executed and the return value stored in the measurement database to be used throughout the Mycodo system.

Setting	Description
Activate	After the sensor has been properly configured, activation begins acquiring measurements from the sensor. Any activated conditional statements will now being operating.
Deactivate	Deactivation stops measurements from being acquired from the sensor. All associated conditional statements will cease to operate.
Save	Save the current configuration entered into the input boxes for a particular sensor.
Delete	Delete a particular sensor.
Acquire Measurements Now	Force the input to conduct measurements and them in the database.
Up/Down	Move a particular sensor up or down in the order displayed.
Power Output	Select a output that powers the sensor. This enables powering cycling (turn off then on) when the sensor returns 3 consecutive errors to attempt to fix the issue. Transistors may also be used instead of a relay (note: NPN transistors are preferred over PNP for powering sensors).
Location	Depending on what sensor is being used, you will need to either select a serial number (DS18B20 temperature sensor), a GPIO pin (in the case of sensors read by a GPIO), or an I2C address. or other.
I2C Bus	The bus to be used to communicate with the I2C address.
Period (seconds)	After the sensor is successfully read and a database entry is made, this is the duration of time waited until the sensor is measured again.
Measurement Unit	Select the unit to save the measurement as (only available for select measurements).
Pre Output	If you require a output to be activated before a measurement is made (for instance, if you have a pump that extracts air to a chamber where the sensor resides), this is the output number that will be activated. The output will be activated for a duration defined by the Pre Duration, then once the output turns off, a measurement by the sensor is made.
Pre Output Duration (seconds)	This is the duration of time that the Pre Output runs for before the sensor measurement is obtained.

Setting	Description
Pre Output During Measurement	If enabled, the Pre Output stays on during the acquisition of a measurement. If disabled, the Pre Output is turned off directly before acquiring a measurement.
Command	A linux command (executed as the user ‘mycodo’) that the return value becomes the measurement
Command Measurement	The measured condition (e.g. temperature, humidity, etc.) from the linux command
Command Units	The units of the measurement condition from the linux command
Edge	Edge sensors only: Select whether the Rising or Falling (or both) edges of a changing voltage are detected. A number of devices to do this when in-line with a circuit supplying a 3.3-volt input signal to a GPIO, such as simple mechanical switch, a button, a magnet (reed/hall) sensor, a PIR motion detector, and more.
Bounce Time (ms)	Edge sensors only: This is the number of milliseconds to bounce the input signal. This is commonly called debouncing a signal [1] and may be necessary if using a mechanical circuit.
Reset Period (seconds)	Edge sensors only: This is the period of time after an edge detection that another edge will not be recorded. This enables devices such as PIR motion sensors that may stay activated for longer periods of time.
Measurement	Analog-to-digital converter only: The type of measurement being acquired by the ADC. For instance, if the resistance of a photocell is being measured through a voltage divider, this measurement would be “light”.
Units	Analog-to-digital converter only: This is the unit of the measurement. With the above example of “light” as the measurement, the unit may be “lux” or “intensity”.
BT Adapter	The Bluetooth adapter to communicate with the input.
Clock Pin	The GPIO (using BCM numbering) connected to the Clock pin of the ADC
CS Pin	The GPIO (using BCM numbering) connected to the CS pin of the ADC
MISO Pin	The GPIO (using BCM numbering) connected to the MISO pin of the ADC
MOSI Pin	The GPIO (using BCM numbering) connected to the MOSI pin of the ADC
RTD Probe Type	Select to measure from a PT100 or PT1000 probe.
Resistor Reference (Ohm)	If your reference resistor is not the default (400 Ohm for PT100, 4000 Ohm for PT1000), you can manually set this value. Several manufacturers now use 430 Ohm resistors on their circuit boards, therefore it’s recommended to verify the accuracy of your measurements and adjust this value if necessary.
Channel	Analog-to-digital converter only: This is the channel to obtain the voltage measurement from the ADC.
Gain	Analog-to-digital converter only: set the gain when acquiring the measurement.
Sample Speed	Analog-to-digital converter only: set the sample speed (typically samples per second).
Volts Min	Analog-to-digital converter only: What is the minimum voltage to use when scaling to produce the unit value for the database. For instance, if your ADC is not expected to measure below 0.2 volts for your particular circuit, set this to “0.2”.
Volts Max	Analog-to-digital converter only: This is similar to the Min option above, however it is setting the ceiling to the voltage range. Units Min Analog-to-digital converter only: This value will be the lower value of a range that will use the Min and Max Voltages, above, to produce a unit output. For instance, if your voltage range is 0.0 - 1.0 volts, and the unit range is 1 - 60, and a voltage of 0.5 is measured, in addition to 0.5 being stored in the database, 30 will be stored as well. This enables creating calibrated scales to use with your particular circuit.
Units Max	Analog-to-digital converter only: This is similar to the Min option above, however it is setting the ceiling to the unit range.
Weighting	This is a number between 0 and 1 and indicates how much the old reading affects the new reading. It defaults to 0 which means the old reading has no effect. This may be used to smooth the data.
Pulses Per Rev	The number of pulses for a complete revolution.
Port	The server port to be queried (Server Port Open input).
Times to Check	The number of times to attempt to ping a server (Server Ping input).

Setting	Description
Deadline (seconds)	The maximum amount of time to wait for each ping attempt, after which 0 (offline) will be returned (Server Ping input).

1. Debouncing a signal

Math

Math controllers allow one or more Inputs to have math applied to produce a new value that may be used within Mycodo.

Type	Description
Average (Multiple Measurements)	Stores the statistical mean of multiple selected measurements.
Average (Single Measurement)	Stores the statistical mean of one selected measurement over a duration of time determined by the Max Age (seconds) option.
Difference	Stores the mathematical difference (value_1 -value_2).
Equation	Stores the calculated value of an equation.
Redundancy	Select multiple Inputs and if one input isn't available, the next measurement will be used. For example, this is useful if an Input stops but you don't want a PID controller to stop working if there is another measurement that can be used. More than one Input can be and the preferred Order of Use can be defined.
Verification	Ensures the greatest difference between any selected Inputs is less than Max Difference, and if so, stores the average of the selected measurements.
Median	Stores the statistical median from the selected measurements.
Maximum	Stores the largest measurement from the selected measurements.
Minimum	Stores the smallest measurement from the selected measurements.
Humidity	Calculates and stores the percent relative humidity from the dry-bulb and wet-bulb temperatures, and optional pressure.

Setting	Description
Input	Select the Inputs to use with the particular Math controller
Period (seconds)	The duration of time between calculating and storing a new value
Max Age (seconds)	The maximum allowed age of the Input measurements. If an Input measurement is older than this period, the calculation is cancelled and the new value is not stored in the database. Consequently, if another controller has a Max Age set and cannot retrieve a current Math value, it will cease functioning. A PID controller, for instance, may stop regulating if there is no new Math value created, preventing the PID controller from continuing to run when it should not.
Start Offset (seconds)	Wait this duration before attempting the first calculation/measurement.
Measurement	This is the condition being measured. For instance, if all of the selected measurements are temperature, this should also be temperature. A list of the pre-defined measurements that may be used is below.
Units	This is the units to display along with the measurement, on Graphs. If a pre-defined measurement is used, this field will default to the units associated with that measurement.
Reverse Equation	For Difference calculations, this will reverse the equation order, from <code>value_1 - value_2</code> to <code>value_2 - value_1</code> .
Absolute Value	For Difference calculations, this will yield an absolute value (positive number).
Max Difference	If the difference between any selected Input is greater than this value, no new value will be stored in the database.
Dry-Bulb Temperature	The measurement that will serve as the dry-bulb temperature (this is the warmer of the two temperature measurements)
Wet-Bulb Temperature	The measurement that will serve as the wet-bulb temperature (this is the colder of the two temperature measurements)

Setting	Description
Pressure	This is an optional pressure measurement that can be used to calculate the percent relative humidity. If disabled, a default 101325 Pa will be used in the calculation.
Equation	An equation that will be solved with Python's eval() function. Let "x" represent the input value. Valid equation symbols include: + - * / ^
Order of Use	This is the order in which the selected Inputs will be used. This must be a comma separated list of Input IDs (integers, not UUIDs).

Output

Setup -> Output

Outputs are various signals that can be generated that operate devices. An output can be a PWM signal, a simple HIGH/LOW signal to operate a relay, a 315/433 MHz signal to switch a radio frequency-operated relay, driving of pumps and motors, or an execution of a linux or Python command, to name a few.

Setting	Description
Pin	This is the GPIO that will be the signal to the output, using BCM numbering.
WiringPi Pin	This is the GPIO that will be the signal to the output, using WiringPi numbering.
On Trigger	This is the state of the GPIO to signal the output to turn the device on. HIGH will send a 3.3-volt signal and LOW will send a 0-volt signal. If you output completes the circuit (and the device powers on) when a 3.3-volt signal is sent, then set this to HIGH. If the device powers when a 0-volt signal is sent, set this to LOW.
Protocol	This is the protocol to use to transmit via 315/433 MHz. Default is 1, but if this doesn't work, increment the number.
UART Device	The UART device connected to the device.
Baud Rate	The baud rate of the UART device.
I2C Address	The I2C address of the device.
I2C Bus	The I2C bus the device is connected to.
Flow Rate	The flow rate to dispense the volume (ml/min).
Pulse Length	This is the pulse length to transmit via 315/433 MHz. Default is 189 ms.
Bit Length	This is the bit length to transmit via 315/433 MHz. Default is 24-bit.
On Command	This is the command used to turn the output on. For wireless relays, this is the numerical command to be transmitted, and for command outputs this is the command to be executed. Commands may be for the linux terminal or Python 3 (depending on which output type selected).
Off Command	This is the command used to turn the output off. For wireless relays, this is the numerical command to be transmitted, and for command outputs this is the command to be executed. Commands may be for the linux terminal or Python 3 (depending on which output type selected).
PWM Command	This is the command used to set the duty cycle. The string "((duty_cycle))" in the command will be replaced with the actual duty cycle before the command is executed. Ensure "((duty_cycle))" is included in your command for this feature to work correctly. Commands may be for the linux terminal or Python 3 (depending on which output type selected).
Current Draw (amps)	This is the amount of current the device powered by the output draws. Note: this value should be calculated based on the voltage set in the Output Usage Settings.
Start State	This specifies whether the output should be ON or OFF when mycodo initially starts. Wireless relays have an additional option 'Neither' which will not issue an on or off command when Mycodo starts or stops.
Trigger at Startup	Select to enable triggering Functions (such as Output Triggers) when Mycodo starts and if Start State is set to ON.

Setting	Description
Seconds to turn On	This is a way to turn a output on for a specific duration of time. This can be useful for testing the outputs and powered devices or the measured effects a device may have on an environmental condition.

PWM

Pulse-width modulation (PWM) is a modulation technique used to encode a message into a pulsing signal, at a specific frequency in Hertz (Hz). The average value of voltage (and current) fed to the load is controlled by turning the switch between supply and load on and off at a fast rate. The longer the switch is on compared to the off periods, the higher the total power supplied to the load.

The PWM switching frequency has to be much higher than what would affect the load (the device that uses the power), which is to say that the resultant waveform perceived by the load must be as smooth as possible. The rate (or frequency) at which the power supply must switch can vary greatly depending on load and application, for example

Switching has to be done several times a minute in an electric stove; 120 Hz in a lamp dimmer; between a few kilohertz (kHz) to tens of kHz for a motor drive; and well into the tens or hundreds of kHz in audio amplifiers and computer power supplies.

The term duty cycle describes the proportion of ‘on’ time to the regular interval or ‘period’ of time; a low duty cycle corresponds to low power, because the power is off for most of the time. Duty cycle is expressed in percent, 100% being fully on.

PWM pins can be set up on the **Setup -> Output** page, then it may be used by a PWM PID Controller.

Setting	Description
Library	Select the method for producing the PWM signal. Hardware pins can produce up to a 30 MHz PWM signal, while any other (non-hardware PWM) pin can produce up to a 40 kHz PWM signal. See the table, below, for the hardware pins on various Pi boards.
BCM Pin	This is the GPIO that will output the PWM signal, using BCM numbering.
Hertz	This is frequency of the PWM signal.
Duty Cycle	This is the proportion of the time on to the time off, expressed in percent (0 - 100).
Current Draw (amps)	This is the current draw, in amps, when the duty cycle is 100%. Note: this value should be calculated based on the voltage set in the Output Usage Settings.

Non-hardware PWM Pins

When using non-hardware PWM pins, there are only certain frequencies that can be used. These frequencies in Hertz are 40000, 20000, 10000, 8000, 5000, 4000, 2500, 2000, 1600, 1250, 1000, 800, 500, 400, 250, 200, 100, and 50 Hz. If you attempt to set a frequency that is not listed here, the nearest frequency from this list will be used.

Hardware PWM Pins


The exact frequency may be set when using hardware PWM pins. The same PWM channel is available on multiple GPIO. The latest frequency and duty cycle setting will be used by all GPIO pins which share a PWM channel.

BCM Pin	PWM Channel	Raspberry Pi Version
12	0	All models except A and B
13	1	All models except A and B
18	0	All models
19	1	All models except A and B
40	0	Compute module only
41	1	Compute module only
45	1	Compute module only
52	0	Compute module only

BCM Pin	PWM Channel	Raspberry Pi Version
53	1	Compute module only


Schematics for DC Fan Control

Below are hardware schematics that enable controlling direct current (DC) fans from the PWM output from Mycodo. PWM output controlling a 12-volt DC fan (such as a PC fan)

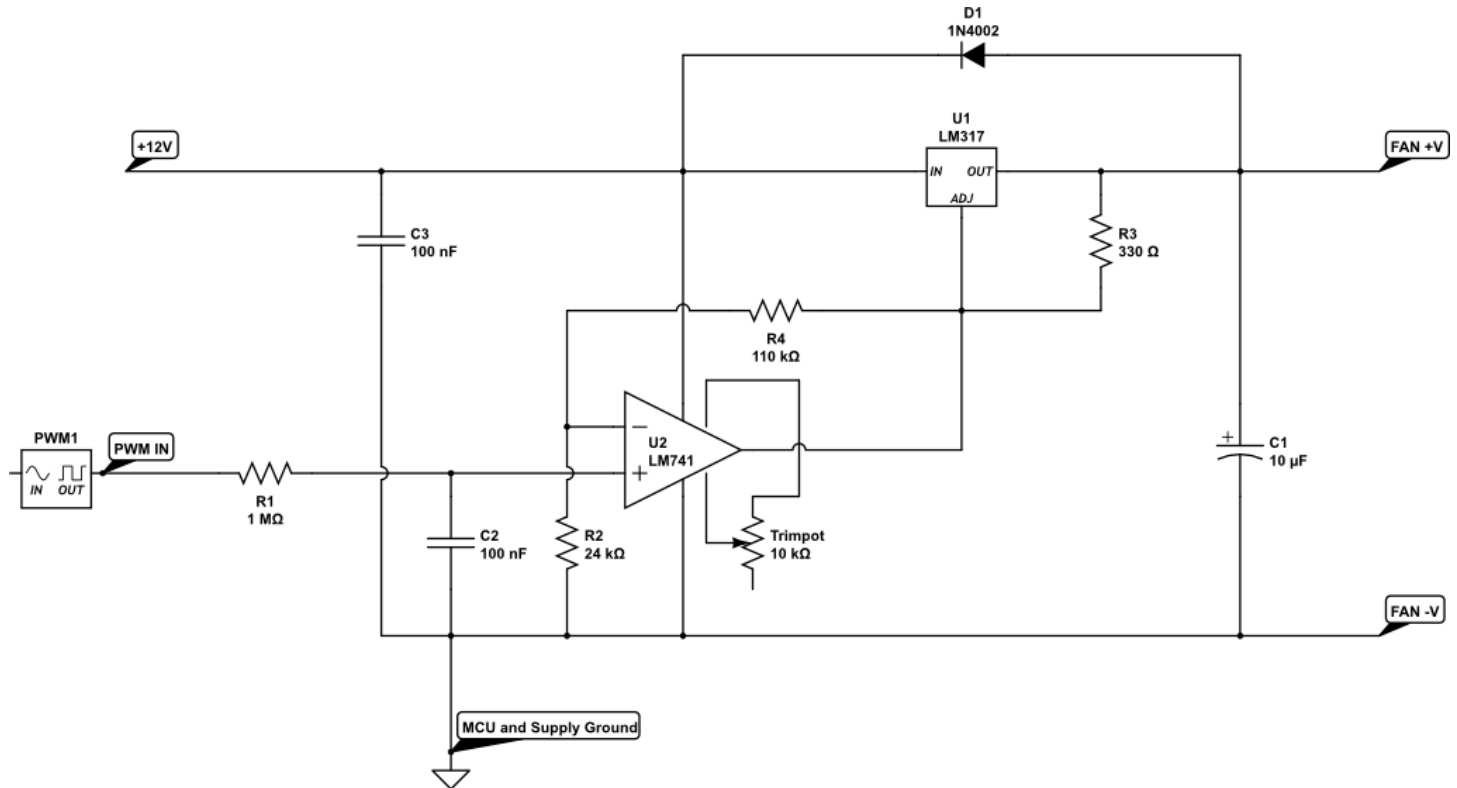


Schematics for AC Modulation


Below are hardware schematics that enable the modulation of alternating current (AC) from the PWM output from Mycodo. PWM output modulating alternating current (AC) at 1% duty cycle

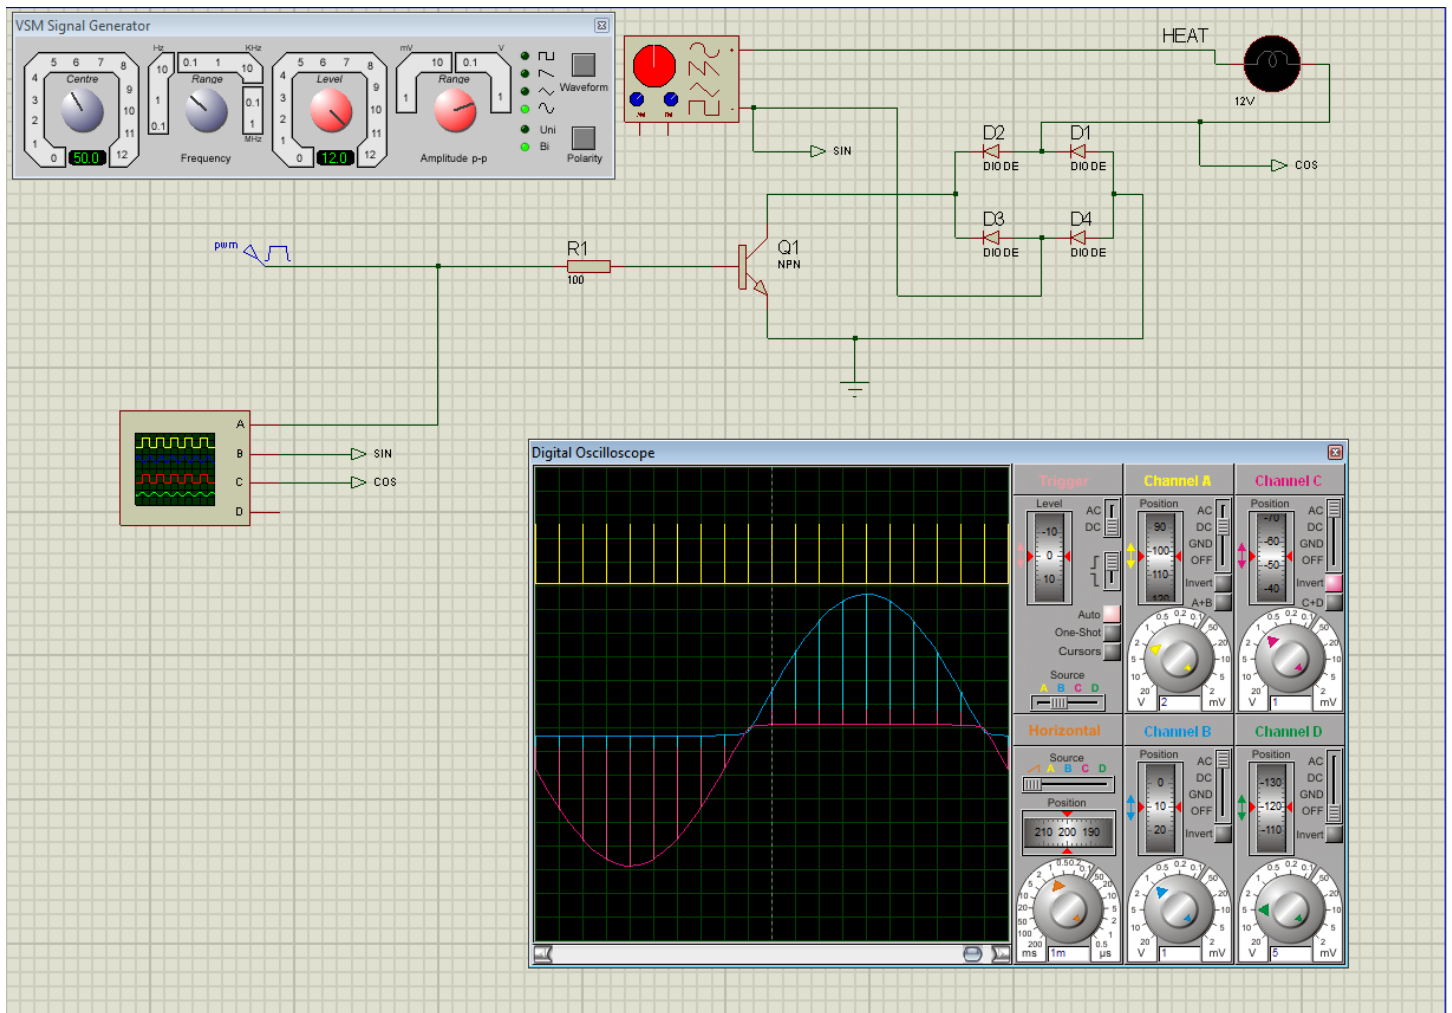

PWM output modulating alternating current (AC) at 50% duty cycle

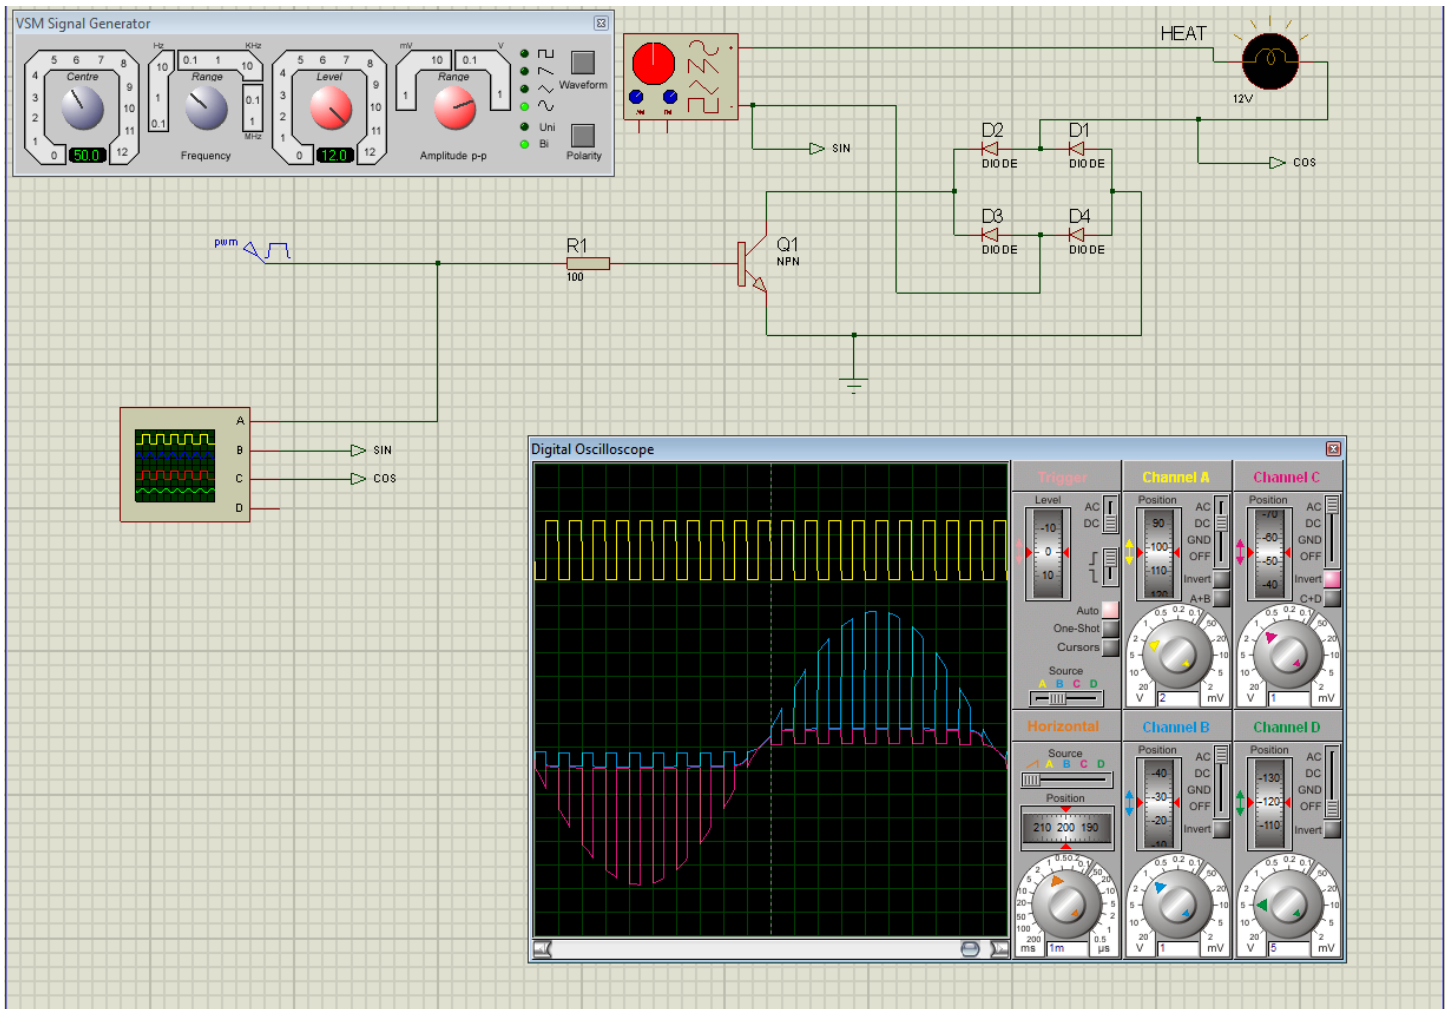

PWM output modulating alternating current (AC) at 99% duty cycle

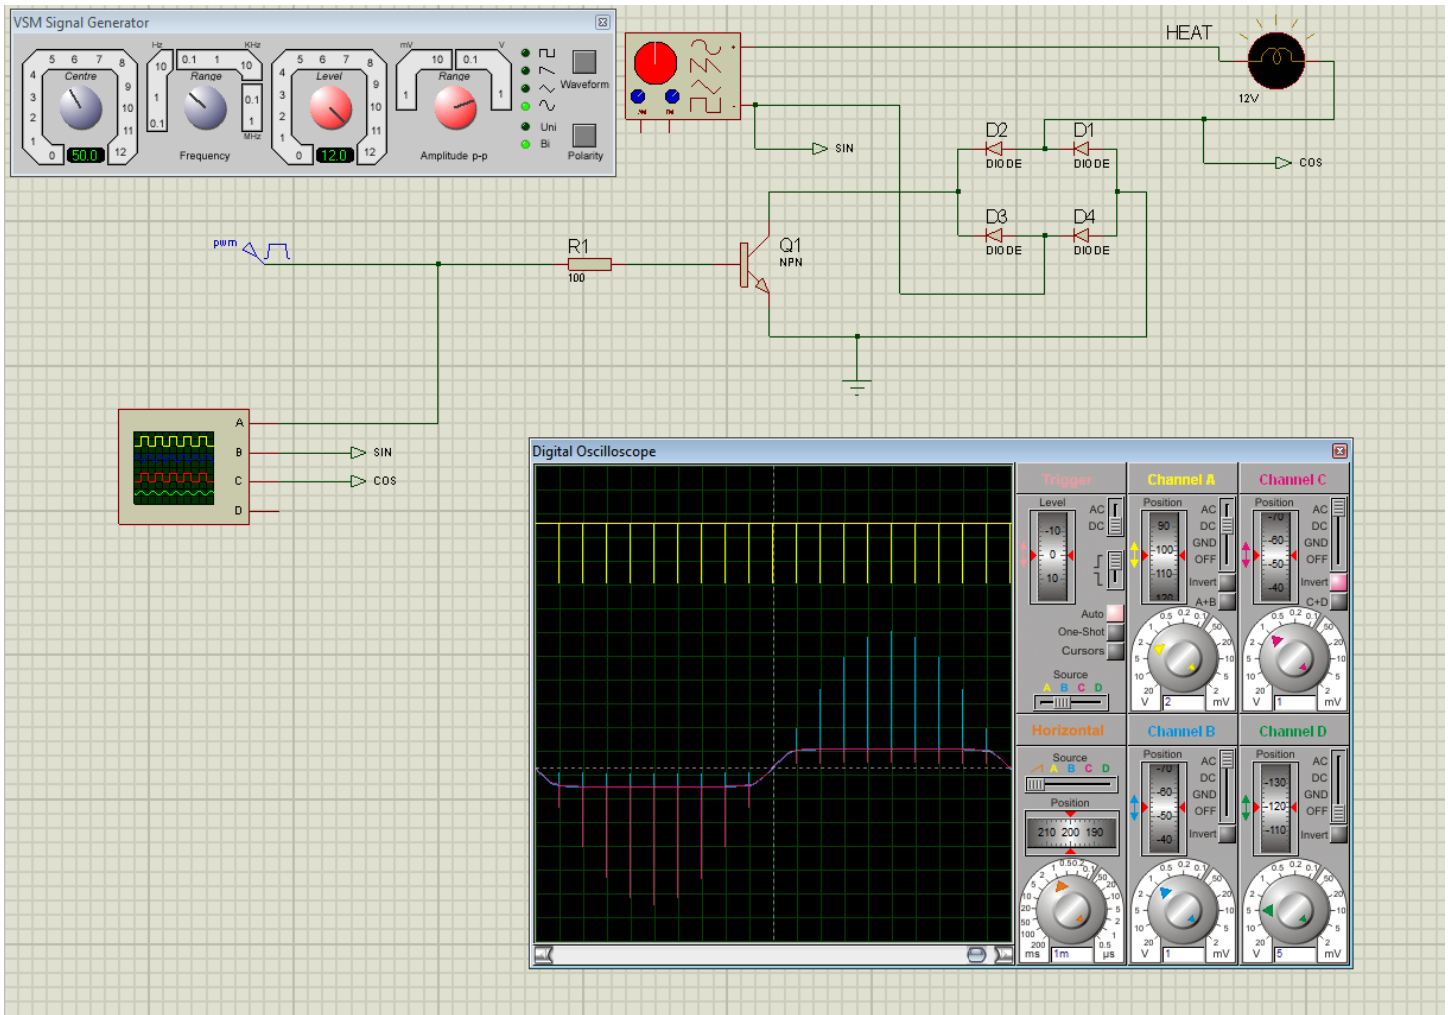

Relays

Relays are electromechanical or solid-state devices that enable a small voltage signal (such as from a microprocessor) to activate a much larger voltage, without exposing the low-voltage system to the dangers of the higher voltage.

Add and configure outputs in the Output tab. Outputs must be properly set up before PID regulation can be achieved.

Wired

To set up a wired relay, set the “GPIO Pin” to the BCM GPIO number of each pin that activates each relay. *On Trigger* should be set to the signal that activates the relay (the device attached to the relay turns on). If your relay activates when the potential across the coil is 0-volts, set *On Trigger* to “Low”, otherwise if your relay activates when the potential across the coil is 3.3-volts (or whatever switching voltage you are using, if not being driven by the GPIO pin), set it to “High”.

Wireless

Certain 315/433 MHz wireless relays may be used, however you will need to set the pin of the transmitter (using BCM numbering), pulse length, bit length, protocol, on command, and off command. To determine your On and Off commands, connect a 315/433 MHz receiver to your Pi, then run the receiver script, below, replacing 17 with the pin your receiver is connected to (using BCM numbering), and press one of the buttons on your remote (either on or off) to detect the numeric code associated with that button.

```
sudo ~/Mycodo/env/bin/python ~/Mycodo/mycodo/devices/wireless_rpi_rf.py -d 2 -g 17
```

433 MHz wireless relays have been successfully tested with SMAKN 433MHz RF Transmitters/Receivers and Etekcitcity Wireless Remote Control Electrical Outlets (see Issue 88 for more information). If you have a 315/433 MHz transmitter/receiver and a wireless relay that does not work with the current code, submit a new issue with details of your hardware.

Command

Another option for output control is to execute a terminal command when the output is turned on, off, or a duty cycle. Commands will be executed as the user 'root'.

Wireless and Command Output Note: Since the wireless protocol only allows 1-way communication to 315/433 MHz devices, wireless relays are assumed to be off until they are turned on, and therefore will appear red (off) when added. If a wireless relay is turned off or on outside Mycodo (by a remote, for instance), Mycodo will **not** be able to determine the state of the relay and will indicate whichever state the relay was last. This is, if Mycodo turns the wireless relay on, and a remote is used to turn the relay off, Mycodo will still assume the relay is on.

Pumps

Currently, only one pump is supported, the Atlas Scientific EZO-PMP peristaltic pump.

Function

Setup -> Function

Functions couple Inputs with Outputs to perform specific tasks. For example, this could be regulation of temperature with a temperature sensor and heater with a PID Controller.

PID Controller

A proportional-derivative-integral (PID) controller is a control loop feedback mechanism used throughout industry for controlling systems. It efficiently brings a measurable condition, such as the temperature, to a desired state and maintains it there with little overshoot and oscillation. A well-tuned PID controller will raise to the setpoint quickly, have minimal overshoot, and maintain the setpoint with little oscillation.

PID settings may be changed while the PID is activated and the new settings will take effect immediately. If settings are changed while the controller is paused, the values will be used once the controller resumes operation.

Setting	Description
Activate/Deactivate	Turn a particular PID controller on or off.
Pause	When paused, the control variable will not be updated and the PID will not turn on the associated outputs. Settings can be changed without losing current PID output values.
Hold	When held, the control variable will not be updated but the PID will turn on the associated outputs, Settings can be changed without losing current PID output values.
Resume	Resume a PID controller from being held or paused.
Direction	This is the direction that you wish to regulate. For example, if you only require the temperature to be raised, set this to "Up," but if you require regulation up and down, set this to "Both."
Period	This is the duration between when the PID acquires a measurement, the PID is updated, and the output is modulated.
Start Offset (seconds)	Wait this duration before attempting the first calculation/measurement.
Max Age	The time (in seconds) that the sensor measurement age is required to be less than. If the measurement is not younger than this age, the measurement is thrown out and the PID will not actuate the output. This is a safety measure to ensure the PID is only using recent measurements.
Setpoint	This is the specific point you would like the environment to be regulated at. For example, if you would like the humidity regulated to 60%, enter 60.
Band (+/- Setpoint)	Hysteresis option. If set to a non-0 value, the setpoint will become a band, which will be between the band_max=setpoint+band and band_min=setpoint-band. If Raising, the PID will raise above band_max, then wait until the condition falls below band_min to resume regulation. If Lowering, the PID will lower below band_min, then wait until the condition rises above band_max to resume regulating. If set to Both, regulation will only occur to the outside min and max of the band, and cease when within the band. Set to 0 to disable Hysteresis.


Setting	Description
Store Lower as Negative	Checking this will store all output variables (PID and output duration/duty cycle) as a negative values in the measurement database. This is useful for displaying graphs that indicate whether the PID is currently lowering or raising. Disable this if you desire all positive values to be stored in the measurement database.
K _P Gain	Proportional coefficient (non-negative). Accounts for present values of the error. For example, if the error is large and positive, the control output will also be large and positive.
K _I Gain	Integral coefficient (non-negative). Accounts for past values of the error. For example, if the current output is not sufficiently strong, the integral of the error will accumulate over time, and the controller will respond by applying a stronger action.
K _D Gain	Derivative coefficient (non-negative). Accounts for predicted future values of the error, based on its current rate of change.
Integrator Min	The minimum allowed integrator value, for calculating Ki_total: (Ki_total = Ki * integrator; and PID output = Kp_total + Ki_total + Kd_total)
Integrator Max	The maximum allowed integrator value, for calculating Ki_total: (Ki_total = Ki * integrator; and PID output = Kp_total + Ki_total + Kd_total)
Output (Raise)	This is the output that will cause the particular environmental condition to rise. In the case of raising the temperature, this may be a heating pad or coil.
Min Duration (raise)	This is the minimum that the PID output must be before the Up Output turns on. If the PID output exceeds this minimum, the Up Output will turn on for the PID output number of seconds.
Max Duration (raise)	This is the maximum duration the Up Output is allowed to turn on for. If the PID output exceeds this number, the Up Output will turn on for no greater than this duration of time.
Output (Lower)	This is the output that will cause the particular environmental condition to lower. In the case of lowering the CO ₂ , this may be an exhaust fan.
Min Duration (lower)	This is the minimum that the PID output must be before the Down Output turns on. If the PID output exceeds this minimum, the Down Output will turn on for the PID output number of seconds.
Max Duration (lower)	This is the maximum duration the Down Output is allowed to turn on for. if the PID output exceeds this number, the Down Output will turn on for no greater than this duration of time.
Setpoint Tracking Method	Set a method to change the setpoint over time.

PID Autotune

The Autotune feature is useful for determining appropriate K_p, K_i, and K_d gains of a PID controller. The autotuner will manipulate an output and measure the response in the environment being measured by a sensor. It will take several cycles to determine the gains according to several rules. In order to use this feature, the PID controller must be properly configured, and a Noise Band and Outstep selected, then select “Start Autotune”. The output of the autotuner will appear in the daemon log (Config -> Mycodo Logs -> Daemon). While the autotune is being performed, it is recommended to create a graph that includes the Input, Output, and PID Setpoint/Output in order to see what the PID Autotuner is doing and to notice any issues. If your autotune is taking a long time to complete, there may not be enough stability in the system being manipulated to calculate a reliable set of PID gains. This may be because there are too many disturbances to the system, or conditions are changing too rapidly to acquire consistent measurement oscillations. If this is the case, try modifying your system to reduce disturbances. Once the autotune successfully completes, disturbances may be reintroduced in order to further tune the PID controller to handle them.

Setting	Description
Noise Band	This is the amount above the setpoint the measured condition must reach before the output turns off. This is also how much below the setpoint the measured condition must fall before the output turns back on.
Outstep	This is how many seconds the output will turn on every PID Period. For instance, to autotune with 50% power, ensure the Outstep is half the value of the PID Period.

Typical graph output will look like this:

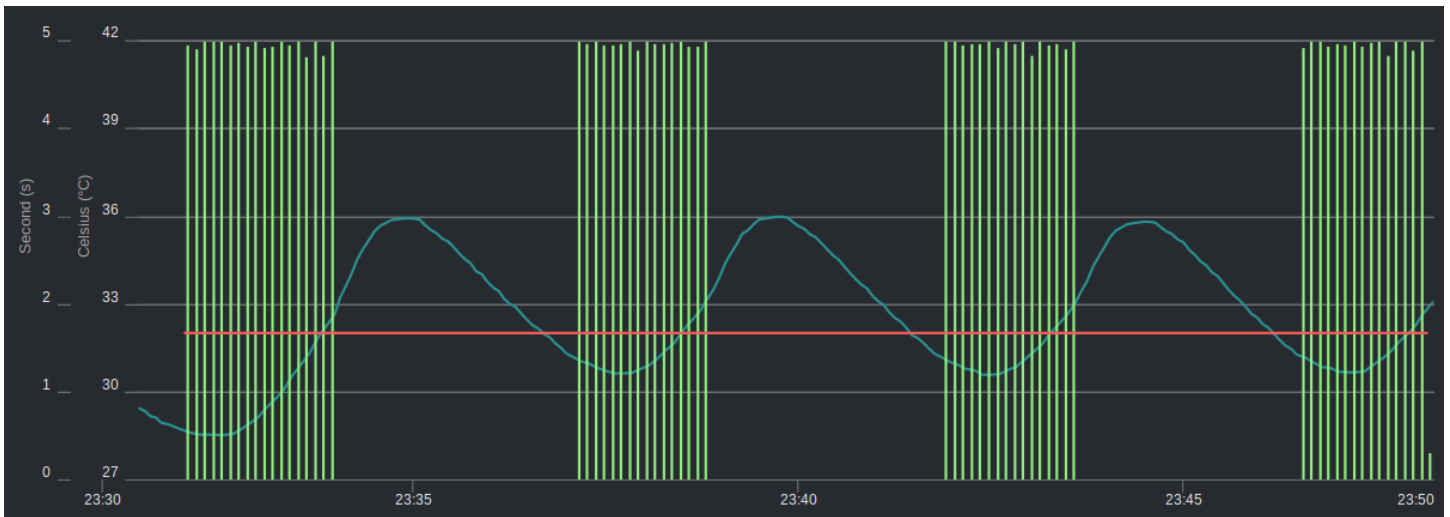

And typical Daemon Log output will look like this:

```
2018-08-04 23:32:20,876 - mycodo.pid_3b533dff - INFO - Activated in 187.2 ms
2018-08-04 23:32:20,877 - mycodo.pid_autotune - INFO - PID Autotune started
2018-08-04 23:33:50,823 - mycodo.pid_autotune - INFO -
2018-08-04 23:33:50,830 - mycodo.pid_autotune - INFO - Cycle: 19
2018-08-04 23:33:50,831 - mycodo.pid_autotune - INFO - switched state: relay step down
2018-08-04 23:33:50,832 - mycodo.pid_autotune - INFO - input: 32.52
2018-08-04 23:36:00,854 - mycodo.pid_autotune - INFO -
2018-08-04 23:36:00,860 - mycodo.pid_autotune - INFO - Cycle: 45
2018-08-04 23:36:00,862 - mycodo.pid_autotune - INFO - found peak: 34.03
2018-08-04 23:36:00,863 - mycodo.pid_autotune - INFO - peak count: 1
2018-08-04 23:37:20,802 - mycodo.pid_autotune - INFO -
2018-08-04 23:37:20,809 - mycodo.pid_autotune - INFO - Cycle: 61
2018-08-04 23:37:20,810 - mycodo.pid_autotune - INFO - switched state: relay step up
2018-08-04 23:37:20,811 - mycodo.pid_autotune - INFO - input: 31.28
2018-08-04 23:38:30,867 - mycodo.pid_autotune - INFO -
2018-08-04 23:38:30,874 - mycodo.pid_autotune - INFO - Cycle: 75
2018-08-04 23:38:30,876 - mycodo.pid_autotune - INFO - found peak: 32.17
2018-08-04 23:38:30,878 - mycodo.pid_autotune - INFO - peak count: 2
2018-08-04 23:38:40,852 - mycodo.pid_autotune - INFO -
2018-08-04 23:38:40,858 - mycodo.pid_autotune - INFO - Cycle: 77
2018-08-04 23:38:40,860 - mycodo.pid_autotune - INFO - switched state: relay step down
2018-08-04 23:38:40,861 - mycodo.pid_autotune - INFO - input: 32.85
2018-08-04 23:40:50,834 - mycodo.pid_autotune - INFO -
2018-08-04 23:40:50,835 - mycodo.pid_autotune - INFO - Cycle: 103
2018-08-04 23:40:50,836 - mycodo.pid_autotune - INFO - found peak: 33.93
2018-08-04 23:40:50,836 - mycodo.pid_autotune - INFO - peak count: 3
2018-08-04 23:42:05,799 - mycodo.pid_autotune - INFO -
2018-08-04 23:42:05,805 - mycodo.pid_autotune - INFO - Cycle: 118
2018-08-04 23:42:05,806 - mycodo.pid_autotune - INFO - switched state: relay step up
2018-08-04 23:42:05,807 - mycodo.pid_autotune - INFO - input: 31.27
2018-08-04 23:43:15,816 - mycodo.pid_autotune - INFO -
2018-08-04 23:43:15,822 - mycodo.pid_autotune - INFO - Cycle: 132
2018-08-04 23:43:15,824 - mycodo.pid_autotune - INFO - found peak: 32.09
2018-08-04 23:43:15,825 - mycodo.pid_autotune - INFO - peak count: 4
2018-08-04 23:43:25,790 - mycodo.pid_autotune - INFO -
2018-08-04 23:43:25,796 - mycodo.pid_autotune - INFO - Cycle: 134
2018-08-04 23:43:25,797 - mycodo.pid_autotune - INFO - switched state: relay step down
2018-08-04 23:43:25,798 - mycodo.pid_autotune - INFO - input: 32.76
2018-08-04 23:45:30,802 - mycodo.pid_autotune - INFO -
2018-08-04 23:45:30,808 - mycodo.pid_autotune - INFO - Cycle: 159
```

```

2018-08-04 23:45:30,810 - mycodo.pid_autotune - INFO - found peak: 33.98
2018-08-04 23:45:30,811 - mycodo.pid_autotune - INFO - peak count: 5
2018-08-04 23:45:30,812 - mycodo.pid_autotune - INFO -
2018-08-04 23:45:30,814 - mycodo.pid_autotune - INFO - amplitude: 0.90999999999999989
2018-08-04 23:45:30,815 - mycodo.pid_autotune - INFO - amplitude deviation: 0.06593406593406595
2018-08-04 23:46:40,851 - mycodo.pid_autotune - INFO -
2018-08-04 23:46:40,857 - mycodo.pid_autotune - INFO - Cycle: 173
2018-08-04 23:46:40,858 - mycodo.pid_autotune - INFO - switched state: relay step up
2018-08-04 23:46:40,859 - mycodo.pid_autotune - INFO - input: 31.37
2018-08-04 23:47:55,860 - mycodo.pid_autotune - INFO -
2018-08-04 23:47:55,866 - mycodo.pid_autotune - INFO - Cycle: 188
2018-08-04 23:47:55,868 - mycodo.pid_autotune - INFO - found peak: 32.36
2018-08-04 23:47:55,869 - mycodo.pid_autotune - INFO - peak count: 6
2018-08-04 23:47:55,870 - mycodo.pid_autotune - INFO -
2018-08-04 23:47:55,871 - mycodo.pid_autotune - INFO - amplitude: 0.91499999999999979
2018-08-04 23:47:55,872 - mycodo.pid_autotune - INFO - amplitude deviation: 0.032786885245900406
2018-08-04 23:47:55,873 - mycodo.pid_3b533dff - INFO - time: 16 min
2018-08-04 23:47:55,874 - mycodo.pid_3b533dff - INFO - state: succeeded
2018-08-04 23:47:55,874 - mycodo.pid_3b533dff - INFO -
2018-08-04 23:47:55,875 - mycodo.pid_3b533dff - INFO - rule: ziegler-nichols
2018-08-04 23:47:55,876 - mycodo.pid_3b533dff - INFO - Kp: 0.40927018474290117
2018-08-04 23:47:55,877 - mycodo.pid_3b533dff - INFO - Ki: 0.05846588600007114
2018-08-04 23:47:55,879 - mycodo.pid_3b533dff - INFO - Kd: 0.7162385434443115
2018-08-04 23:47:55,880 - mycodo.pid_3b533dff - INFO -
2018-08-04 23:47:55,881 - mycodo.pid_3b533dff - INFO - rule: tyreus-luyben
2018-08-04 23:47:55,887 - mycodo.pid_3b533dff - INFO - Kp: 0.3162542336649691
2018-08-04 23:47:55,889 - mycodo.pid_3b533dff - INFO - Ki: 0.010165091543194185
2018-08-04 23:47:55,890 - mycodo.pid_3b533dff - INFO - Kd: 0.7028026111719073
2018-08-04 23:47:55,891 - mycodo.pid_3b533dff - INFO -
2018-08-04 23:47:55,892 - mycodo.pid_3b533dff - INFO - rule: ciancone-marlin
2018-08-04 23:47:55,892 - mycodo.pid_3b533dff - INFO - Kp: 0.21083615577664605
2018-08-04 23:47:55,893 - mycodo.pid_3b533dff - INFO - Ki: 0.06626133746674728
2018-08-04 23:47:55,893 - mycodo.pid_3b533dff - INFO - Kd: 0.3644161687558038
2018-08-04 23:47:55,894 - mycodo.pid_3b533dff - INFO -
2018-08-04 23:47:55,894 - mycodo.pid_3b533dff - INFO - rule: pessen-integral
2018-08-04 23:47:55,895 - mycodo.pid_3b533dff - INFO - Kp: 0.49697093861638
2018-08-04 23:47:55,895 - mycodo.pid_3b533dff - INFO - Ki: 0.0887428626786794
2018-08-04 23:47:55,896 - mycodo.pid_3b533dff - INFO - Kd: 1.04627757151908
2018-08-04 23:47:55,896 - mycodo.pid_3b533dff - INFO -
2018-08-04 23:47:55,897 - mycodo.pid_3b533dff - INFO - rule: some-overshoot
2018-08-04 23:47:55,898 - mycodo.pid_3b533dff - INFO - Kp: 0.23191977135431066
2018-08-04 23:47:55,898 - mycodo.pid_3b533dff - INFO - Ki: 0.03313066873337365
2018-08-04 23:47:55,899 - mycodo.pid_3b533dff - INFO - Kd: 1.0823160212047374
2018-08-04 23:47:55,899 - mycodo.pid_3b533dff - INFO -
2018-08-04 23:47:55,900 - mycodo.pid_3b533dff - INFO - rule: no-overshoot
2018-08-04 23:47:55,900 - mycodo.pid_3b533dff - INFO - Kp: 0.1391518628125864
2018-08-04 23:47:55,901 - mycodo.pid_3b533dff - INFO - Ki: 0.01987840124002419
2018-08-04 23:47:55,901 - mycodo.pid_3b533dff - INFO - Kd: 0.6493896127228425
2018-08-04 23:47:55,902 - mycodo.pid_3b533dff - INFO -
2018-08-04 23:47:55,902 - mycodo.pid_3b533dff - INFO - rule: brewing
2018-08-04 23:47:55,903 - mycodo.pid_3b533dff - INFO - Kp: 5.566074512503456
2018-08-04 23:47:55,904 - mycodo.pid_3b533dff - INFO - Ki: 0.11927040744014512
2018-08-04 23:47:55,904 - mycodo.pid_3b533dff - INFO - Kd: 4.101408080354794

```

Conditional

Conditional controllers are used to perform certain actions based on whether a conditional statement is true, which is typically based on a measurement or GPIO state.

Conditional Setup Guide

Python 3 is the environment that these conditionals will be executed. The following

Function	Description
<code>measure("{ID}")</code>	Returns a measurement for the Condition with ID.
<code>run_action("{ID}")</code>	Executes the Action with ID.
<code>run_all_actions()</code>	Executes all actions.

Since the Python code contained in the Conditional Statement must be formatted properly, it's best to familiarize yourself with the basics of Python.

Note that there are two different IDs in use here, one set of IDs are for the measurements, under the **Conditions** section of the Conditional, and one set of IDs are for the Actions, under the **Actions** section of the Conditional. Read all of this section, including the examples, below, to fully understand how to configure a conditional properly.

IMPORTANT: If a measurement hasn't been acquired within the Max Age that is set, "None" will be returned when `measure("{ID}")` is called in the code. It is very important that you account for this. All examples below incorporate a test for the measurement being None, and this should not be removed. If an error occurs (such as if the statement resolves to comparing None to a numerical value, such as "if None < 23"), then the code will stop there and an error will be logged in the daemon log. Accounting for None is useful for determining if an Input is no longer acquiring measurements (e.g. dead sensor, malfunction, etc.).

To create a basic conditional, follow these steps, using the numbers in the screenshots, below, that correspond to the numbers in parentheses:

1. Go to the **Setup** -> **Function** page, select "Controller: Conditional", then click **Add**.
2. Next to (1), select "Measurement", then click **Add Condition**.
3. Next to (2), select "Output (Duration)" (or any other action), then click **Add Action**.
4. Select a measurement (3), then click **Save** (4).
5. Select a **Controller** ID (5) for an Output, select either "On" or "Off" for **Then State**, then click **Save** (6).
6. Make note of what your Condition ID (7) is and replace the Condition IDs in the **Conditional Statement** (8) with that ID (notice "bf43a998" in the first image was replaced with "1c487d5e" in the second image), then click **Save** (9).
7. Additionally, you may configure the **Conditional Statement** with more control by utilizing `run_action()` (see the **Advanced Conditional Statement examples**, below, for proper usage).

If your **Conditional Statement** has been formatted correctly, your Conditional will save and it will be ready to activate. If an error is returned, your options will not have been saved. Inspect the error for which line is causing the issue and read the error message itself to try to understand what the problem is and how to fix it. There are an unfathomable number of ways to configure a Conditional, but this should hopefully get you started to developing one that suits your needs.

Note: Mycodo is constantly changing, so the screenshots below may not match what you see exactly. Be sure to read this entire section of the manual to understand how to use Conditionals.

The screenshot shows the Mycodo Conditional setup interface. At the top, there's a 'Conditional' tab with a status indicator '[Conditional] Inactive' and an 'Activate' button. Below the tab are buttons for 'Save', 'Delete', 'Test All Actions', 'Up', and 'Down'. The main area is divided into two sections: 'Conditional Statement' and 'Period (seconds) / Start Offset (seconds)'. The 'Conditional Statement' section contains a text area with a Python code snippet:

```
# This is an example. Change the Condition IDs/code to suit your needs.
# (bf43a998) is not None:
if (bf43a998) < 23:
    print(1) # If True, trigger actions
```

. The 'Period (seconds)' and 'Start Offset (seconds)' fields are set to 60 and 10 respectively. Below these fields is a 'Refractory Period (seconds)' field set to 0. At the bottom, there are two rows of dropdown menus labeled 'Select One' and 'Add Condition'/'Add Action'. Red arrows with numbers 1 and 2 point to the 'Add Condition' and 'Add Action' buttons respectively.

Simple Conditional Statement examples:

Each measure("{ID}") will return the most recent measurement obtained from that particular measurement under the Conditions section of the Conditional, as long as it's within the set Max Age.

```
# Example 1, no measurement, useful to notify by email when an Input stops working
if measure("{asdf1234}") is None:
    run_all_actions()
```

```
# Example 2, test two measurements
measure_1 = measure("{asdf1234}")
measure_2 = measure("{hjk15678}")
if None not in [measure_1, measure_2]:
    if measure_1 < 20 and measure_2 > 10:
        run_all_actions()
```

```
# Example 3, test two measurements and sum of measurements
measure_1 = measure("{asdf1234}")
measure_2 = measure("{hjk15678}")
if None not in [measure_1, measure_2]:
    sum = measure_1 + measure_2
    if measure_1 > 2 and 10 < measure_2 < 23 and sum < 30.5:
        run_all_actions()
```

```
# Example 4, combine into one conditional
measurement = measure("{asdf1234}")
if measurement != None and 20 < measurement < 30:
    run_all_actions()
```

```
# Example 5, test two measurements and convert Edge Input from 0 or 1 to True or False
measure_1 = measure("{asdf1234}")
measure_2 = measure("{hjk15678}")
if None not in [measure_1, measure_2]:
    if bool(measure_1) and measure_2 > 10:
        run_all_actions()
```

```
# Example 6, test measurement with "or" and a rounded measurement
measure_1 = measure("{asdf1234}")
measure_2 = measure("{hjk15678}")
if None not in [measure_1, measure_2]:
    if measure_1 > 20 or int(round(measure_2)) in [20, 21, 22]:
        run_all_actions()
```

Advanced Conditional Statement examples:

These examples expand on the simple examples, above, by activating specific actions. The following examples will reference actions with IDs that can be found under the Actions section of the Conditional. Two example action ID will be used:

“qwer1234” and “uiop5678”. Additionally, `run_all_actions()` is used here, which will run all actions in the order in which they appear in the Actions section of the Conditional.

```
# Example 1
measurement = measure("{asdf1234}")
if measurement is None:
    run_action("{qwer1234}")
elif measurement > 23:
    run_action("{uiop5678}")
else:
    run_all_actions()

# Example 2, test two measurements
measure_1 = measure("{asdf1234}")
measure_2 = measure("{hijkl5678}")
if None not in [measure_1, measure_2]:
    if measure_1 < 20 and measure_2 > 10:
        run_action("{qwer1234}")
        run_action("{uiop5678}")

# Example 3, test two measurements and sum of measurements
measure_1 = measure("{asdf1234}")
measure_2 = measure("{hijkl5678}")
if None not in [measure_1, measure_2]:
    sum = measure_1 + measure_2
    if measure_1 > 2 and 10 < measure_2 < 23 and sum < 30.5:
        run_action("{qwer1234}")
    else:
        run_action("{uiop5678}")

# Example 4, combine into one conditional
measurement = measure("{asdf1234}")
if measurement != None and 20 < measurement < 30:
    run_action("{uiop5678}")

# Example 5, test two measurements and convert Edge Input from 0 or 1 to True or False
measure_1 = measure("{asdf1234}")
measure_2 = measure("{hijkl5678}")
if None not in [measure_1, measure_2]:
    if bool(measure_1) and measure_2 > 10:
        run_all_actions()

# Example 6, test measurement with "or" and a rounded measurement
measure_1 = measure("{asdf1234}")
measure_2 = measure("{hijkl5678}")
if None not in [measure_1, measure_2]:
    if measure_1 > 20 or int(round(measure_2)) in [20, 21, 22]:
        run_action("{qwer1234}")
        if measure_1 > 30:
            run_action("{uiop5678}")
```

Before activating any conditionals, it's advised to thoroughly explore all possible scenarios and plan a configuration that eliminates conflicts. Some devices or outputs may respond atypically or fail when switched on and off in rapid succession. Therefore, trial run your configuration before connecting devices to any outputs.

Conditional Options

Check if the latest measurement is above or below the set value.

Setting	Description
Conditional Statement	The text string that includes device IDs enclosed in curly brackets ({}) that will be converted to the actual measurement before being evaluated by python to determine if it is True or False. If True, the associated actions will be executed.
Period (seconds)	The period (seconds) between conditional checks.
Refractory Period (seconds)	The minimum duration (seconds) to wait after a conditional has been triggered to begin evaluating the conditional again.

Conditional Condition Options

Conditional Conditions are variables that can be used within the Conditional Statement.

Condition	Description
Measurement	Acquires the latest measurement from an Input or device. Set Max Age (seconds) to restrict how long to accept values. If the latest value is older than this duration, "None" is returned.
GPIO State	Acquires the current GPIO state and returns True/1 if HIGH or False/0 if LOW. If the latest value is older than this duration, "None" is returned.
Max Age (seconds)	The minimum age (seconds) the measurement can be. If the last measurement is older than this, "None" will be returned instead of a measurement.

Trigger

A Trigger Controller will execute actions when events are triggered.

Output (On/Off) Options

Monitor the state of an output.

Setting	Description
If Output	The Output to monitor for a change of state.
If State	If the state of the output changes to On or Off the conditional will trigger. If "On (any duration) is selected, th trigger will occur no matter how long the output turns on for, whereas if only "On" is selected, the conditional will trigger only when the output turns on for a duration of time equal to the set "Duration (seconds)".
If Duration (seconds)	If "On" is selected, an optional duration (seconds) may be set that will trigger the conditional only if the Output is turned on for this specific duration.

Output (PWM) Options

Monitor the state of a PWM output.

Setting	Description
If Output	The Output to monitor for a change of state.
If State	If the duty cycle of the output is greater than,less than, or equal to the set value, trigger the Conditional Actions.
If Duty Cycle (%)	The duty cycle for the Output to be checked against.

Edge Options

Monitor the state of a pin for a rising and/or falling edge.

Setting	Description
If Edge Detected	The conditional will be triggered if a change in state is detected, either Rising when the state changes from LOW (0 volts) to HIGH (3.5 volts) or Falling when the state changes from HIGH (3.3 volts) to LOW (0 volts), or Both (Rising and Falling).

Run PWM Method Options

Select a Duration Method and this will set the selected PWM Output to the duty cycle specified by the method.

Setting	Description
Duration Method	Select which Method to use.
PWM Output	Select which PWM Output to use.
Period (seconds)	Select the interval of time to calculate the duty cycle, then apply to the PWM Output.
Trigger Every Period	Trigger Conditional Actions every period.
Trigger when Activated	Trigger Conditional Actions when the Conditional is activated.

Sunrise/Sunset Options

Trigger events at sunrise or sunset (or a time offset of those), based on latitude and longitude.

Setting	Description
Rise or Set	Select which to trigger the conditional, at sunrise or sunset.
Latitude (decimal)	Latitude of the sunrise/sunset, using decimal format.
Longitude (decimal)	Longitude of the sunrise/sunset, using decimal format.
Zenith	The Zenith angle of the sun.
Date Offset (days)	Set a sunrise/sunset offset in days (positive or negative).
Time Offset (minutes)	Set a sunrise/sunset offset in minutes (positive or negative).

Timer (Duration) Options

Run a timer that triggers Conditional Actions every period.

Setting	Description
Period (seconds)	The period of time between triggering Conditional Actions.
Start Offset (seconds)	Set this to start the first trigger a number of seconds after the Conditional is activated.

Timer (Daily Time Point) Options

Run a timer that triggers Conditional Actions at a specific time every day.

Setting	Description
Start Time (HH:MM)	Set the time to trigger Conditional Actions, in the format “HH:MM”, with HH denoting hours, and MM denoting minutes. Time is in 24-hour format.

Timer (Daily Time Span) Options

Run a timer that triggers Conditional Actions at a specific period if it's between the set start and end times. For example, if the Start Time is set to 10:00 and End Time set to 11:00 and Period set to 120 seconds, the Conditional Actions will trigger every 120 seconds when the time is between 10 AM and 11 AM.

This may be useful, for instance, if you desire an Output to remain on during a particular time period and you want to

prevent power outages from interrupting the cycle (which a simple Time Point Timer could not prevent against because it only triggers once at the Start Time). By setting an Output to turn the lights on every few minutes during the Start -> End period, it ensured the Output remains on during this period.

Setting	Description
Start Time (HH:MM)	Set the start time to trigger Conditional Actions, in the format “HH:MM”, with HH denoting hours, and MM denoting minutes. Time is in 24-hour format.
End Time (HH:MM)	Set the end time to trigger Conditional Actions, in the format “HH:MM”, with HH denoting hours, and MM denoting minutes. Time is in 24-hour format.
Period (seconds)	The period of time between triggering Conditional Actions.

Function Actions

These are the actions that can be added to Function controllers (i.e. Conditional, Trigger).

Setting	Description
Actions: Pause	Pause executing actions for a duration of time (seconds).
Camera: Capture Photo	Capture a photo with the selected camera.
Create Note	Create a note containing the conditional statement and actions, using a particular tag.
Controller: Activate	Activate a particular controller.
Controller: Deactivate	Deactivate a particular controller.
Email Notification	Send an email containing the conditional statement and actions.
Execute Command	Execute a command in the linux shell (as user mycodo).
LCD: Backlight	Turn the LCD backlight on or off. Note: Only some LCDs are supported.
LCD: Flash	Start or stop the LCD flashing to indicate an alert. Note: Only some LCDs are supported.
Output: Duration	Turn a output on, off, or on for a duration of time.
Output: Duty Cycle	Turn a PWM output off or on for a duty cycle.
PID: Pause	Pause a particular PID controller.
PID: Hold	Hold a particular PID controller.
PID: Resume	Resume a particular PID controller.
PID: Set Method	Set the Method of a particular PID controller.
PID: Set Setpoint	Set the Setpoint of a particular PID controller.

LCDs

Setup -> LCD

Data may be output to a liquid crystal display (LCD) for easy viewing. Please see LCD Displays for specific information regarding compatibility.

There may be multiple displays created for each LCD. If there is only one display created for the LCD, it will refresh at the set period. If there is more than one display, it will cycle from one display to the next every set period.

Setting	Description
Reset Flashing	If the LCD is flashing to alert you because it was instructed to do so by a triggered Conditional Statement, use this button to stop the flashing.
Type	Select either a 16x2 or 20x4 character LCD display.
I2C Address	Select the I2C to communicate with the LCD.
Period	This is the period of time (in seconds) between redrawing the LCD with new data or switching to the next set of displays (if multiple displays are used).
Add Display Set	Add a set of display lines to the LCD.
Display Line #	Select which measurement to display on each line of the LCD.
Max Age (seconds)	The maximum age the measurement is allowed to be. If no measurement was acquired in this time frame, the display will indicate “NO DATA”.

Methods

Setup -> Method

Methods enable Setpoint Tracking in PIDs and time-based duty cycle changes in timers. Normally, a PID controller will regulate an environmental condition to a specific setpoint. If you would like the setpoint to change over time, this is called setpoint tracking. Setpoint Tracking is useful for applications such as reflow ovens, thermal cyclers (DNA replication), mimicking natural daily cycles, and more. Methods may also be used to change a duty cycle over time when used with a Run PWM Method Conditional.

Universal Options

These options are shared with several method types.

Setting	Description
Start Time/Date	This is the start time of a range of time.
End Time/Date	This is the end time of a range of time.
Start Setpoint	This is the start setpoint of a range of setpoints.
End Setpoint	This is the end setpoint of a range of setpoints.

Specific Method Options

Time/Date Method

A time/date method allows a specific time/date span to dictate the setpoint. This is useful for long-running methods, that may take place over the period of days, weeks, or months.

Duration Method

A Duration Method allows a **Setpoint** (for PIDs) or **Duty Cycle** (for Conditional) to be set after specific durations of time. Each new duration added will stack, meaning it will come after the previous duration, meaning a newly-added **Start Setpoint** will begin after the previous entry's **End Setpoint**.

If the “Repeat Method” option is used, this will cause the method to repeat once it has reached the end. If this option is used, no more durations may be added to the method. If the repeat option is deleted then more durations may be added. For instance, if your method is 200 seconds total, if the Repeat Duration is set to 600 seconds, the method will repeat 3 times and then automatically turn off the PID or Conditional.

Daily (Time-Based) Method

The daily time-based method is similar to the time/date method, however it will repeat every day. Therefore, it is essential that only the span of one day be set in this method. Begin with the start time at 00:00:00 and end at 23:59:59 (or 00:00:00, which would be 24 hours from the start). The start time must be equal or greater than the previous end time.

Daily (Sine Wave) Method

The daily sine wave method defines the setpoint over the day based on a sinusoidal wave. The sine wave is defined by $y = [A * \sin(B * x + C)] + D$, where A is amplitude, B is frequency, C is the angle shift, and D is the y-axis shift. This method will repeat daily.

Daily (Bezier Curve) Method

A daily Bezier curve method define the setpoint over the day based on a cubic Bezier curve. If unfamiliar with a Bezier curve, it is recommended you use the graphical Bezier curve generator and use the 8 variables it creates for 4 points (each a set of x and y). The x-axis start (x3) and end (x0) will be automatically stretched or skewed to fit within a 24-hour period and this method will repeat daily.

PID Tuning

Function -> PIDs

PID Control Theory

The PID controller is the most common regulatory controller found in industrial settings, for it's ability to handle both simple and complex regulation. The PID controller has three paths, the proportional, integral, and derivative.

The **Proportional** takes the error and multiplies it by the constant K_p , to yield an output value. When the error is large, there will be a large proportional output.

The **Integral** takes the error and multiplies it by K_i , then integrates it ($K_i \cdot 1/s$). As the error changes over time, the integral will continually sum it and multiply it by the constant K_i . The integral is used to remove perpetual error in the control system. If using K_p alone produces an output that produces a perpetual error (i.e. if the sensor measurement never reaches the Set Point), the integral will increase the output until the error decreases and the Set Point is reached.

The **Derivative** multiplies the error by K_d , then differentiates it ($K_d \cdot s$). When the error rate changes over time, the output signal will change. The faster the change in error, the larger the derivative path becomes, decreasing the output rate of change. This has the effect of dampening overshoot and undershoot (oscillation) of the Set Point.

Using temperature as an example, the Process Variable (PV) is the measured temperature, the Setpoint (SP) is the desired temperature, and the Error (e) is the distance between the measured temperature and the desired temperature (indicating if the actual temperature is too hot or too cold and to what degree). The error is manipulated by each of the three PID components, producing an output, called the Manipulated Variable (MV) or Control Variable (CV). To allow control of how much each path contributes to the output value, each path is multiplied by a gain (represented by K_P , K_I , and K_D). By adjusting the gains, the sensitivity of the system to each path is affected. When all three paths are summed, the PID output is produced. If a gain is set to 0, that path does not contribute to the output and that path is essentially turned off.

The output can be used a number of ways, however this controller was designed to use the output to affect the measured value (PV). This feedback loop, with a *properly tuned* PID controller, can achieve a set point in a short period of time, maintain regulation with little oscillation, and respond quickly to disturbance.

Therefor, if one would be regulating temperature, the sensor would be a temperature sensor and the feedback device(s) would be able to heat and cool. If the temperature is lower than the Set Point, the output value would be positive and a heater would activate. The temperature would rise toward the desired temperature, causing the error to decrease and a lower output to be produced. This feedback loop would continue until the error reaches 0 (at which point the output would be 0). If the temperature continues to rise past the Set Point (this is may be acceptable, depending on the degree), the PID would produce a negative output, which could be used by the cooling device to bring the temperature back down, to reduce the error. If the temperature would normally lower without the aid of a cooling device, then the system can be simplified by omitting a cooler and allowing it to lower on its own.

Implementing a controller that effectively utilizes K_P , K_I , and K_D can be challenging. Furthermore, it is often unnecessary. For instance, the K_I and K_D can be set to 0, effectively turning them off and producing the very popular and simple P controller. Also popular is the PI controller. It is recommended to start with only K_P activated, then experiment with K_P and K_I , before finally using all three. Because systems will vary (e.g. airspace volume, degree of insulation, and the degree of impact from the connected device, etc.), each path will need to be adjusted through experimentation to produce an effective output.

Quick Setup Examples

These example setups are meant to illustrate how to configure regulation in particular directions, and not to achieve ideal values to configure your K_P , K_I , and K_D gains. There are a number of online resources that discuss techniques and methods that have been developed to determine ideal PID values (such as [here](#), [here](#), [here](#), [here](#), and [here](#)) and since there are no universal values that will work for every system, it is recommended to conduct your own research to understand the variables and essential to conduct your own experiments to effectively implement them.

Provided merely as an example of the variance of PID values, one of my setups had temperature PID values (up regulation) of $K_P = 30$, $K_I = 1.0$, and $K_D = 0.5$, and humidity PID values (up regulation) of $K_P = 1.0$, $K_I = 0.2$, and $K_D = 0.5$. Furthermore, these values may not have been optimal but they worked well for the conditions of my environmental chamber.

Exact Temperature Regulation

This will set up the system to raise and lower the temperature to a certain level with two regulatory devices (one that heats and one that cools).

Add a sensor, then save the proper device and pin/address for each sensor and activate the sensor.

Add two outputs, then save each GPIO and On Trigger state.

Add a PID, then select the newly-created sensor. Change *Setpoint* to the desired temperature, *Regulate Direction* to “Both”. Set *Raise Output* to the relay attached to the heating device and the *Lower Relay* to the relay attached to the cooling device.

Set $K_P = 1$, $K_I = 0$, and $K_D = 0$, then activate the PID.

If the temperature is lower than the Set Point, the heater should activate at some interval determined by the PID controller until the temperature rises to the set point. If the temperature goes higher than the Set Point (or Set Point + Buffer), the cooling device will activate until the temperature returns to the set point. If the temperature is not reaching the Set Point after a reasonable amount of time, increase the K_P value and see how that affects the system. Experiment with different configurations involving only *Read Interval* and K_P to achieve a good regulation. Avoid changing the K_I and K_D from 0 until a working regulation is achieved with K_P alone.

View graphs in the 6 to 12 hour time span to identify how well the temperature is regulated to the Setpoint. What is meant by well-regulated will vary, depending on your specific application and tolerances. Most applications of a PID controller would like to see the proper temperature attained within a reasonable amount of time and with little oscillation around the Setpoint.

Once regulation is achieved, experiment by reducing K_P slightly (~25%) and increasing K_I by a low amount to start, such as 0.1 (or lower, 0.01), then start the PID and observe how well the controller regulates. Slowly increase K_I until regulation becomes both quick and with little oscillation. At this point, you should be fairly familiar with experimenting with the system and the K_D value can be experimented with once both K_P and K_I have been tuned.

High Temperature Regulation

Often the system can be simplified if two-way regulation is not needed. For instance, if cooling is unnecessary, this can be removed from the system and only up-regulation can be used.

Use the same configuration as the Exact Temperature Regulation example, except change *Regulate Direction* to “Raise” and do not touch the “Down Relay” section.

Configuration Settings

[Gear Icon] -> Configure

The settings menu, accessed by selecting the gear icon in the top-right, then the Configure link, is a general area for various system-wide configuration options.

General Settings

[Gear Icon] -> Configure -> General

Setting	Description
Language	Set the language that will be displayed in the web user interface.
Force HTTPS	Require web browsers to use SSL/HTTPS. Any request to http:// will be redirected to https://.
Hide success alerts	Hide all success alert boxes that appear at the top of the page.
Hide info alerts	Hide all info alert boxes that appear at the top of the page.
Hide warning alerts	Hide all warning alert boxes that appear at the top of the page.
Opt-out of statistics	Turn off sending anonymous usage statistics. Please consider that this helps the development to leave on.

Setting	Description
Check for Updates	Automatically check for updates every 2 days and notify through the web interface. If there is a new update, the Configure (Gear Icon) as well as the Upgrade menu will turn the color red.

Output Usage Settings

In order to calculate accurate output usage statistics, a few characteristics of your electrical system needs to be know. These variables should describe the characteristics of the electrical system being used by the relays to operate electrical devices. Note: Proper output usage calculations also rely on the correct current draw to be set for each output (see Output Settings).

Setting	Description
Max Amps	Set the maximum allowed amperage to be switched on at any given time. If a output that's instructed to turn on will cause the sum of active devices to exceed this amount, the output will not be allowed to turn on, to prevent any damage that may result from exceeding current limits.
Voltage	Alternating current (AC) voltage that is switched by the outputs. This is usually 120 or 240.
Cost per kWh	This is how much you pay per kWh.
Currency Unit	This is the unit used for the currency that pays for electricity.
Day of Month	This is the day of the month (1-30) that the electricity meter is read (which will correspond to the electrical bill).

Input Settings

[Gear Icon] -> Configure -> Inputs

Input modules may be imported and used within Mycodo. These modules must follow a specific format. See Create an Input Module for more details.

Setting	Description
Import Input Module	Select your input module file, then click this button to begin the import.

Measurement Settings

[Gear Icon] -> Configure -> Measurements

New measurements, units, and conversions can be created that can extend functionality of Mycodo beyond the built-in types and equations. Be sure to create units before measurements, as units need to be selected when creating a measurement. A measurement can be created that already exists, allowing additional units to be added to a pre-existing measurement. For example, the measurement 'altitude' already exists, however if you wanted to add the unit 'fathom', first create the unit 'fathom', then create the measurement 'altitude' with the 'fathom' unit selected. It is okay to create a custom measurement for a measurement that already exist (this is how new units for a currently-installed measurement is added).

Setting	Description
Measurement Name	Name for the measurement (e.g. "Weight", "Length").
Measurement Units	Select all the units that are associated with the measurement.
Unit Name	Name for the unit (e.g. "Kilogram", "Meter").
Unit Abbreviation	Abbreviation for the unit (e.g. "kg", "m").
Convert From Unit	The unit that will be converted from.
Convert To Unit	The unit that will be converted to.
Equation	The equation used to convert one unit to another. The lowercase letter "x" must be included in the equation (e.g. "x/1000+20", "250*(x/3)"). This "x" will be replaced with the actual measurement being converted.

Users

[Gear Icon] -> Configure -> Users

Mycodo requires at least one Admin user for the login system to be enabled. If there isn't an Admin user, the web server will redirect to an Admin Creation Form. This is the first page you see when starting Mycodo for the first time. After an Admin user has been created, additional users may be created from the User Settings page.

Setting	Description
Username	Choose a user name that is between 2 and 64 characters. The user name is case insensitive (all user names are converted to lower-case).
Email	The email associated with the new account.
Password/Repeat	Choose a password that is between 6 and 64 characters and only contain letters, numbers, and symbols.
Role	Roles are a way of imposing access restrictions on users, to either allow or deny actions. See the table below for explanations of the four default Roles.

User Roles

Roles define the permissions of each user. There are 4 default roles that determine if a user can view or edit particular areas of Mycodo. Four roles are provided by default, but custom roles may be created.

Role	Admin	Editor	Monitor	Guest
Edit Users	X			
Edit Controllers	X	X		
Edit Settings	X	X		
View Settings	X	X	X	
View Camera	X	X	X	
View Stats	X	X	X	
View Logs	X	X	X	

The **Edit Controllers** permission protects the editing of Conditionals, Graphs, LCDs, Methods, PIDs, Outputs, and Inputs.

The **View Stats** permission protects the viewing of usage statistics and the System Information and Output Usage pages.

Pi Settings

[Gear Icon] -> Configure -> Raspberry Pi

Pi settings configure parts of the linux system that Mycodo runs on.

pigpiod is required if you wish to use PWM Outputs, as well as PWM, RPM, DHT22, DHT11, HTU21D Inputs.

Setting	Description
Enable/Disable Feature	These are system interfaces that can be enabled and disabled from the web UI via the raspi-config command.
pigpiod Sample Rate	This is the sample rate the pigpiod service will operate at. The lower number enables faster PWM frequencies, but may significantly increase processor load on the Pi Zeros. pigpiod may also be disabled completely if it's not required (see note, above).

Alert Settings

[Gear Icon] -> Configure -> Alerts

Alert settings set up the credentials for sending email notifications.

Setting	Description
SMTP Host	The SMTP server to use to send emails from.
SMTP Port	Port to communicate with the SMTP server (465 for SSL, 587 for TLS).
Enable SSL	Check to enable SSL, uncheck to enable TLS.
SMTP User	The user name to send the email from. This can be just a name or the entire email address.
SMTP Password	The password for the user.
From Email	What the from email address be set as. This should be the actual email address for this user.
Max emails (per hour)	Set the maximum number of emails that can be sent per hour. If more notifications are triggered within the hour and this number has been reached, the notifications will be discarded.
Send Test Email	Test the email configuration by sending a test email.

Camera Settings

[Gear Icon] -> Configure -> Camera

Many cameras can be used simultaneously with Mycodo. Each camera needs to be set up in the camera settings, then may be used throughout the software. Note that not every option (such as Hue or White Balance) may be able to be used with your particular camera, due to manufacturer differences in hardware and software.

Setting	Description
Type	Select whether the camera is a Raspberry Pi Camera or a USB camera.
Library	Select which library to use to communicate with the camera. The Raspberry Pi Camera uses picamera, and USB cameras should be set to fswebcam.
Device	The device to use to connect to the camera. fswebcam is the only library that uses this option.
Output	This output will turn on during the capture of any still image (which includes timelapses).
Output Duration	Turn output on for this duration of time before the image is captured.
Rotate Image	The number of degrees to rotate the image.
...	Image Width, Image Height, Brightness, Contrast, Exposure, Gain, Hue, Saturation, White Balance. These options are self-explanatory. Not all options will work with all cameras.
Pre Command	A command to execute (as user mycodo) before a still image is captured.
Post Command	A command to execute (as user mycodo) after a still image is captured.
Flip horizontally	Flip, or mirror, the image horizontally.
Flip vertically	Flip, or mirror, the image vertically.

Diagnostic Settings

[Gear Icon] -> Configure -> Diagnostics

Sometimes issues arise in the system as a result of incompatible configurations, either the result of a misconfigured part of the system (Input, Output, etc.) or an update that didn't properly handle a database upgrade, or other unforeseen issue. Sometimes it is necessary to perform diagnostic actions that can determine the cause of the issue or fix the issue itself. The options below are meant to alleviate issues, such as a misconfigured dashboard element causing an error on the **Dash** page, which may cause an inability to access the **Dash** page to correct the issue. Deleting all Dashboard Elements may be the most economical method to enable access to the **Dash** page again, at the cost of having to readd all the Dashboard Elements that were once there.

Setting	Description
Delete All Dashboard Elements	Delete all saved Dashboard Elements from the Dashboard.
Delete All Notes and Note Tags	Delete all notes and note tags.

Miscellaneous

Create an Input Module

This section is a work-in-progress

If you have a sensor that is not currently supported by Mycodo, you can build your own input module and import it into Mycodo. All information about an input is contained within the input module, set in the dictionary 'INPUT_INFORMATION'. Each module will requires at a minimum for these variables to be set: 'input_name_unique', 'input_manufacturer', 'input_name', 'measurements_name', and 'measurements_dict'.

Open any of the built-in modules located in the inputs directory (<https://github.com/kizniche/Mycodo/tree/master/mycodo/inputs/>) for examples of the proper formatting.

There's also minimal input module template that generates random data as an example:

https://github.com/kizniche/Mycodo/tree/master/mycodo/inputs/examples/minimal_humidity_temperature.py

The following link provides the full list of available INPUT_INFORMATION options along with descriptions:

https://github.com/kizniche/Mycodo/tree/master/mycodo/inputs/examples/example_all_options_temperature.py

Dashboard

Dash

The dashboard is where you can add pieces of data for easy viewing. It is highly customizable and provides an easy way to see exactly what data you want to see on one screen.

Setting	Description
Width	The width of the dashboard object on the page, in 1/12th increments. Multiple dashboard object can share the sme row if their combined fraction doesn't exceed 12/12.
Height (pixels)	The height of the dashboard object.

Specific options for each Dashboard element are below.

Graphs

A graphical data display that is useful for viewing data sets spanning relatively short periods of time (hours/days/weeks). Select a time frame to view data and continually updating data from new sensor measurements. Multiple graphs can be created on one page that enables a dashboard to be created of graphed sensor data. Each graph may have one or more data from inputs, outputs, or PIDs rendered onto it. To edit graph options, select the plus sign on the top-right of a graph.

Setting	Description
x-Axis (minutes)	The duration to display on the x-axis of the graph.
Enable Auto Refresh	Automatically refresh the data on the graph Refresh Period.
Refresh (seconds)	The duration between acquisitions of new data to display on the graph.
Inputs/Outputs/PIDs	The Inputs, Outputs, and PIDs to display on the graph.
Enable X-Axis Reset	Reset the x-axis min/max every time new data comes in during the auto refresh.
Enable Title	Show a title of the graph name.
Enable Navbar	Show a slidable navigation bar at the bottom of the graph.
Enable Export	Enable a button on the top right of the graph to allow exporting of the currently-displayed data as PNG, JPEG, PDF, SVG, CSV, XLS.
Enable Range Selector	Show a set of navigation buttons at the top of the graph to quickly change the display duration.
Enable Graph Shift	If enabled, old data points are removed when new data is added to the graph. Only recommended to enable if Enable Navbar is enabled.
Enable Custom Colors	Use custom colors for Input, Output, and PID lines. Select the colors with the buttons that appear below this checkbox.

Setting	Description
Enable Manual Y-Axis Min/Max	Set the minimum and maximum y-axes of a particular graph. Set both the minimum and maximum to 0 to disable for a particular y-axis.
Enable Y-Axis Align Ticks	Align the ticks of several y-axes of the same graph.
Enable Y-Axis Start On Tick	Start all y-axes of a graph on the same tick.
Enable Y-Axis End On Tick	End all y-axes of a graph on the same tick.

Gauges

Gauges are visual objects that allow one to quickly see what the latest measurement is of an input. An example that you may be familiar with is a speedometer in a car.

Setting	Description
Refresh (seconds)	The duration between acquisitions of new data to display on the graph.
Max Age (seconds)	The maximum allowable age of the measurement. If the age is greater than this, the gauge will turn off, indicating there is an issue.
Gauge Min	The lowest value of the gauge.
Gauge Max	The highest value of the gauge.
Show Timestamp	Show the timestamp of the current gauge measurement.

Cameras

Cameras may be added to keep a continuous view on areas.

Setting	Description
Refresh (seconds)	The duration between acquisitions of new data to display on the graph.
Max Age (seconds)	The maximum allowed age of the image timestamp before a “No Recent Image” message is returned.
Acquire Image (and save new file)	Acquire a new images and save the previous image.
Acquire Image (and erase last file)	Acquire a new image but erase the previous image.
Display Live Video Stream	Automatically start a video stream and display it.
Display Latest Timelapse Image	Display the latest timelapse image that exists.
Add Timestamp	Append a timestamp to the image.

Measurement

Setting	Description
Refresh (seconds)	The duration between acquisitions of new data to display on the graph.
Max Age (seconds)	The maximum allowable age of the measurement. If the age is greater than this, the gauge will turn off, indicating there is an issue.
Value Font Size (em)	The font size of the measurement value in em.
Timestamp Font Size (em)	The font size of the timestamp value in em.
Decimal Places	The number of digits to display to the right of the decimal.
Measurement	The device to display information about.

Output

Setting	Description
Refresh (seconds)	The duration between acquisitions of new data to display on the graph.
Max Age (seconds)	The maximum allowable age of the measurement. If the age is greater than this, the gauge will turn off, indicating there is an issue.
Value Font Size (em)	The font size of the output value in em.

Setting	Description
Timestamp Font Size (em)	The font size of the timestamp value in em.
Decimal Places	The number of digits to display to the right of the decimal.
Feature Output Controls	Display buttons to turn On and Off the relay from the dashboard element.
Output	The output to display information about.

PID Control

Setting	Description
Refresh (seconds)	The duration between acquisitions of new data to display on the graph.
Max Age (seconds)	The maximum allowable age of the measurement. If the age is greater than this, the gauge will turn off, indicating there is an issue.
Value Font Size (em)	The font size of the measurement value in em.
Timestamp Font Size (em)	The font size of the timestamp value in em.
Decimal Places	The number of digits to display to the right of the decimal.
Show PID Information	Show extra PID information on the dashboard element.
Show Set Setpoint	Allow setting the PID setpoint on the dashboard element.
PID	The PID to display information about.

Live Measurements

Live

The **Live** page is the first page a user sees after logging in to Mycodo. It will display the current measurements being acquired from Input and Math controllers. If there is nothing displayed on the **Live** page, ensure an Input or Math controller is both configured correctly and activated. Data will be automatically updated on the page from the measurement database.

Asynchronous Graphs

Async

A graphical data display that is useful for viewing data sets spanning relatively long periods of time (weeks/months/years), which could be very data- and processor-intensive to view as a Live Graph. Select a time frame and data will be loaded from that time span, if it exists. The first view will be of the entire selected data set. For every view/zoom, 700 data points will be loaded. If there are more than 700 data points recorded for the time span selected, 700 points will be created from an averaging of the points in that time span. This enables much less data to be used to navigate a large data set. For instance, 4 months of data may be 10 megabytes if all of it were downloaded. However, when viewing a 4 month span, it's not possible to see every data point of that 10 megabytes, and aggregating of points is inevitable. With asynchronous loading of data, you only download what you see. So, instead of downloading 10 megabytes every graph load, only ~50kb will be downloaded until a new zoom level is selected, at which time only another ~50kb is downloaded.

Note: Live Graphs require measurements to be acquired, therefore at least one sensor needs to be added and activated in order to display live data.

Notes

More -> Notes

Notes may be created that can then be displayed on graphs or referenced at a later time. All notes are timestamped with the date/time of creation or may be created with a custom date/time. Each note must have at least one tag selected. Tags are what are selected to be displayed on a graph and all notes with that tag will appear in the time frame selected on the graph.

Tag Options

Setting	Description
Name	A name for the tag. Must not contain spaces.
Rename	Rename the tag.

Note Options

Setting	Description
Name	A name for the note.
Use Custom Date/Time	Check to enter a custom date/time for the note.
Custom Date/Time	Store the note with this custom date/time.
Attached Files	Attach one or more files to the note.
Tags	Associate the note with at least one tag.
Note	The text body of the note. The text will appear monospaced, so code will format properly.

Export-Import

More -> Export Import

Measurements that fall within the selected date/time frame may be exported as CSV with their corresponding timestamps. Additionally, the entire measurement database (influxdb) may be exported as a ZIP archive backup. This ZIP may be imported back in any Mycodo system to restore these measurements. Note that an import will override the current data (i.e. destroying it).

Mycodo settings may be exported as a ZIP file containing the Mycodo settings database (sqlite). This ZIP file may be used to restore the settings database to another Mycodo install, as long as the Mycodo version and database versions are the same. Future support for installing older (or newer) databases and performing an automatic upgrade/downgrade is in the works.

Dependencies

[Gear Icon] -> Dependencies

The dependency page allows viewing of dependency information and the ability to initiate their installation.

During the installation of Mycodo, there is an option to select which dependencies to install. If “Minimal Install” or “Custom Install” was selected (rather than “Full Install”), there may be unmet dependencies on your system. Don’t worry, this isn’t necessarily a problem. These optional dependencies only need to be installed when there’s a particular feature you want to use. When a user attempts to use a feature that has an unmet dependency, the user will be forwarded to the Dependency page in order to install it.

Camera

Cam

Once a camera has been set up (in the Camera Settings), it may be used to capture still images, create time-lapses, and stream video. Cameras may also be used by Conditional Statements to trigger a camera image or video capture (as well as the ability to email the image/video with a notification).

Output Usage

More -> Output Usage

Output usage statistics are calculated for each output, based on how long the output has been powered, the current draw of the device connected to the output, and other Relay Usage Settings.

Backup-Restore

[Gear Icon] -> Backup Restore

A backup is made to /var/Mycodo-backups when the system is upgraded or through the web interface on the [Gear Icon] -> Backup Restore page.

If you need to restore a backup, this can be done on the [Gear Icon] -> Backup Restore page. Find the backup you would like restored and press the Restore button beside it. A restore can also be initialized through the command line. Use the following commands to initialize a restore, changing the appropriate directory names, 'user' to your user name, and TIME and COMMIT to the appropriate text found as the directory names in /var/Mycodo-backups/

```
sudo mv /home/user/Mycodo /home/user/Mycodo_old
sudo cp -a /var/Mycodo-backups/Mycodo-TIME-COMMIT /home/user/Mycodo
sudo /bin/bash ~/Mycodo/mycodo/scripts/upgrade_post.sh
```

System Information

[Gear Icon] -> System Information

This page serves to provide information about the Mycodo frontend and backend as well as the linux system it's running on. Several commands and their output are listed to give the user information about how their system is running.

Command	Description
Mycodo Version	The current version of Mycodo, reported by the configuration file.
Python Version	The version of python currently running the web user interface.
Database Version	The current version of the settings database. If the current version is different from what it should be, an error will appear indicating the issue and a link to find out more information about the issue.
Daemon Status	This will be a green "Running" or a red "Stopped". Additionally, the Mycodo version and hostname text at the top-left of the screen May be Green, Yellow, or Red to indicate the status. Green = daemon running, yellow = unable to connect, and red = daemon not running.
...	Several other status indicators and commands are listed to provide information about the health of the system. Use these in addition to others to investigate software or hardware issues.

USB Device Persistence Across Reboots

From (#547) Theoi-Meteoroi on Github:

Using USB devices, such as USB-to-serial interfaces to connect a sensor, while convenient, poses an issue if there are multiple devices when the system reboots. After a reboot, there is no guarantee the device will persist with the same name. For instance, if Sensor A is /dev/ttyUSB0 and Sensor B is /dev/ttyUSB1, after a reboot Sensor A may be /dev/ttyUSB1 and Sensor B may be /dev/ttyUSB0. This will cause Mycodo to query the wrong device for a measurement, potentially causing a mis-measurement, or worse, an incorrect measurement because the response is not from the correct sensor (I've seen my temperature sensor read 700+ degrees celsius because of this!). Follow the instructions below to alleviate this issue.

I use udev to create a persistent device name ('/dev/dust-sensor') that will be linked to the /dev/ttyUSBn that is chosen at device arrival in the kernel. The only requirement is some attribute returned from the USB device that is unique. The common circumstance is that none of the attributes are unique and you get stuck with just VID and PID, which is ok as long as you don't have any other adapters that report the same VID and PID. If you have multiple adapters with the same VID and PID, then hopefully they have some unique attribute. This command will walk the attributes. Run on each USB device and then compare differences to possibly find some attribute to use.

```
udevadm info --name=/dev/ttyUSB0 --attribute-walk
```

I ended up using the serial number on the ZH03B to program the USB adapter serial field. This way guarantees unique serial numbers rather than me trying to remember what was the last serial number I used to increment by 1.

When you plug a USB device in it can be enumerated to different device names by the operating system. To fix this problem for this sensor on linux, I changed attributes that make the connection unique.

First - find the VID and PID for the USB device:

```
pi@raspberrypi:~ $ lsusb
Bus 001 Device 008: ID 10c4:ea60 Cygnal Integrated Products, Inc. CP210x UART Bridge / myAVR mySmartUSB light
Bus 001 Device 003: ID 0424:ec00 Standard Microsystems Corp. SMSC9512/9514 Fast Ethernet Adapter
Bus 001 Device 002: ID 0424:9514 Standard Microsystems Corp. SMC9514 Hub
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
```

In this case the Vendor ID is 10c4 The Product ID is ea60

Since I changed the serial number field - this will be unique.

```
pi@raspberrypi:~ $ udevadm info --name=/dev/ttyUSB0 --attribute-walk | grep serial
SUBSYSTEMS=="usb-serial"
ATTRS{serial}=="ZH03B180904"
ATTRS{serial}=="3f980000.usb"
```

Now I have an attribute to tell udev what to do. I create a file in /etc/udev/rules.d with a name like "99-dustsensor.rules". In that file I tell udev what device name to create when it sees this device plugged in:

```
SUBSYSTEM=="tty", ATTRS{idVendor}=="10c4", ATTRS{idProduct}=="ea60", ATTRS{serial}=="ZH03B180904"
SYMLINK+="dust-sensor"
```

To test the new rule:

```
pi@raspberrypi:/dev $ sudo udevadm trigger
pi@raspberrypi:/dev $ ls -al dust-sensor
lrwxrwxrwx 1 root root 7 Oct 6 21:04 dust-sensor -> ttyUSB0
```

Now, every time the dust sensor is plugged in, it shows up at /dev/dust-sensor

Troubleshooting

Daemon Not Running

- Check the Logs: From the [Gear Icon] -> Mycodo Logs page, check the Daemon Log for any errors. If the issue began after an upgrade, also check the Upgrade Log for indications of an issue.
- Determine if the Daemon is Running: Execute `ps aux | grep '/var/mycodo-root/env/bin/python /var/mycodo-root/myco` in a terminal and look for an entry to be returned. If nothing is returned, the daemon is not running.
- Daemon Lock File: If the daemon is not running, make sure the daemon lock file is deleted at `/var/lock/mycodo.pid`. The daemon cannot start if the lock file is present.
- If a solution could not be found after investigating the above suggestions, submit a New Mycodo Issue on github.

Incorrect Database Version

- Check the [Gear Icon] -> System Information page or select the mycodo logo in the top-left.
- An incorrect database version error means the version stored in the Mycodo settings database (`~/Mycodo/databases/mycodo.db`) is not correct for the latest version of Mycodo, determined in the Mycodo config file (`~/Mycodo/mycodo/config.py`).
- This can be caused by an error in the upgrade process from an older database version to a newer version, or from a database that did not upgrade during the Mycodo upgrade process.
- Check the Upgrade Log for any issues that may have occurred. The log is located at `/var/log/mycodo/mycodoupgrade.log` but may also be accessed from the web UI (if you're able to): select [Gear Icon] -> Mycodo Logs -> Upgrade Log.
- Sometimes issues may not immediately present themselves. It is not uncommon to be experiencing a database issue that was actually introduced several Mycodo versions ago, before the latest upgrade.
- Because of the nature of how many versions the database can be in, correcting a database issue may be very difficult. It may be much easier to delete your database and let Mycodo generate a new one.
- Use the following commands to rename your database and restart the web UI. If both commands are successful, refresh your web UI page in your browser in order to generate a new database and create a new Admin user.

```
mv ~/Mycodo/databases/mycodo.db ~/Mycodo/databases/mycodo.db.backup
sudo service mycodoflask restart
```

More

Check out the Diagnosing Mycodo Issues Wiki Page on github for more information about diagnosing issues.

Devices

All Input and Output devices are listed below.

The I2C interface should be enabled with **raspi-config**.

The 1-wire interface should be configured with these instructions.

This documentation provides specific installation procedures for configuring UART with the Raspberry Pi version 1 or 2.

The K30 may be tested by executing `~/Mycodo/mycodo/tests/manual_tests/test_uart_K30.py`

For Atlas Scientific sensors, this guide may be used, as well as the above K-30 guide, to set up UART on the Raspberry Pi 1 and 2. However, for Pi 3s, use the procedure below.

Because the UART is handled differently by the Raspberry Pi 3, from of the addition of bluetooth, there are a different set of instructions. If installing Mycodo on a Raspberry Pi 3, you only need to perform these steps to configure UART:

Run raspi-config

```
sudo raspi-config
```

Go to **Advanced Options** -> **Serial** and disable. Then edit `/boot/config.txt`

```
sudo vi /boot/config.txt
```

Find the line “enable_uart=0” and change it to “enable_uart=1”, then reboot.

Input Devices

AM2315: Relative humidity, temperature link

AM2320: Relative humidity, temperature link

Atlas Scientific pH: pH link

Atlas Scientific PT-1000: Temperature link

BH1750: Light link

BME280: Barometric pressure, humidity, temperature link

BMP085, BMP180: Barometric pressure, temperature link

CCS811: CO2, VOC, temperature link

Chirp: Moisture, light, and temperature link

DS18B20: Temperature link

DS18S20: Temperature link

DS1822: Temperature link

DS28EA00: Temperature link

DS1825: Temperature link

DHT11, DHT22/AM2302: Relative humidity and temperature link

HTU21D: Relative humidity and temperature link

K30: Carbon dioxide (CO2) in ppmv link

MAX31850K: Temperature link

MAX31855K: Temperature link

MAX31856: Temperature link

MAX31865: Temperature link

MH-Z19: Carbon dioxide (CO2) in ppmv link

SHT1x/SHT31/SHT7x/SHT31 Smart Gadget: Relative humidity and temperature link

Sonoff TH10/16 (Tasmota firmware): Relative humidity and temperature

TMP006, TMP007: Contactless temperature link

TSL2561: Light link

TSL2591: Light link

Output Devices

Atlas EZO-PMP Peristaltic Pump: Carbon dioxide (CO2) in ppmv link

Edge Detection

The detection of a changing signal, for instance a simple switch completing a circuit, requires the use of edge detection. By detecting a rising edge (LOW to HIGH), a falling edge (HIGH to LOW), or both, actions or events can be triggered. The GPIO chosen to detect the signal should be equipped with an appropriate resistor that either pulls the GPIO up [to 5-volts] or down [to ground]. The option to enable the internal pull-up or pull-down resistors is not available for safety reasons. Use your own resistor to pull the GPIO high or low.

Examples of devices that can be used with edge detection: simple switches and buttons, PIR motion sensors, reed switches, hall effect sensors, float switches, and more.

I2C Multiplexers

All devices that connected to the Raspberry Pi by the I2C bus need to have a unique address in order to communicate. Some inputs may have the same address (such as the AM2315), which prevents more than one from being connected at the same time. Others may provide the ability to change the address, however the address range may be limited, which limits by how many you can use at the same time. I2C multiplexers are extremely clever and useful in these scenarios because they allow multiple sensors with the same I2C address to be connected.

Multiplexers can be set up by loading a kernel driver to handle the communication, producing a new I2C bus device for each multiplexer channel. To enable the driver for the TCA9548A/PCA9548A, visit [GPIO-pca9548](#) to get the code and latest install instructions. If successfully set up, there will be 8 new I2C buses on the **[Gear Icon]** -> **System Information** page.

The driver for the TCA9545A can be found at <https://github.com/camrex/i2c-mux-pca9545a> and other drivers are available elsewhere. See the manufacturer or user forums for details. Some multiplexers I've tested are below.

TCA9548A/PCA9548A: I2C Multiplexer link (I2C): Has 8 selectable addresses, so 8 multiplexers can be connected to one Raspberry Pi. Each multiplexer has 8 channels, allowing up to 8 devices/sensors with the same address to be connected to each multiplexer. 8 multiplexers x 8 channels = 64 devices/sensors with the same I2C address.

TCA9545A: I2C Bus Multiplexer link (I2C): This board also creates 4 new I2C buses, but each with their own selectable voltage, either 3.3 or 5.0 volts.

Analog-to-Digital Converters

An analog to digital converter (ADC) allows the use of any analog sensor that outputs a variable voltage. A voltage divider may be necessary to attain your desired range.

ADS1x15: Analog-to-digital converter link

ADS1256: Analog-to-digital converter link

MCP3008: Analog-to-digital converter link

MCP342x: Analog-to-digital converter link

Device Specific Information

LCD Displays

There are only a few number fo LCDs that are supported. 16x2 and 20x4 character LCD displays with I2C backpacks and the PiOLED 128x32 are supported. The below image is the type of device with the I2C backpack that should be compatible.



Output Device Details

Atlas Scientific EZO-PMP

Embedded Dosing Pump

Specifications

- Flow Rate: 0.5 ml to 105 ml/min
- Accuracy: $\pm 1\%$
- Calibration: Single point
- Tubing Size: Any 5.. O.D. tubing
- Interfaces: I2C and UART
- Operating Voltages: 3.3V - 5V (logic), 12V - 24V (motor)
- Pump Head: 2 meters

Input Device Details

Raspberry Pi

The Raspberry Pi has an integrated temperature sensor on the BCM2835 SoC that measure the temperature of the CPU/GPU. This is the easiest sensor to set up in Mycodo, as it is immediately available to be used.

AM2315

Specifications

- 0-100% humidity readings with 1% (10-90% RH) and 3% (0-10% RH and 90-100% RH) accuracy
- -20 °C to 80 °C temperature readings ± 0.1 °C typical accuracy
- 3.5 to 5.5V power and I/O
- 10 mA max current use during conversion (while requesting data)
- No more than 0.5 Hz sampling rate (once every 2 seconds)

Notes

From @Theoi-Meteoroi on GitHub:

I figured out why this [AM2315] sensor is unreliable with Rpi3 hardware I2C. It is among a number of I2C devices that really hates the BCM2835 clock stretching blunder (hardware bug: raspberrypi/linux#254). The wakeup attempts fail, consistently. I checked the bitstream with a sniffer, and see that the sensor may respond once out of 20 or so tries (or not at all) but only with a single byte returned. The solution is to use a software implementation of the I2C bus. You need to add pull-up resistors (4.7k is dandy) to 3.3v and install the i2c_gpio device overlay. Seems to work fine now, will run for a few days, but the CRC failures are gone and I get good readings, every time. And no twiddling the power for the sensor is required.

To enable software I2C, add the following line to your `/boot/config.txt`

```
dtoverlay=i2c-gpio,i2c_gpio_sda=23,i2c_gpio_scl=24,i2c_gpio_delay_us=4
```

After rebooting, a new I2C bus at `/dev/i2c-3` should exist with SDA on pin 23 (BCM) and SCL on pin 24 (BCM). Make sure you add the appropriate pull-up resistors before connecting any devices.

AM2320

Specifications

- ± 0.5 °C accuracy

Atlas Scientific pH

The Atlas Scientific pH sensor measures the pH of a liquid.

Specifications

- UART or I2C
- Probe Max Pressure: 690 kPa (100PSI)
- Probe Max Depth 60 M (197 ft)
- Probe Weight: 49 grams
- Probe can be fully submerged in fresh or salt water indefinitely

Atlas Scientific PT-1000

The PT1000 temperature probe is a resistance type thermometer. Where PT stands for platinum and 1000 is the measured resistance of the probe at 0 °C in ohms (1k at 0 °C).

Specifications

- Serial or I2C
- Accuracy $\pm(0.15 + (0.002 \cdot t))$
- Probe type: Class A Platinum, RTD (resistance temperature detector)
- Cable length: 81cm (32")
- Cable material: Silicone rubber
- 30mm sensing area (304 SS)
- 6mm Diameter
- BNC Connector
- Reaction Time: 90% value in 13 seconds
- Probe output: analog
- Full temperature sensing range: -200 °C to 850 °C
- Cable max temp 125 °C
- Cable min temp -55 °C

BH1750

The BH1750 is an I2C luminosity sensor that provides a digital value in lux (lx) over a range of 1 - 65535 lx.

BME280

The BME280 is the upgrade to the BMP085/BMP180/BMP183. It has a low altitude noise of 0.25m and the same fast conversion time. It has the same specifications, but can use either I2C or SPI.

Specifications

- 300-1100 hPa (9000m to -500m above sea level)
- -40 °C to +85 °C operational range
- $\pm 3\%$ humidity accuracy tolerance
- $\pm 1\%$ humidity hysteresis
- ± 1 hPa pressure accuracy
- ± 2 °C temperature accuracy
- Vin: 3 to 5V
- Logic: 3 to 5V compliant
- I2C 7-bit address 0x76 or 0x77

BMP085, BMP180

The BMP180 replaces the BMP085. It is completely identical to the BMP085 in terms of firmware/software/interfacing.

Specifications

- 300-1100 hPa (9000m to -500m above sea level)
- Up to 0.03hPa / 0.25m resolution
- -40 °C to +85 °C operational range
- ± 2 °C temperature accuracy
- Vin: 3 to 5V
- Logic: 3 to 5V compliant
- I2C 7-bit address 0x77

CCS811

Be aware that the CCS811 datasheet recommends a burn-in of 48 hours and a run-in of 20 minutes (you must allow 20 minutes for the sensor to warm up and output valid data).

Specifications

- 400 – 8,192 ppmv CO2
- 0 - 1,187 ppbv VOC
- Ambient temperature measured from 10K NTC Thermistor (separate from chip, may or may not be included on the board you purchase)
- Warm-up time: ~ 20 min.

Chirp

The Chirp sensor measures moisture, light, and temperature.

Specifications

- Vin: 3 to 5V
- I2C 7-bit address 0x77

DHT11

Specifications

- 3 to 5V power and I/O
- 2.5mA max current use during conversion (while requesting data)
- 20-80% humidity readings with 5% accuracy
- 0 °C to 50 °C temperature readings ± 2 °C accuracy
- No more than 1 Hz sampling rate (once every second)

DHT22, AM2302

Compared to the DHT11, this sensor is more precise, more accurate and works in a bigger range of temperature/humidity, but its larger and more expensive. The wiring is the same as the DHT11.

Specifications

- 0-100% humidity readings with 2% (10-90% RH) and 5% (0-10% RH and 90-100% RH) accuracy
- -40 °C to 80 °C temperature readings ± 0.5 °C accuracy
- 3 to 5V power and I/O
- 2.5mA max current use during conversion (while requesting data)
- No more than 0.5 Hz sampling rate (once every 2 seconds)

DS18B20

The DS18B20 is a 1-Wire digital temperature sensor from Maxim IC. Each sensor has a unique 64-Bit Serial number, allowing for a huge number of sensors to be used on one data bus.

Specifications

- Usable temperature range: -55 °C to 125 °C
- 9 to 12 bit selectable resolution
- Uses 1-Wire interface- requires only one digital pin for communication
- Unique 64 bit ID burned into chip
- Multiple sensors can share one pin
- ± 0.5 °C Accuracy from -10 °C to +85 °C
- Temperature-limit alarm system
- Query time is less than 750ms
- Usable with 3.0V to 5.5V power/data

DS18S20

Specifications

- Usable temperature range: -55 °C to 125 °C
- ± 0.5 °C Accuracy from -10 °C to +85 °C
- 9-bit resolution

DS1822

Specifications

- Usable temperature range: -55 °C to 125 °C
- ± 2 °C Accuracy from -10 °C to +85 °C
- 9 to 12 bit selectable resolution

DS28EA00

Specifications

- Usable temperature range: -40 °C to 85 °C
- 9 to 12 bit selectable resolution

DS1825


Specifications

- Usable temperature range: -55 °C to 125 °C
- ± 0.5 °C Accuracy from -10 °C to +85 °C
- 9 to 12 bit selectable resolution

HTU21D

Specifications

- 0-100% humidity readings with 2% (20-80% RH) and 2%-5% (0-20% RH and 80-100% RH) accuracy
- Optimum accuracy measurements within 5 to 95% RH
- -30 °C to 90 °C temperature readings ± 1 °C typical accuracy

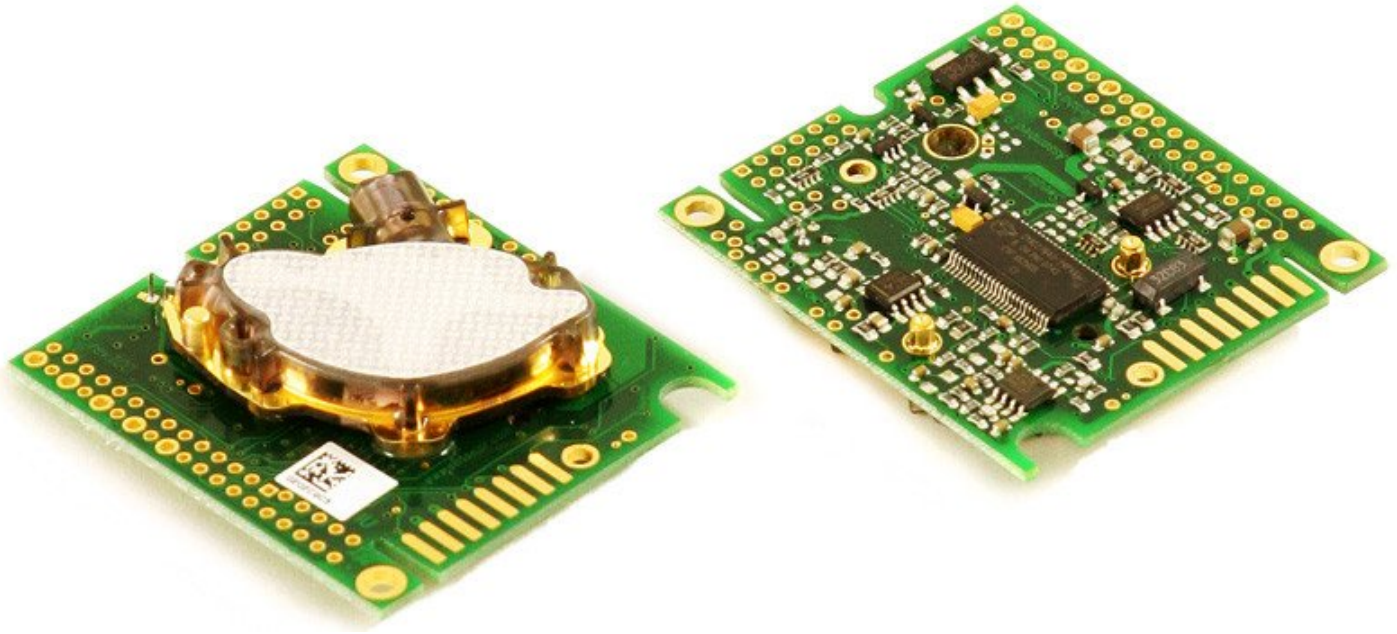

Be very careful when connecting the K-30, as there is no reverse-voltage protection and improper connections could destroy your sensor.

Wiring instructions for the Raspberry Pi can be found [here](#).

Specifications

- 0 – 10,000 ppmv (0 - 5,000 ppmv within specifications)
- Repeatability: ± 20 ppm $\pm 1\%$ of measured value within specifications
- Accuracy: ± 30 ppm $\pm 3\%$ of measured value within specifications
- Non-dispersive infrared (NDIR) technology
- Sensor life expectancy: > 15 years
- Self-diagnostics: complete function check of the sensor module
- Warm-up time: < 1 min. (@ full specs < 15 min)
- 0.5 Hz sampling rate (once every 2 seconds)

MAX31850K

Specifications

- Measures K-type thermocouples
- 14-bit, 0.25 °C resolution

MAX31855K

Specifications

- Measures K-type thermocouples
- Serial interface
- -200 °C to 1350 °C output in 0.25 degree increments
- K thermocouples have about ± 2 °C to ± 6 °C accuracy
- Internal temperature reading

MAX31856

Measures several types of thermocouples (K, J, N, R, S, T, E, and B).

Specifications

- Serial interface
- -210 °C to 1800 °C output in 0.0078125 ° resolution (many thermocouples have about ± 2 °C to ± 6 °C accuracy or worse depending on the temperature and type, so the resolution will be a lot better than the accuracy)
- Works with any K, J, N, R, S, T, E, or B type thermocouple
- Internal temperature reading

MAX31865

Measures the PT100 or PT1000 platinum resistance temperature detectors (RTDs).

Specifications

- Serial interface
- -200 °C to 850 °C
- Works with the PT100 and PT1000 RTD

MH-Z16

Specifications

- Interface: UART and I2C
- 0 – 10,000 ppmv
- Resolution ratio: 5 ppmv (0 ~ 2000 ppmv), 10 ppmv (2000 ~ 5000 ppmv), ± 20 ppmv (5000 ~ 10000 ppmv)
- Accuracy: ± 50 ppm ± 5 %
- Repeatability: ± 30 ppmv
- Non-dispersive infrared (NDIR) technology
- Sensor life expectancy: > 5 years
- Warm-up time: 3 minutes
- Response time: < 30 seconds

MH-Z19

Specifications

- Interface: UART
- 0 – 5,000 ppmv
- Accuracy: ± 50 ppm ± 5 % of measured value within specifications
- Non-dispersive infrared (NDIR) technology
- Sensor life expectancy: > 5 years
- Warm-up time: 3 min.
- 0.2 Hz sampling rate (once every 5 seconds)

SHT1x

(SHT10, SHT11, SHT15)

Specifications

- 0-100% humidity readings with 2%-5% (10-90% RH) and 2%-7.5% (0-10% RH and 90-100% RH) accuracy
- -40 °C to 125 °C temperature readings ± 0.5 °C, ± 0.4 °C, and ± 0.3 °C typical accuracy (respectively)
- 2.4 to 5.5V power and I/O
- No more than 0.125 Hz sampling rate (once every 8 seconds)

SHT31

This includes the sensor itself and the SHT31 Smart Gadget.

Specifications

- $\pm 2\%$ relative humidity and $\pm 0.3^\circ\text{C}$ accuracy for most uses
- -40°C to 125°C temperature

SHT7x

(SHT71, SHT75)

Specifications

- 0-100% humidity readings with 2%-3% (10-90% RH) and 2%-5% (0-10% RH and 90-100% RH) accuracy
- -40°C to 125°C temperature readings $\pm 0.4^\circ\text{C}$ and $\pm 0.3^\circ\text{C}$ typical accuracy (respectively)
- 2.4 to 5.5V power and I/O
- No more than 0.125 Hz sampling rate (once every 8 seconds)

Sonoff TH10/16

(TH10, TH16)

The Sonoff TH10/TH16 supports four kinds of temperature monitor and humidity monitor sensors: Si7021, AM2301, DS18B20, and DHT11.

This wifi-enabled ESP8266 based device uses the Tasmota firmware that can be found [here](#).

Specifications

- Remote ON/OFF–Turn electrical devices on/off, can work without TH sensor

TMP006, TMP007

The TMP006 Breakout can measure the temperature of an object without making contact with it. By using a thermopile to detect and absorb the infrared energy an object is emitting, the TMP006 Breakout can determine how hot or cold the object is.

Specifications

- Usable temperature range: -40°C to 125°C
- Optimal operating voltage of 3.3V to 5V (tolerant up to 7V max)

TSL2561

The TSL2561 Luminosity Sensor is a sophisticated light sensor which has a flat response across most of the visible spectrum. Unlike simpler sensors, the TSL2561 measures both infrared and visible light to better approximate the response of the human eye. And because the TSL2561 is an integrating sensor (it soaks up light for a predetermined amount of time), it is capable of measuring both small and large amounts of light by changing the integration time.

Specifications

- Light range: 0.1 - 40k+ lux
- V_{in} : 3V and a low supply
- Max current: 0.6mA.

TSL2591

Specifications

- Light range: 188 uLux to 88,000 Lux

Winsen ZH03B

Laser Dust sensor module is a common type, small size sensor, using laser scattering principle to detect the dust particles in air, with good selectivity and stability.

Specifications

- Detection: PM1.0, PM2.5, PM10
- Working humidity: 0~85% RH (no condensation)
- Working temperature: -10 °C to 50 °C
- Response time (T90) <= 45 seconds
- Life span: 3 years (in air)

Analog to Digital Converters

ADS1x15

(ADS1015, ADS1115)

Specifications

- Interface: I2C
- I2C 7-bit addresses 0x48 - 0x4B
- Input channels: 2 (differential), 4 (single-ended)
- Power: 2.0 - 5.5 V
- Sample Rate: 1015: 128SPS to 3.3kSPS, 1115: 8SPS to 860SPS
- Resolution: 1015: 12-bit, 1115: 16-bit

ADS1256

ADS1256

Specifications

- Interface: SPI
- Input channels: 8
- Input range: 0 - 5.25 V
- Power: 1.8 - 3.6 V
- Resolution: 24-bit

MCP3008

Specifications

- Interface: SPI
- 8 channels
- 10-bit resolution
- Input range: 0 - 3.3 V

MCP342x

(MCP3422, MCP3423, MCP3424, MCP3426, MCP3427, MCP3428)



Specifications

- Interface: I2C
- I2C 7-bit addresses 0x68 - 0x6F
- MCP3422: 2 channel, 12, 14, 16, or 18 bit
- MCP3423: 2 channel, 12, 14, 16, or 18 bit
- MCP3424: 4 channel, 12, 14, 16, or 18 bit
- MCP3426: 2 channel, 12, 14, or 16 bit
- MCP3427: 2 channel, 12, 14, or 16 bit
- MCP3428: 4 channel, 12, 14, or 16 bit




Diagrams

DHT11 Diagrams

DHT11 pins	
1	VCC
2	DATA
3	NC
4	GND

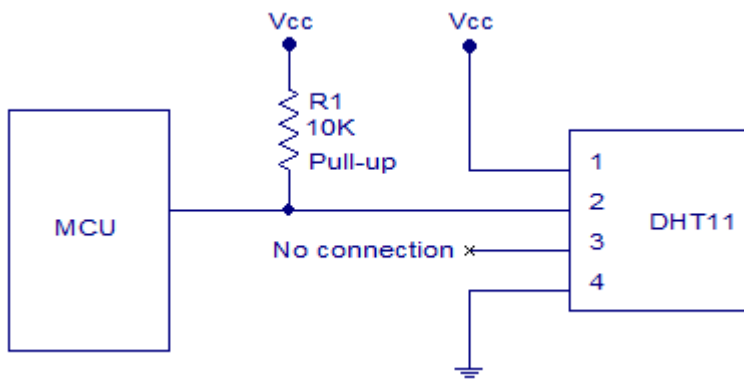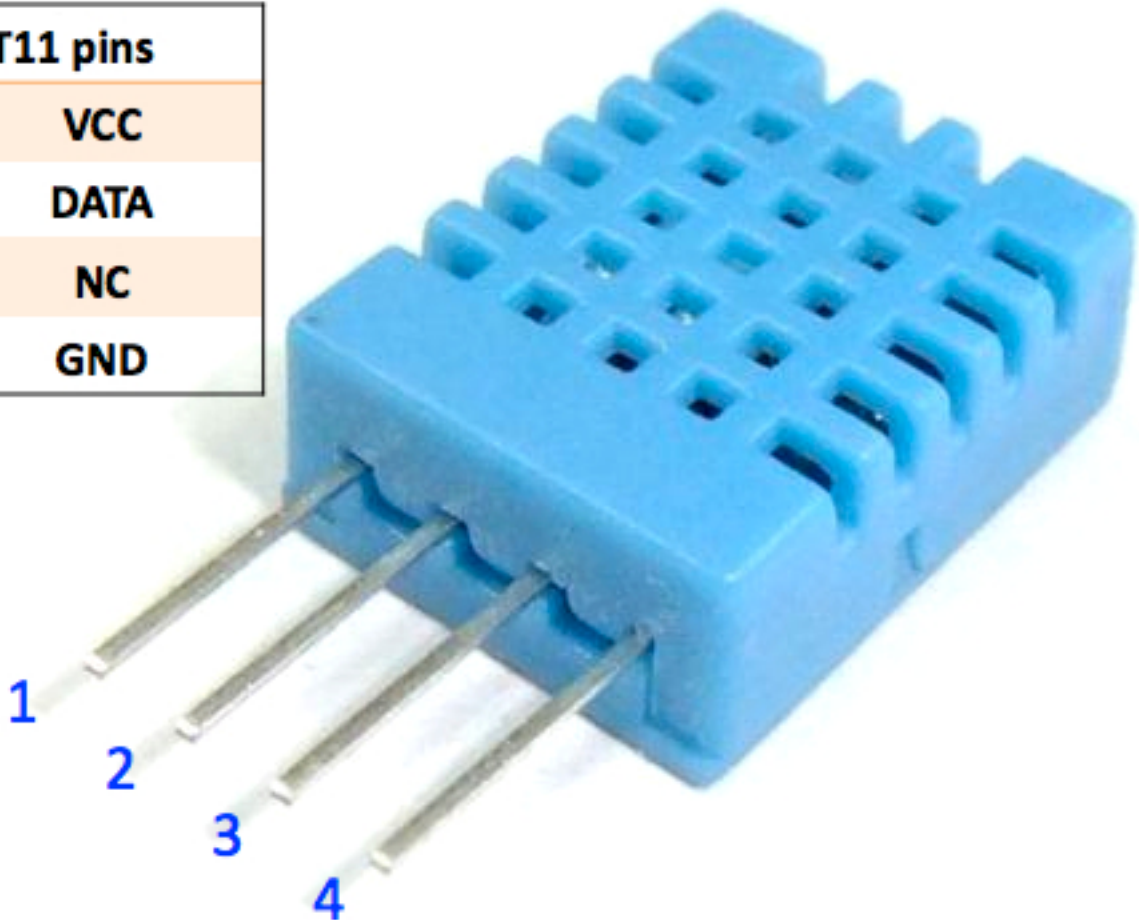


DS18B20 Diagrams

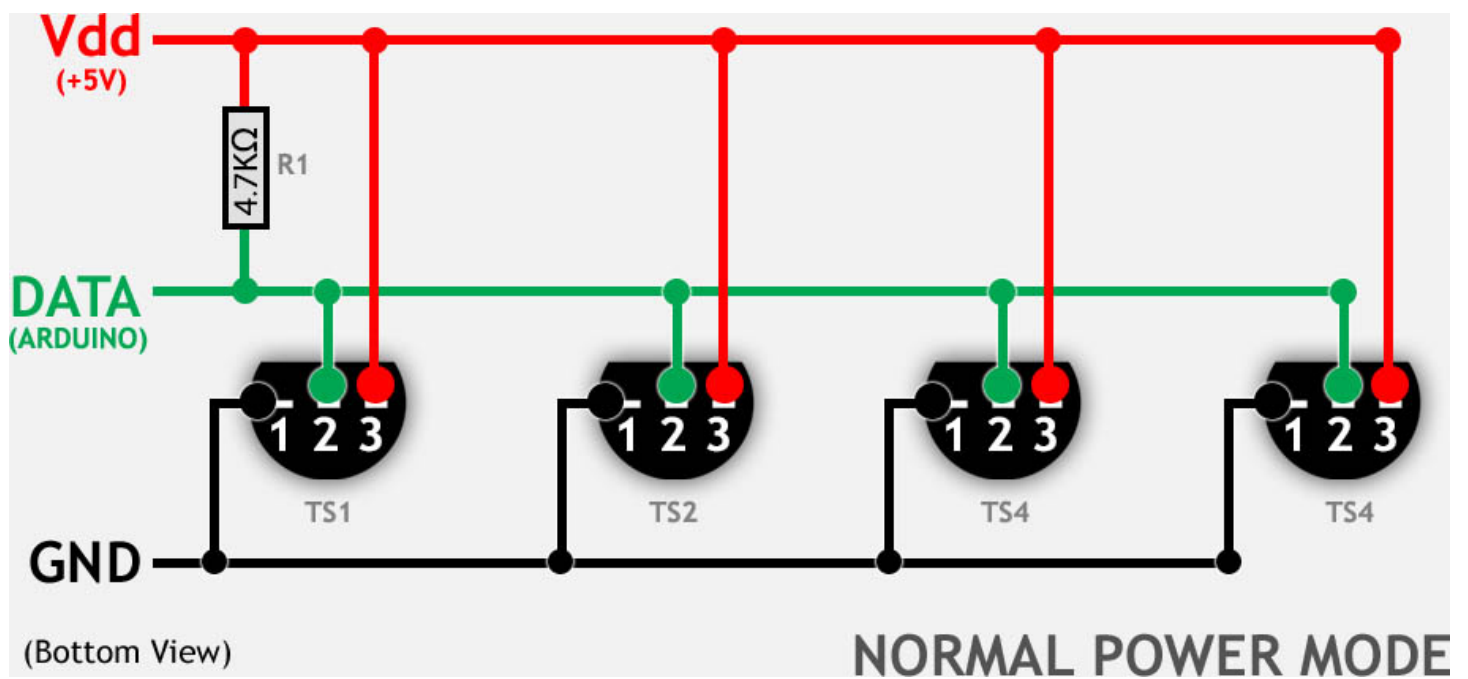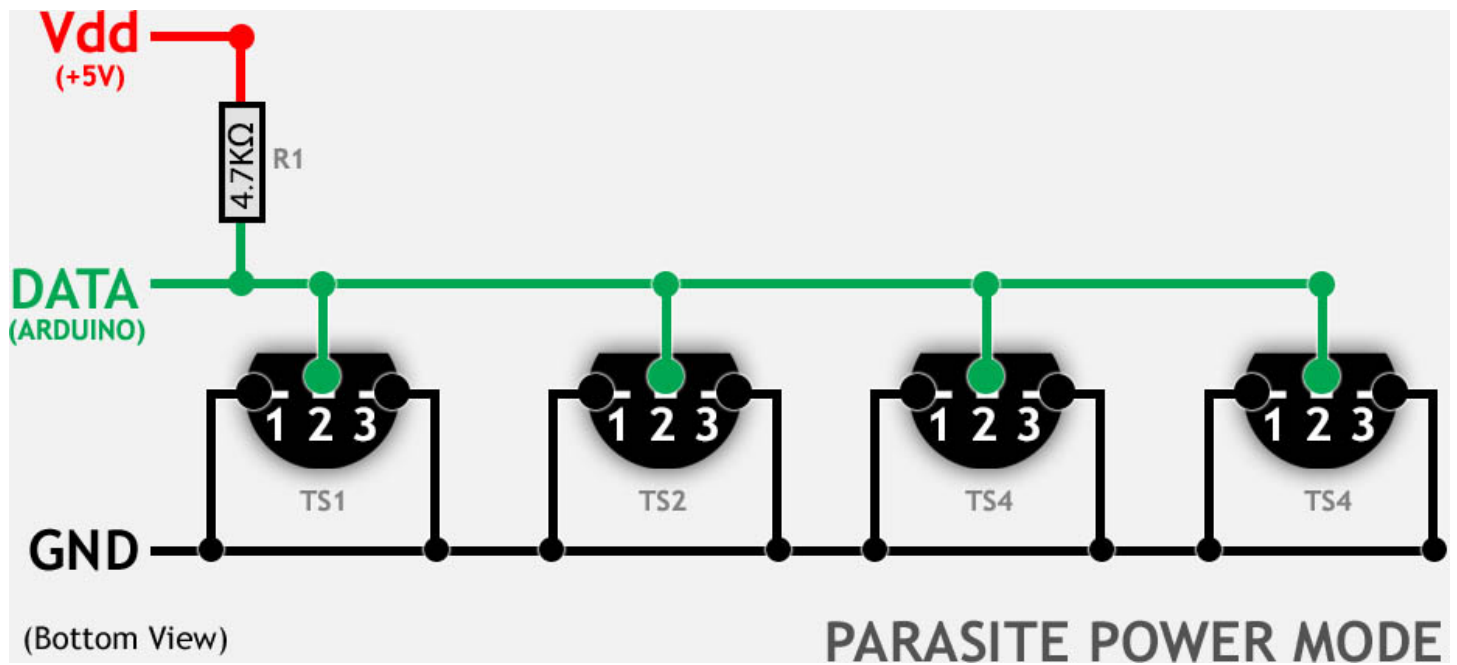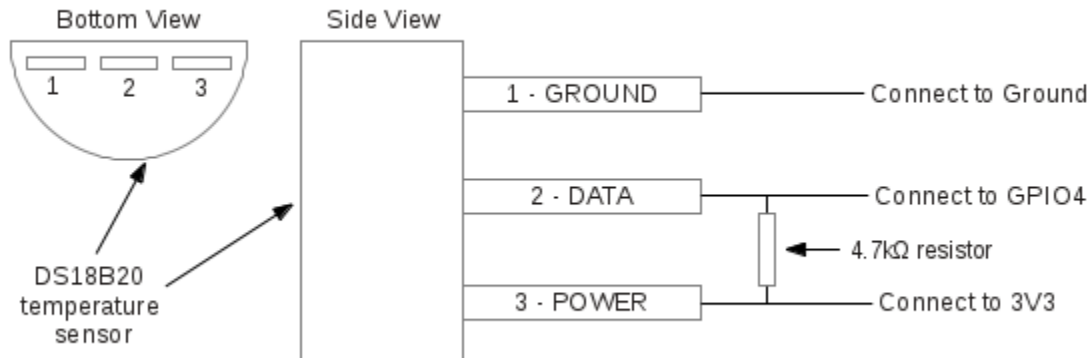

Raspberry Pi and Relay Diagrams

Raspberry Pi, 4 relays, 4 outlets, 1 DS18B20 sensor:

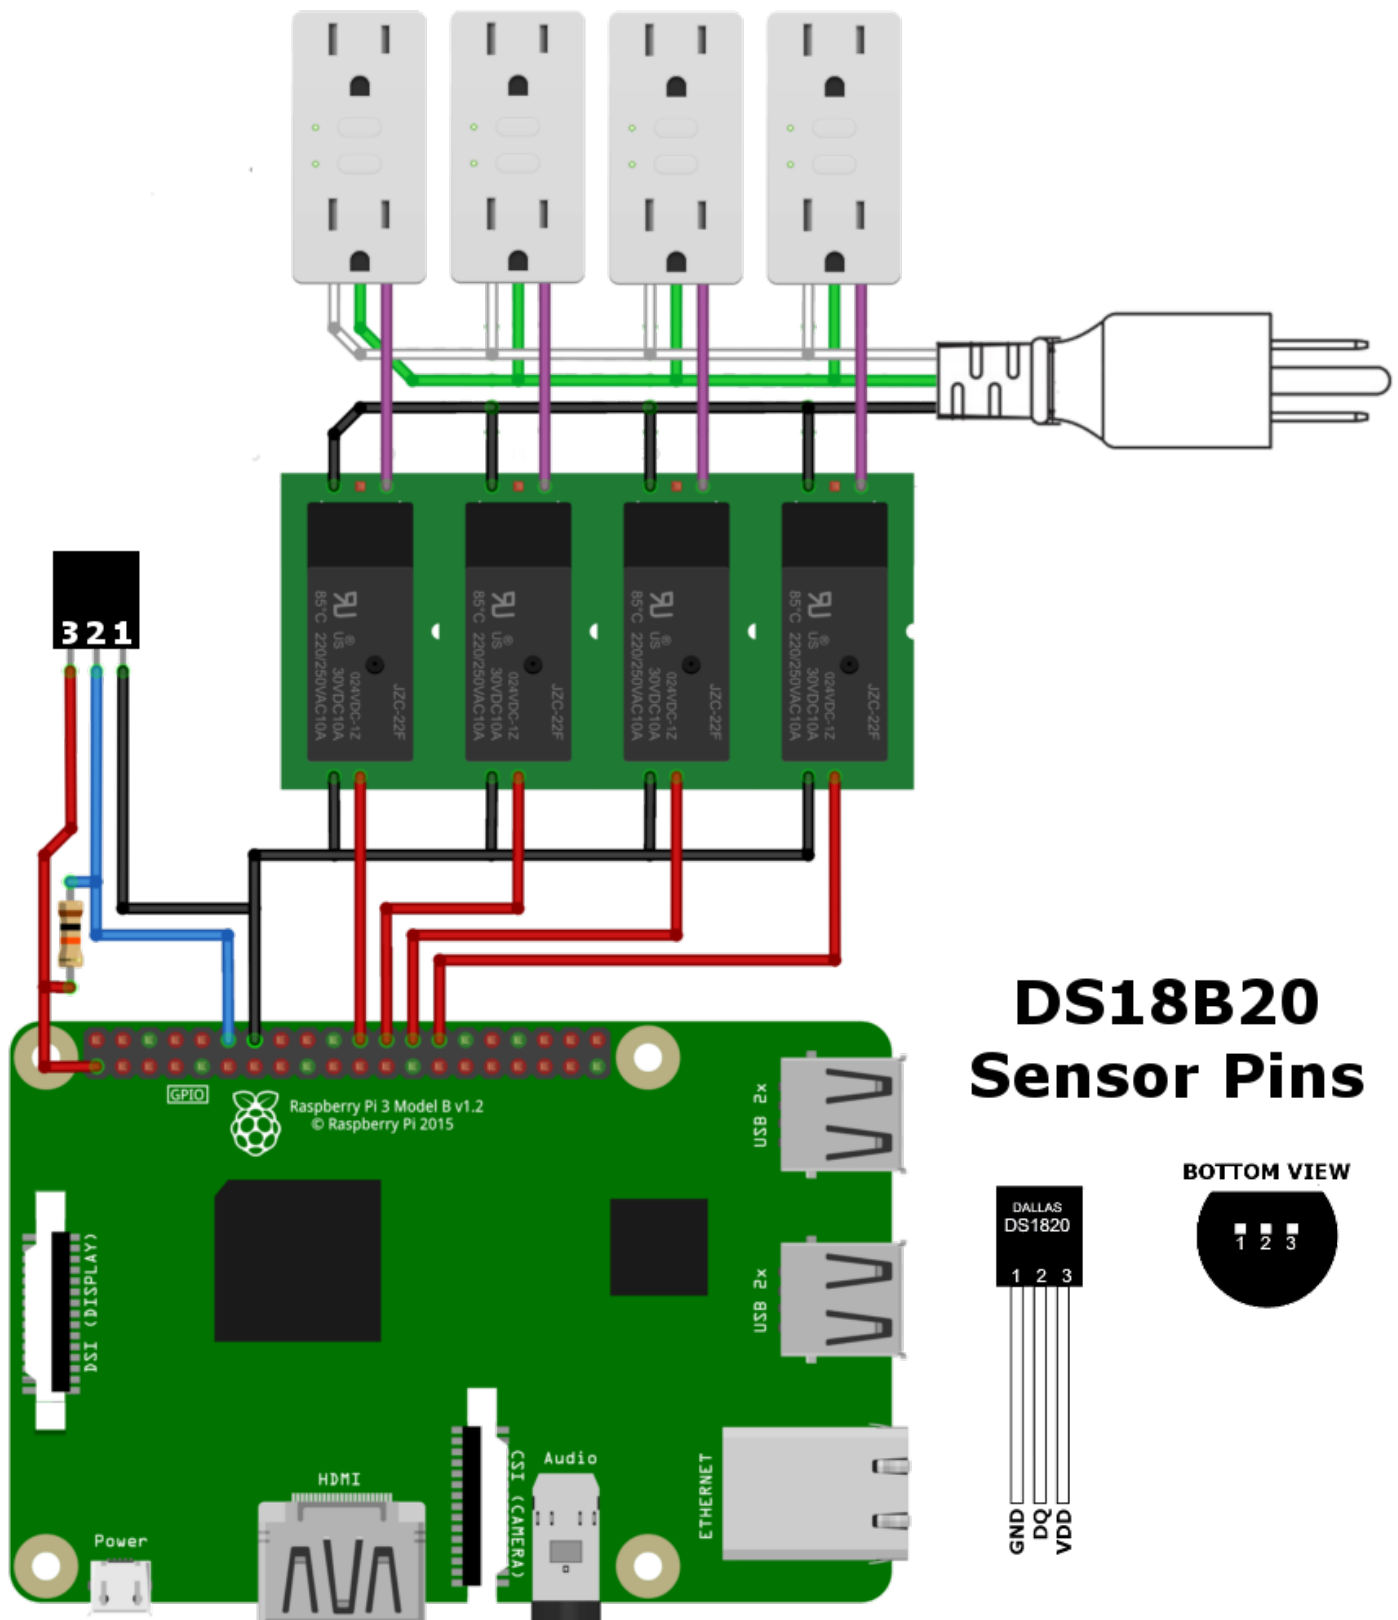

Raspberry Pi, 8 relays, 8 outlets:

8-Outlet Power Strip

8 Relays

