


# Universal Turbo Kit

## User Manual

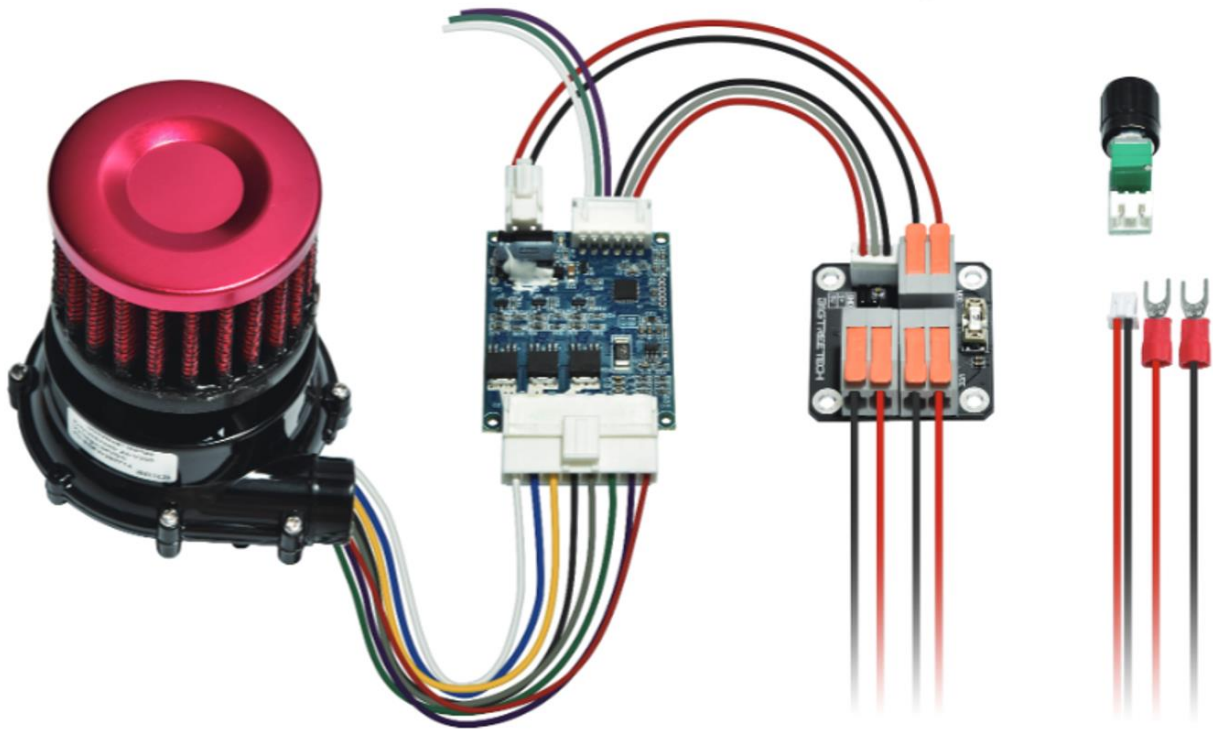

### Product Link:

<https://biqu.equipment/products/universal-turbo-kit>

### GitHub repository:

<https://github.com/bigtreotech/Universal-Turbo-Kit>

## Introduction

The BIQU Universal Turbo Kit consists of high-quality, high-performance components supplied by Wonsmart Motor (a supplier of medical equipment), along with our self-developed controller adapter board and custom cables, to make your CPAP blower installation experience as easy as connecting a regular DC fan. Plug & Play is our game!

## Feature Highlights


- Specially designed adapter board and cable for Plug & Play universal compatibility.
- High-quality, high-performance WS7040 blower and driver from Wonsmart Motor (a supplier of medical equipment).
- 45,000 maximum RPM.
- 6.6 Kpa maximum static pressure.
- 14.7 CFM maximum flow rate.
- Comes with an air filter to prolong turbo lifespan and reduce noise while filtering large filament particles.
- Voron 2.4 exhaust hood mod installation hardware included.
- Voron 2.4 exhaust hood mod model provided.
- Reference 3D model available to aid in designing your own components around the kit.
- Printed noise reduction shroud 3D model available.

## Packaging List

Item	Qty
WS7040-24-V200 Blower	1
WS2403DY01V04 Brushless Driver	1
Air Intake Filter	1
Controller Adaptor Board	1
Power Cable 20AWG x 1m w/ Spade Terminal	1
Control Signal Cable 20AWG x 1m w/ XH2.54	1
BLS Driver Power Cable	1
BLS Driver Signal Cable	1
Potentiometer Knob	1

## Motor Specification


型号 ( Part No)	WS7040-24-V200		
电压 ( Voltage)	24VDC		
风口完全敞开(Free-blowing)			
转速 ( Speed)	37000 ± 7%rpm		
电流 ( Current)	2.7 ± 10%A		
风量 ( Air Flow)	25.5 ± 10% <sup>m<sup>3</sup></sup> /h		
		额定工作点(At Working Point)	
风口完全闭合 ( At static pressure)		风压(Air Pressure)	4Kpa
转速 ( Speed)	45000 ± 7%rpm	转速 ( Speed)	40000 ± 10%rpm
电流 ( Current)	0.8 ± 15%A	电流 ( Current)	1.9 ± 10%A
风压(Air Pressure)	6.5 ± 10%Kpa	风量 ( Air Flow)	13 ± 10% <sup>m<sup>3</sup></sup> /h

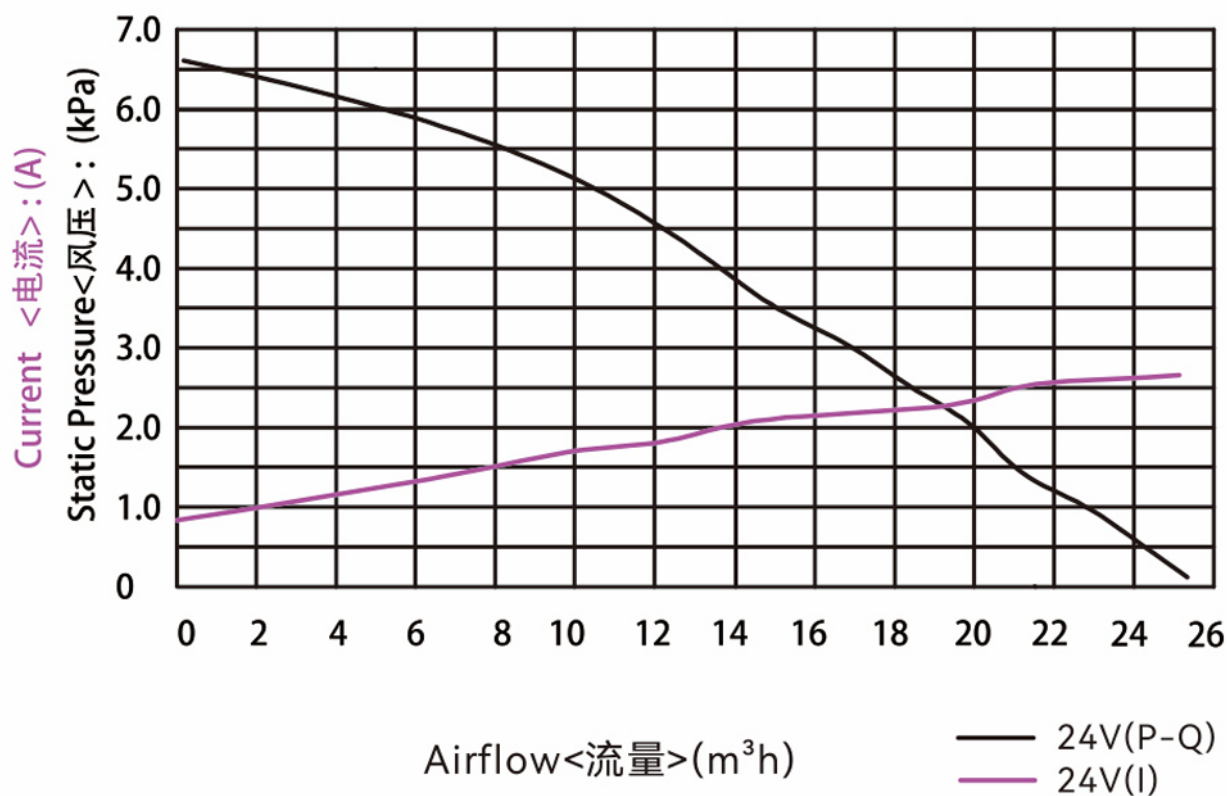


WS7040-24-V200 [24VDC]



## Driver Specification


- Control Function 控制端口:  
F/R-- Connect GND=CCW disconnect=CCW; 接GND=顺时针运转; 悬空=逆时针运转.  
EN--Connect GND=Stop disconnect=Run; 接GND=停机; 悬空=运转.  
SV--0~5V or PWM; 0-5V调速电压或PWM信号.  
FG--Motor Speed Pulse; 电机转速脉冲输出,配东莱公司1对极电机时 1Hz=60r/min.
- Control wires and hall sensor wires can not twist with motor phase wires.  
注意控制信号线和霍尔线不能与电机线缠绕在一起; 否则引起信号干扰, 线长超过500mm需要加屏蔽.
- Operate Voltage: 9-29VDC. 工作电压范围: 9-29VDC. 正负极不能接反, 否则损毁.
- Continous Current-3A; Peak Current-6A; 连续可工作电流-3A; 峰值瞬间电流: 6A
- Power Supplier output current  $\geq$  Rated motor current. 直流电源的输出电流  $\geq$  电机的额定负载电流
- Motor Starting time-2s; 电机启动到全速-2秒钟.
- Hall Sensor Effect Angle-60degree; 霍尔电角度-60度.
- Total Weight-15g; 总重量-15g.

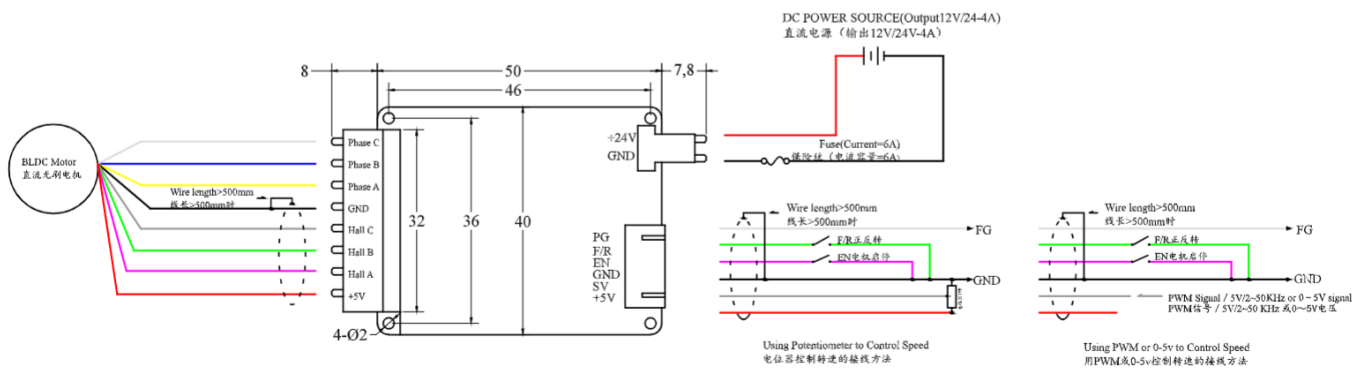

## Dimensions

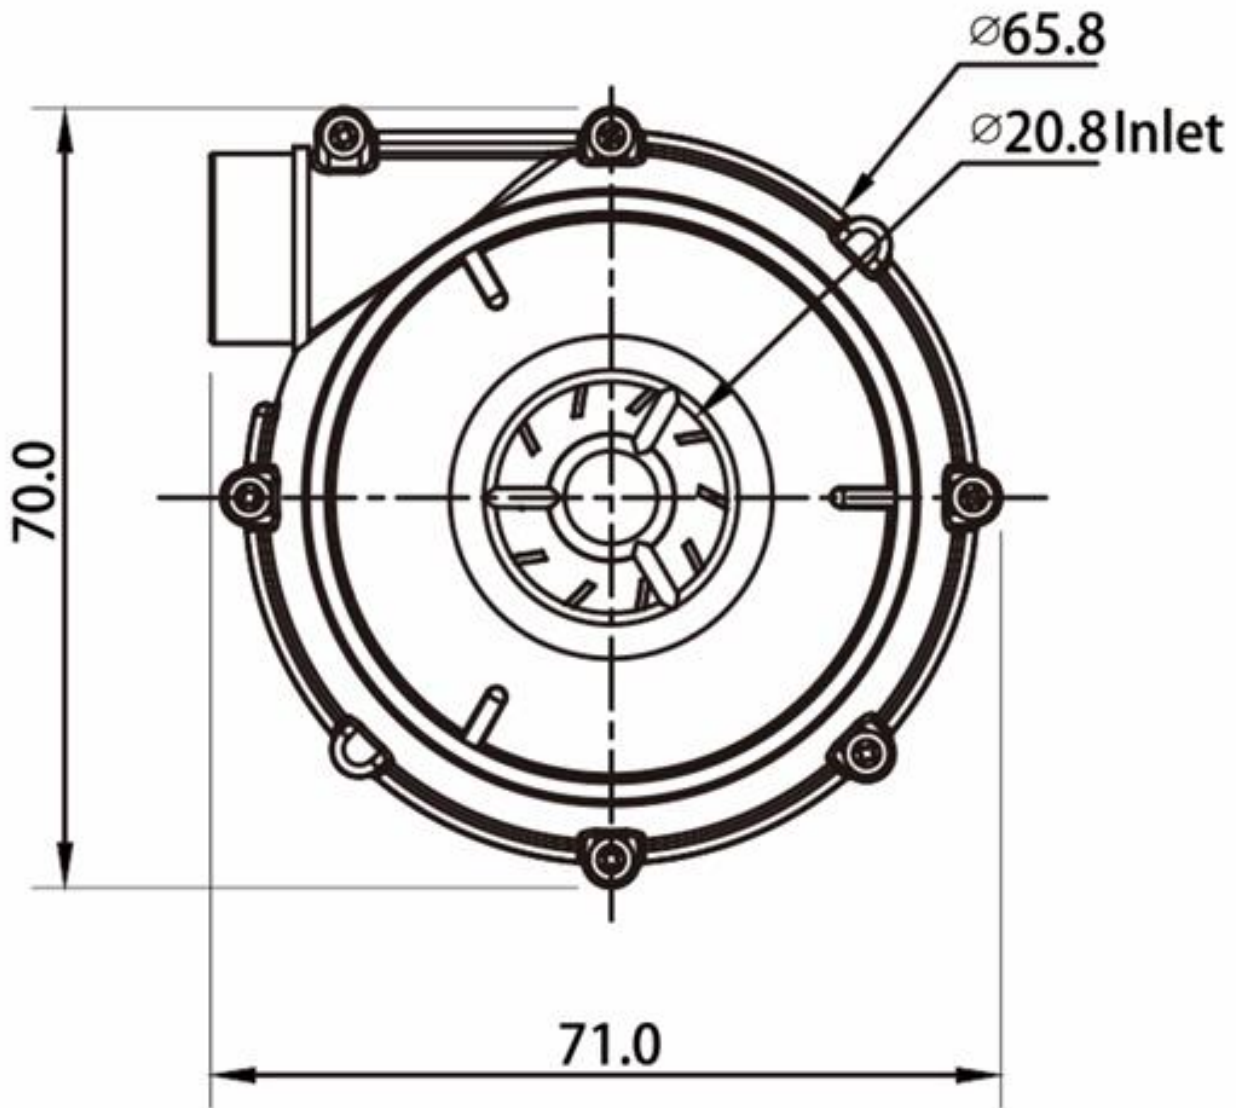

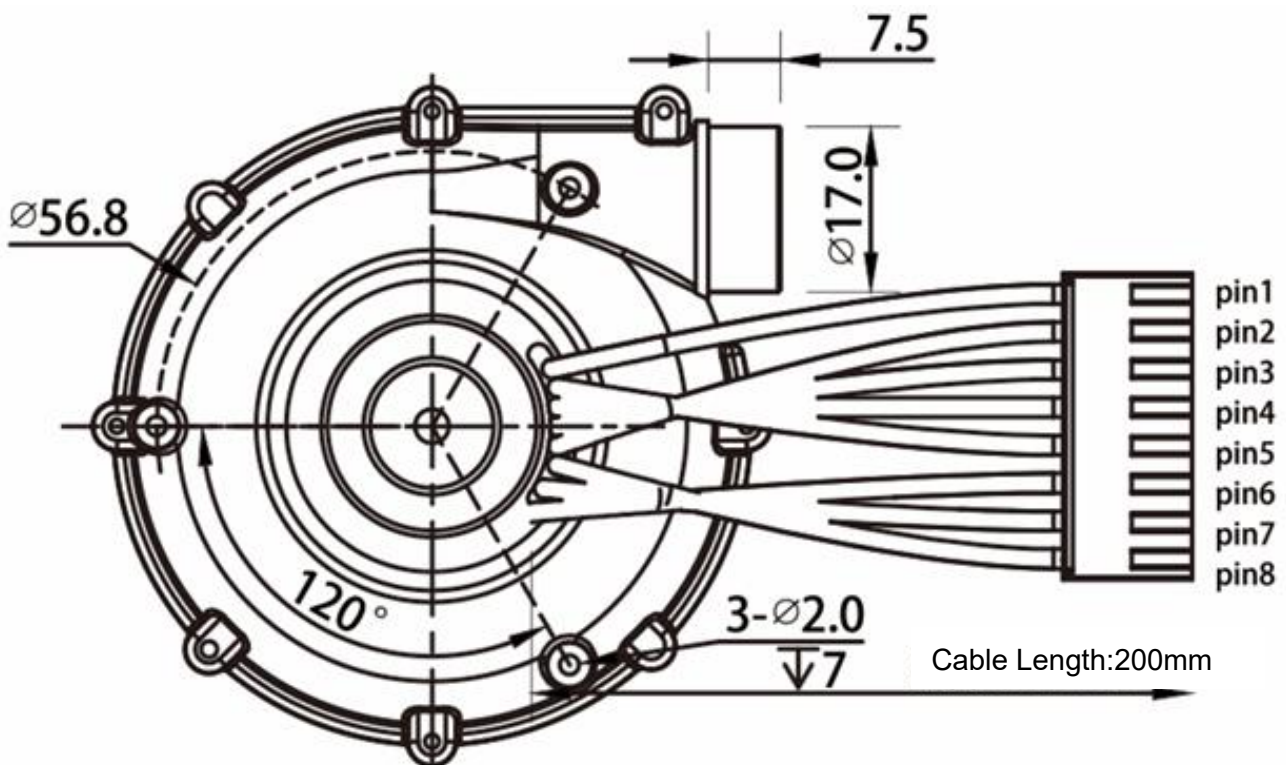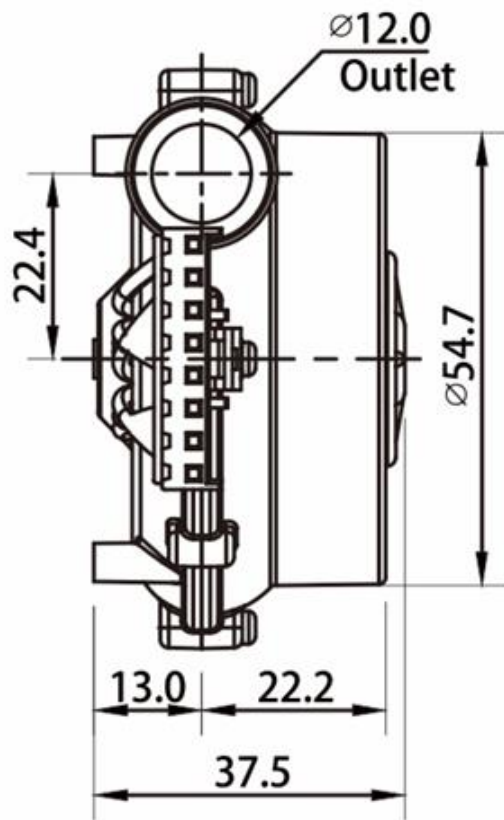

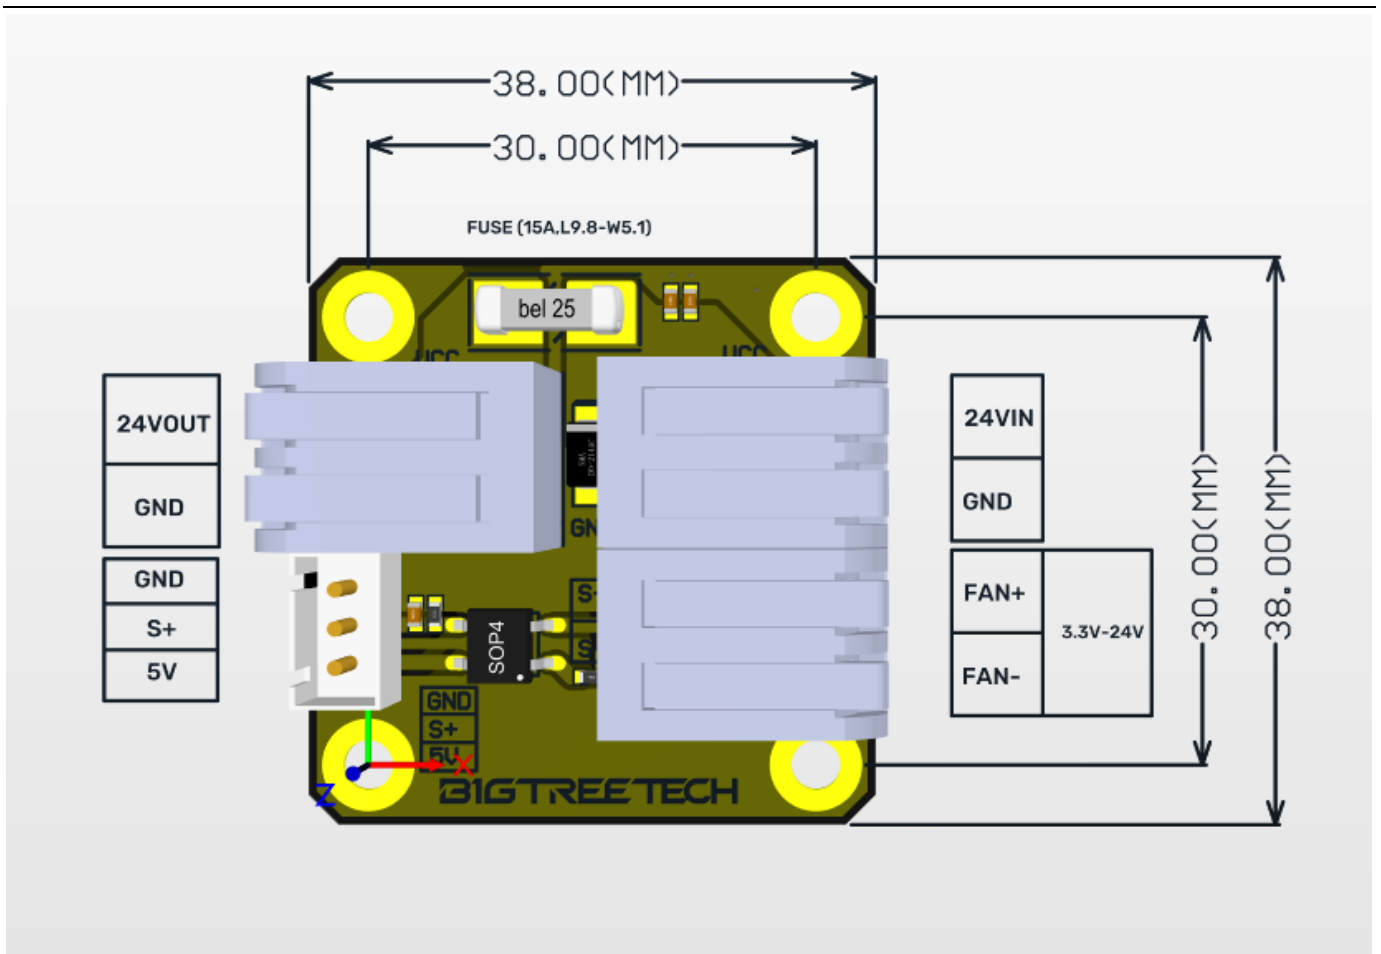

## Wiring Instruction



**To use the potentiometer knob for manual speed control:**

1. Connect the power to 24V.
2. Plug the 3-pin XH2.54 connector into the potentiometer.

**To use a mainboard or Pi SBC for firmware speed control, follow the diagram below:**

1. Insert the BLDC driver power cable into the adapter board.
2. Plug the 3-pin XH2.54 connector into the adapter board.
3. Cut the included power and signal cable to your preferred length.
4. Insert the power and signal cable into the adapter board.
5. Connect the power to 24V DC.
6. Connect the signal cable to any fan port (3.3-24V full range compatibility).



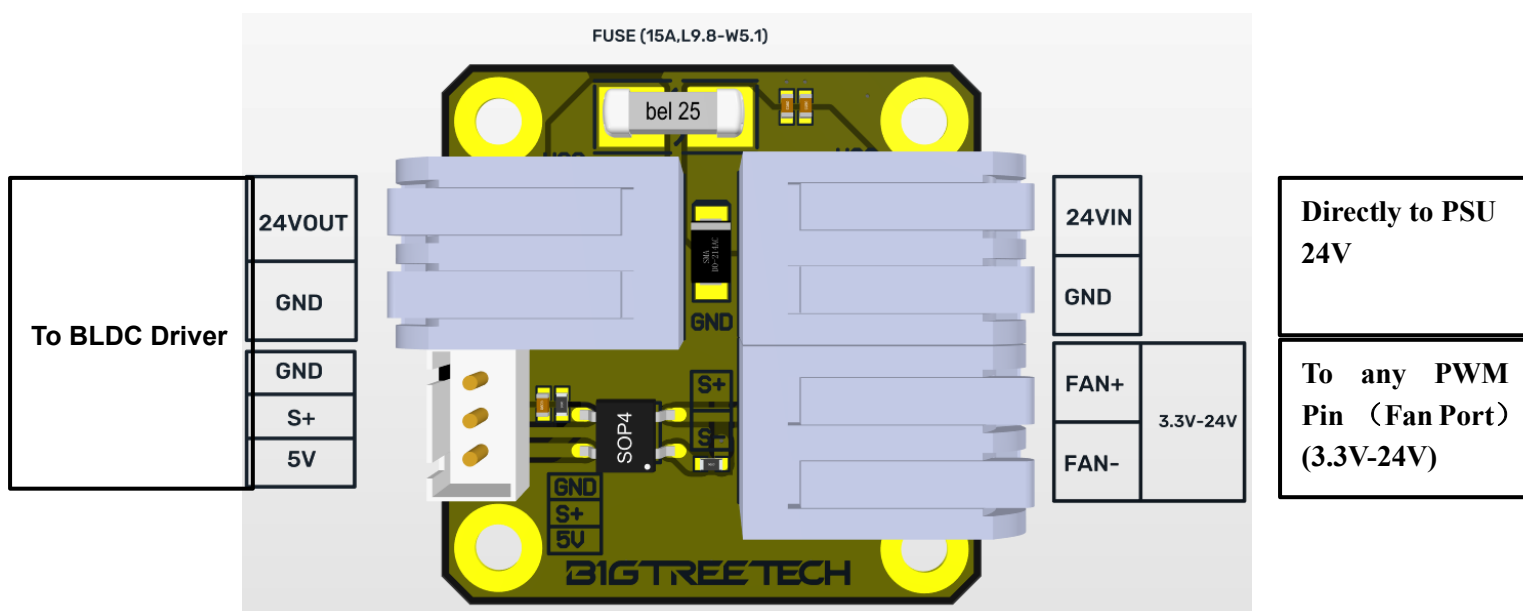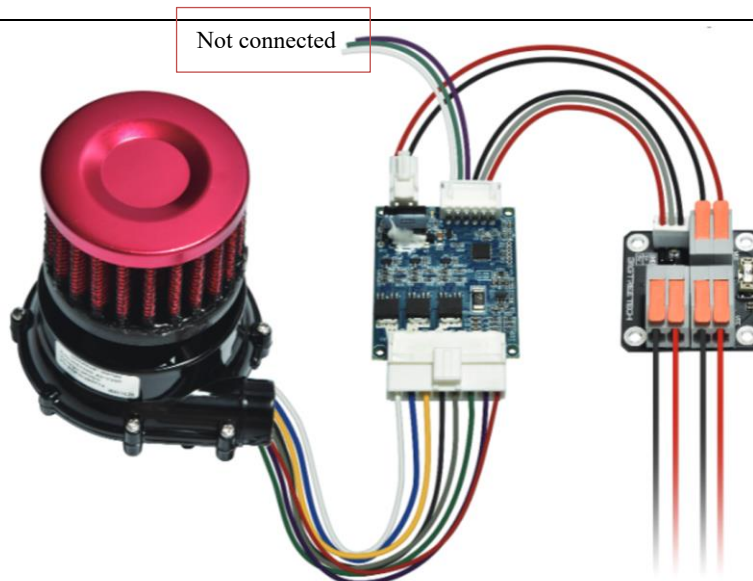



# Firmware Setup

## Klipper

Insert your fan port pin into the pin section below and copy it to your “printer.cfg” file:

[fan]

pin: # Output pin controlling the fan. This parameter must be provided.

max\_power: 0.8

# This should be set to 0.8 on most motherboards to give full range of control to your slicer.

# Anything above 80% duty cycle will be full power on this particular brushless driver.

# To fine-tune the max\_power parameter for your particular motherboard, set max\_power to 1.0, go into the Klipper dashboard, and increase fan speed 1% at a time until the actual fan speed stops increasing as you increase the fan speed. Divide the fan speed at this point by 100 and enter it into the max\_power parameter.

# This parameter defines the maximum power (expressed as a value from 0.0 to 1.0) that the pin may be set to.

# The value 1.0 allows the pin to be set fully enabled for extended periods, while a value of 0.5 would allow the pin to be enabled for no more than half the time.

# This setting may be used to limit the total power output (over extended periods) to the fan.

# If this value is less than 1.0, then fan speed requests will be scaled between zero and max\_power (for example, if max\_power is 0.9 and a fan speed of 80% is requested, then the fan power will be set to 72%).

shutdown\_speed: 0

# The desired fan speed (expressed as a value from 0.0 to 1.0) if

# The microcontroller software enters an error state.

# The default is 0.

cycle\_time: 0.005

# The amount of time (in seconds) for each PWM power cycle to the fan.

# It is recommended this be 10 milliseconds or greater when using software-based PWM.

# The default is 0.010 seconds.

hardware\_pwm: False

# Enable this to use hardware PWM instead of software PWM.

# Most fans do not work well with hardware PWM, so it is not recommended to enable this unless there is an electrical requirement to switch at very high speeds.

# When using hardware PWM, the actual cycle time is constrained by the implementation and may be significantly different than the requested cycle\_time.

# The default is False.

kick\_start\_time: 0.100

# Time (in seconds) to run the fan at full speed when either first enabling or increasing it by more than 50% (helps get the fan spinning).

# The default is 0.100 seconds.

off\_below: 0.1

# The blower will not spin with the included brushless driver when the duty cycle is below 8%. When scaled with Max\_power at 0.8, the off\_below parameter should be set to 0.1.

---

# To calibrate this setting, gradually lower the fan speed to determine the lowest input speed that reliably drives the fan without stalls.

# Set `off_below` to the duty cycle corresponding to this value (for example, 8% -> 0.08/Max\_power -> 0.08/0.8 -> 0.1) or slightly higher.

# This parameter is the minimum input speed that will power the fan (expressed as a value from 0.0 to 1.0).

# When a speed lower than `off_below` is requested, the fan will instead be turned off.

# This setting may be used to prevent fan stalls and to ensure effective kick starts.

# To calibrate this setting, start with `off_below` set to 0.0 and the fan spinning.

# Gradually lower the fan speed to determine the lowest input speed that reliably drives the fan without stalls.

# Set `off_below` to the duty cycle corresponding to this value (for example, 12% -> 0.12) or slightly higher.

#Tachometer\_pin:

# Tachometer input pin for monitoring fan speed. A pullup is generally required.

# This parameter is optional.

#Tachometer\_ppr: 1

# When tachometer\_pin is specified, this is the number of pulses per revolution of the tachometer signal.

#Tachometer\_poll\_interval: 0.0005

# When tachometer\_pin is specified, this is the polling period of the tachometer pin, in seconds.

# The default is 0.0015, which is fast enough for fans below 10,000 RPM at 2 PPR.

# This must be smaller than  $30/(\text{tachometer\_ppr} \times \text{rpm})$ , with some margin, where rpm is the

# maximum speed (in RPM) of the fan.

## Marlin

Enable "FAN\_SOFT\_PWM" and set "SOFT\_PWM\_SCALE" to 5.

## Duet Board

[https://docs.duet3d.com/en/User\\_manual/Connecting\\_hardware/Fans\\_connecting](https://docs.duet3d.com/en/User_manual/Connecting_hardware/Fans_connecting)

## Printed Parts Instruction

Firstly, print everything in the "Stealthburner Parts" folder. You will need the following extra parts to complete the printhead: 1x BTT KNOMI V2.0; 1x 15mm CPAP Tube; 2x Zip Ties

To complete the connection from printhead to the Blower, You will need to purchase the 15mm CPAP separately

Next, select one of the folders in "Exhaust parts" based on your preferred configuration and print everything in the folder. Here are the 4 configurations you can choose from:

1. Voron-Exhaust-UTK-SFS-without-fan: Redesigned version of the Voron exhaust hood with an integrated SFS V2.0 module, making use of the included Air Filter, without the 60mm exhaust fan. This is the recommended configuration as it completely encloses the blower, keeping the noise level to a minimum.

\*This design is a remix based on the design from @MichalKelnar\_1267496 on Printables.

Original design link: <https://www.printables.com/model/668556-modified-voron-exhaust-filter/files>

For this configuration, you will need the following extra parts:

1x BIGTREE TECH SFS V2.0 module

2. Voron-Exhaust-UTK-without-fan: modified Voron design V2.4 exhaust hood without a 60mm exhaust fan. This is the recommended configuration for non-SFS users as it completely encloses the blower, keeping the noise level to a minimum.

For this configuration, no extra parts are needed.

3. Voron-Exhaust-UTK-SFS-with-fan: this is a redesigned version of the Voron exhaust hood with an integrated SFS V2.0 module and a 60mm exhaust fan. A powerful 60mm fan is needed to maintain negative pressure in the printer enclosure due to the CPAP blower position; bear in mind that this will produce a high noise level, as the blower isn't enclosed.

\*This design is a remix based on the design from @MichalKelnar\_1267496 on Printables.

Original design link: <https://www.printables.com/model/668556-modified-voron-exhaust-filter/files>

For this configuration, you will need the following extra parts:

1x BIGTREE TECH SFS V2.0 module; 1x 60mm Axial Fan

4. Voron-Exhaust-UTK-with-fan: original Voron design V2.4 exhaust hood with a 60mm exhaust fan. A powerful 60mm fan is needed to maintain negative pressure in the printer enclosure due to the CPAP blower position; bear in mind that this will also produce a high noise level, as the blower isn't enclosed.

For this configuration, you will need the following extra parts:

1x 60mm Axial Fan

---

## Product Purchase Link

### Purchase Link:

<https://biqu.equipment/products/universal-turbo-kit>

**If you have any issues with the product, please submit a support ticket.**

<https://biqu3d.com/pages/submit-a-ticket>

### Navigation:

BIQU Official Website: <http://biqu3d.com>

BIGTREETECH Official Website: <http://bigtree-tech.com>

Online Store: <https://biqu.equipment>

Community: <https://community.biqu3d.com>