

C:\Documents And Settings\User\Desktop\BurnInStatic\Documentation

- 0) Boot up the computer to the Desktop. There should be a folder on the desktop called "BurnInStatic". Open it.
 - If this folder is missing, there is a backup copy located at \\Villard\SharedFiles\jtsiao
- 1) There should be an application titled "burnInMonitor" inside the folder. Launch it.
 - There may be a *.ini* file called "burnInSetup" in the same directory. This is the setup file. It is not required for the program to run.
- 2) Use the dropdown box to pick the COM port for the Seeeduino.
 - On this machine, the default is COM6.
 - If the button does not respond, restart the program.
 - If the program still cannot detect the Seeeduino, you may need to reinstall the Seeeduino burn-in firmware. See "burnInSeeeduino.pdf" in the folder BurnInStatic\Documentation.
- 3) If a valid setup file exists, click the first button. Otherwise, enter parameters manually with the second button.
 - For help regarding the setup file, click "Help>Restore Setup File."
 - If you enter parameters manually, you must key *Enter* to activate the next box and store the variable.
 - Manually entered parameters supersede parameters from a setup file.
 - If entering manually, all parameters must be manually updated.
- 4) Click the "Save To Logfile" checkbox to pick a save directory for the logfile.
 - You will be prompted to create the new logfile if it does not exist already.
 - If it does exist already, your data will be appended to the existing file. The existing file will not be overwritten.
 - Two files will be created in the directory you specify:
 - "Burn_Logfile_[date].csv" logs data for every board
 - "Burn_Logfile_[date]_ErrorLog.csv" logs data only for the boards that failed
- 5) Click the "Choose Boards" button and select which boards you wish to monitor.
- 6) You can enter a number into the "Diagnostic" box to verify board connectivity and program functionality.
 - This step is optional.
 - Be sure to key *Enter* to store the input and activate the button.
- 7) Now click "Start" to begin monitoring. The bottom status bar will display timing information.
 - Once monitoring is started, you must use "Stop" to discontinue monitoring before closing the program.
 - Once the timing interval has expired, the panel will briefly display "*Collecting Results*" as the COM port collects the data. You should not click the "Stop" button during this time, or it may create a COM port error.
 - Use the "Force Read" button to invoke the power of The Force and perform a read immediately.
- 8) You can use the radio buttons to choose which results are visible in the panel.
 - Regardless of the radio button chosen, all results are stored in the logfiles.

-
- The program is designed to prevent data loss in the event of a program crash or freeze.
 - Note that the program cannot detect a cable/connection problem beyond the COM port. The program communicates only with the Seeeduino and requires that the static burn-in monitoring station be set up correctly. See the pictures and block diagram in the folder BurnInStatic\Documentation.
 - When turning off or restarting the computer, disconnect the Seeeduino to avoid firmware errors. Upon successful restart, reconnect the Seeeduino before launching the program.
 - When monitoring is in progress, do not open or edit the logfiles. This can cause permission/access conflicts and may result in a crash.
 - The colors in the panel tell you how the board is doing.
 - These numbers can be changed in the setup file, but cannot be specified manually.
 - **Green** boards are passing (< 5% deviation past the bounds)
 - **Yellow** boards are just barely failing (between 5% and 10% past the bounds)
 - **Red** boards are failing hardcore (> 10% past the bounds)