





# VCMC Bitwig Controller

This Script was created for Befaco VCMC v1.1 factory default settings. Make sure you update your VCMC module to version 1.1 and use default settings for it to work.

For any issue related to VCMC configuration, please refer to user manual or drop a mail to [support@befaco.org](mailto:support@befaco.org)

VCMC has two funtional modes in Bitwig: Device and Mixer.  
The modes decide how the 8 faders are pre-mapped. In Device mode the 8 faders of VCMC are mapped to the Remote Controls of the current device (instrument or effect), in Mixer mode they are mapped to the first 8 tracks in your project.  
Open the Studio I/O Panel in Bitwig Studio to swap between modes.

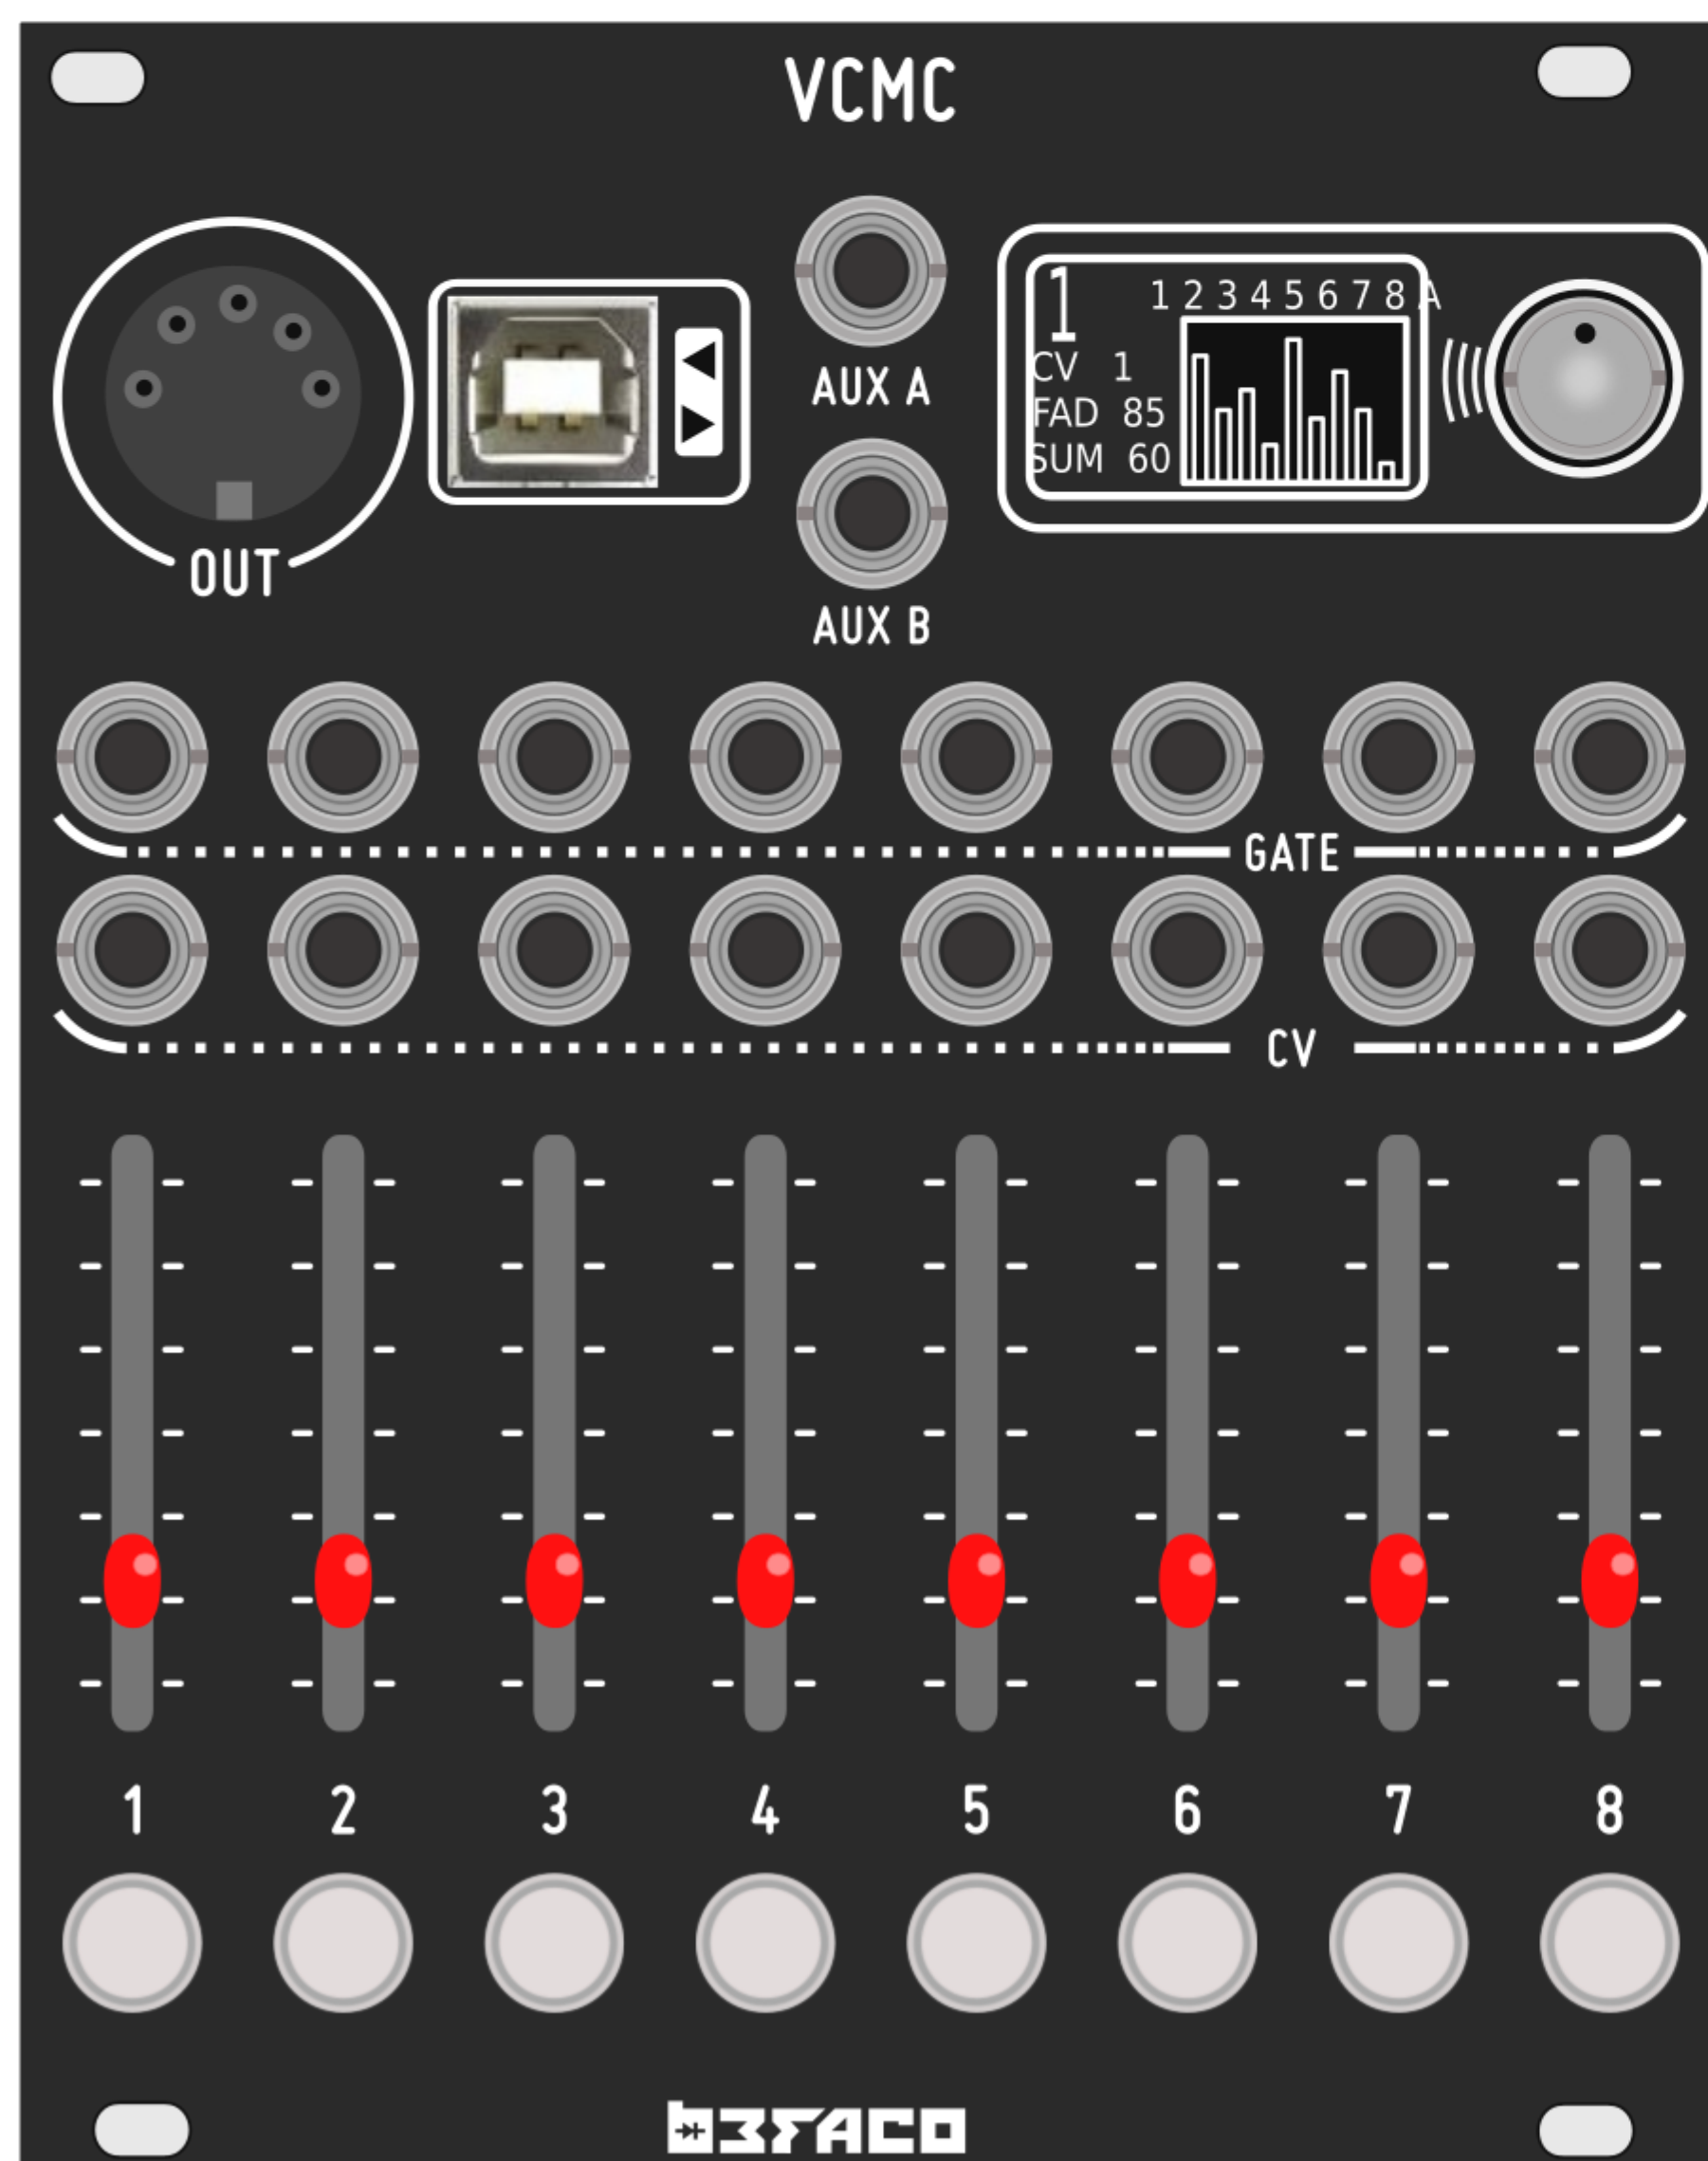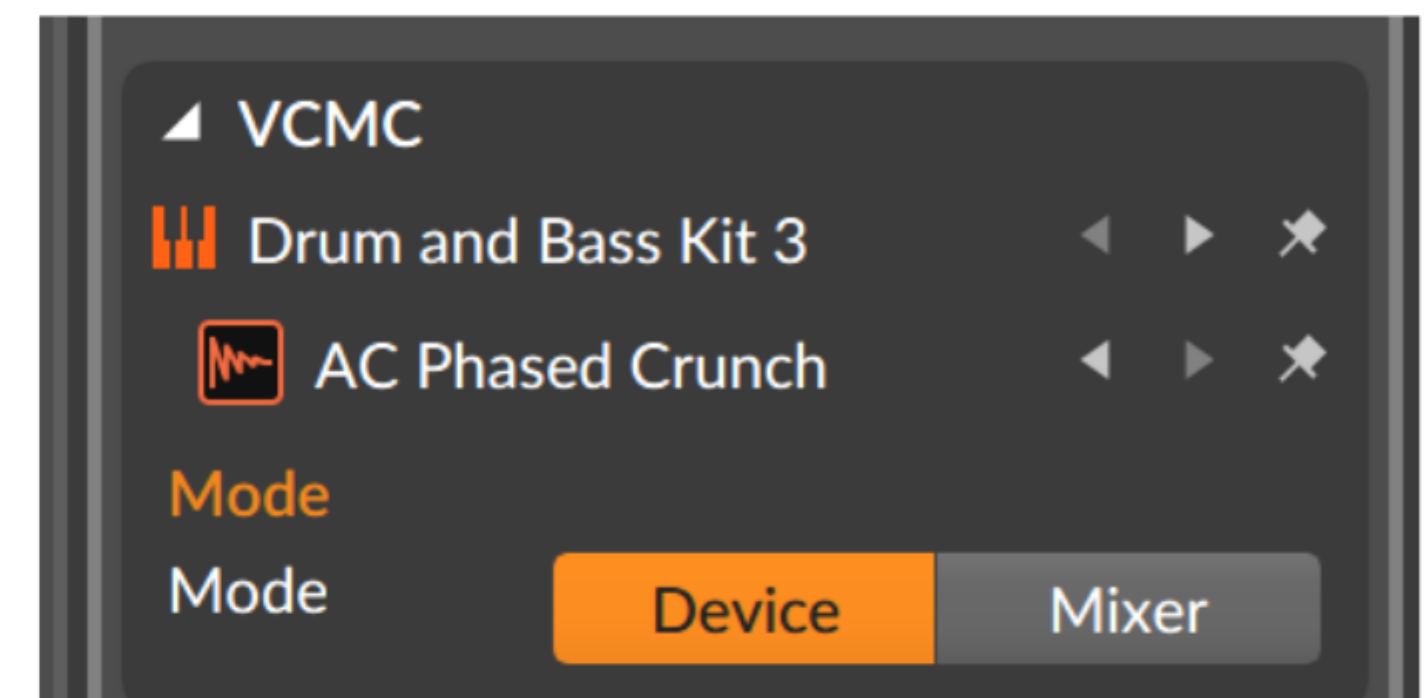

## Aux INs A-B

AuxA CC 32 - AuxB CC 33 - Freely Mapable

## Gate INs 1-8

Same function as Buttons

## CV INs 1-8

CC:14-21 - Freely Mapable

## Faders 1-8

**Device mode:** CC:23-30 - Remote Controls  
**Mixer mode:** CC:23-30 - Volume for tracks 1-8

## Buttons 1-8

C Major Scale starting in C3 (Note 60)