


Panasonic®

Operating Instructions Mode d'emploi

Toaster Oven (Household Use)
Four grille-pain (Usage Domestique)

Model No. NB-G110P
Modèle

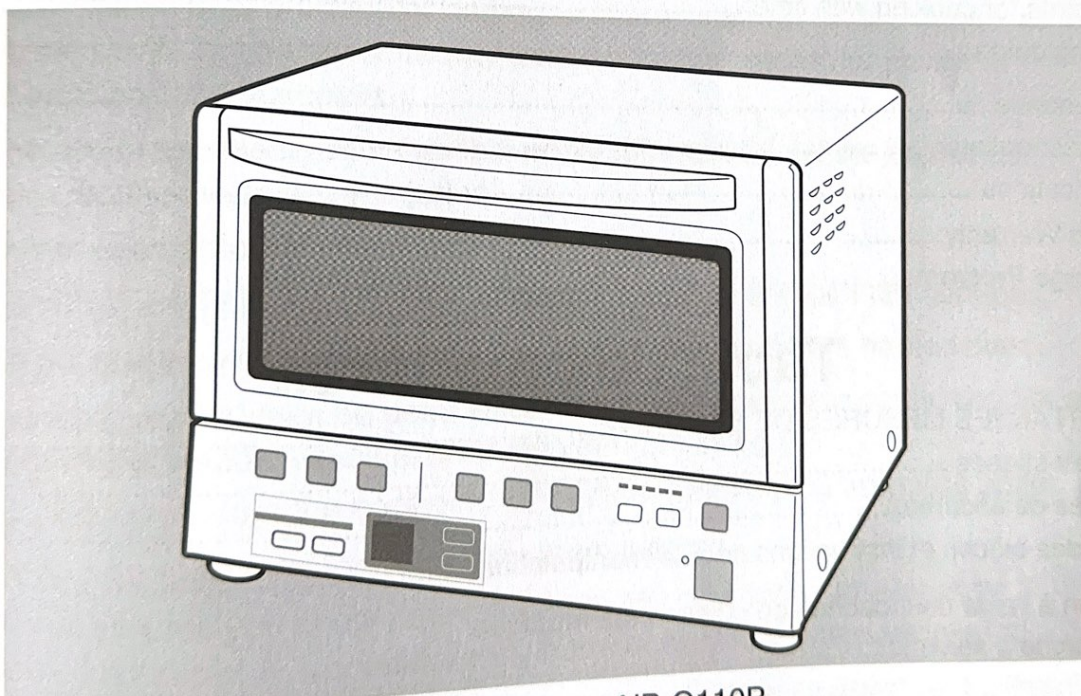

Thank you for purchasing Toaster Oven, NB-G110P.
Please read these instructions carefully before using this product
and save this manual for future use.
This product is intended for household use only.
Merci d'avoir acheté le four grille-pain NB-G110P.
Veuillez lire attentivement les présentes instructions avant d'utiliser
ce produit et conserver ce manuel pour une utilisation ultérieure.
Ce produit est destiné à un usage domestique uniquement.



BZ51-1755
PMX0912K30721

Cooking guide

Automatic cooking Cooking results may vary. Adjust shade control to your individual preferences.

Key	Recipes	Quantity	Oven tray	Standard cooking time	Note
Toast	Bread	1-4 slices	—	2-3 min.	Place sliced surface up.
	Bagels		—		
Frozen Waffle	Bread, Frozen	1-4 slices	—	4-5 min.	Place sliced surface up.
	Bagels, Frozen		—		
	Garlic Bread, Frozen		○		
	Waffles, Frozen		—		
	French Toast, Frozen		—		
Reheat Roll	Hot Dog Rolls	1-4 Rolls	—	2-3 min.	
	Hamburger Buns	1-4 Buns	—		
	Cinnamon Rolls	1-4 Rolls	○		
Frozen Pizza	Frozen Pizza	Up to 9 inches	○	12-14 min.	
	Frozen Chicken Nuggets	Up to tray range	○		
	Frozen Fish Sticks		○		
	Frozen Fish Fillets		○		
Reheat Quick	Egg Rolls	Up to tray range	○	5-7 min.	
	Chicken Wings		○		
	Pizza		○		
	Hot Dogs		○		
	Hot Sandwiches		○		
Frozen Hash Browns	Frozen Hash Browns	Up to tray range	○	4-6 min.	
	Frozen French Fries		○		
	Frozen Onion Rings		○		

Manual cooking Cooking results may vary. Adjust temperature and time settings to your individual preferences.