
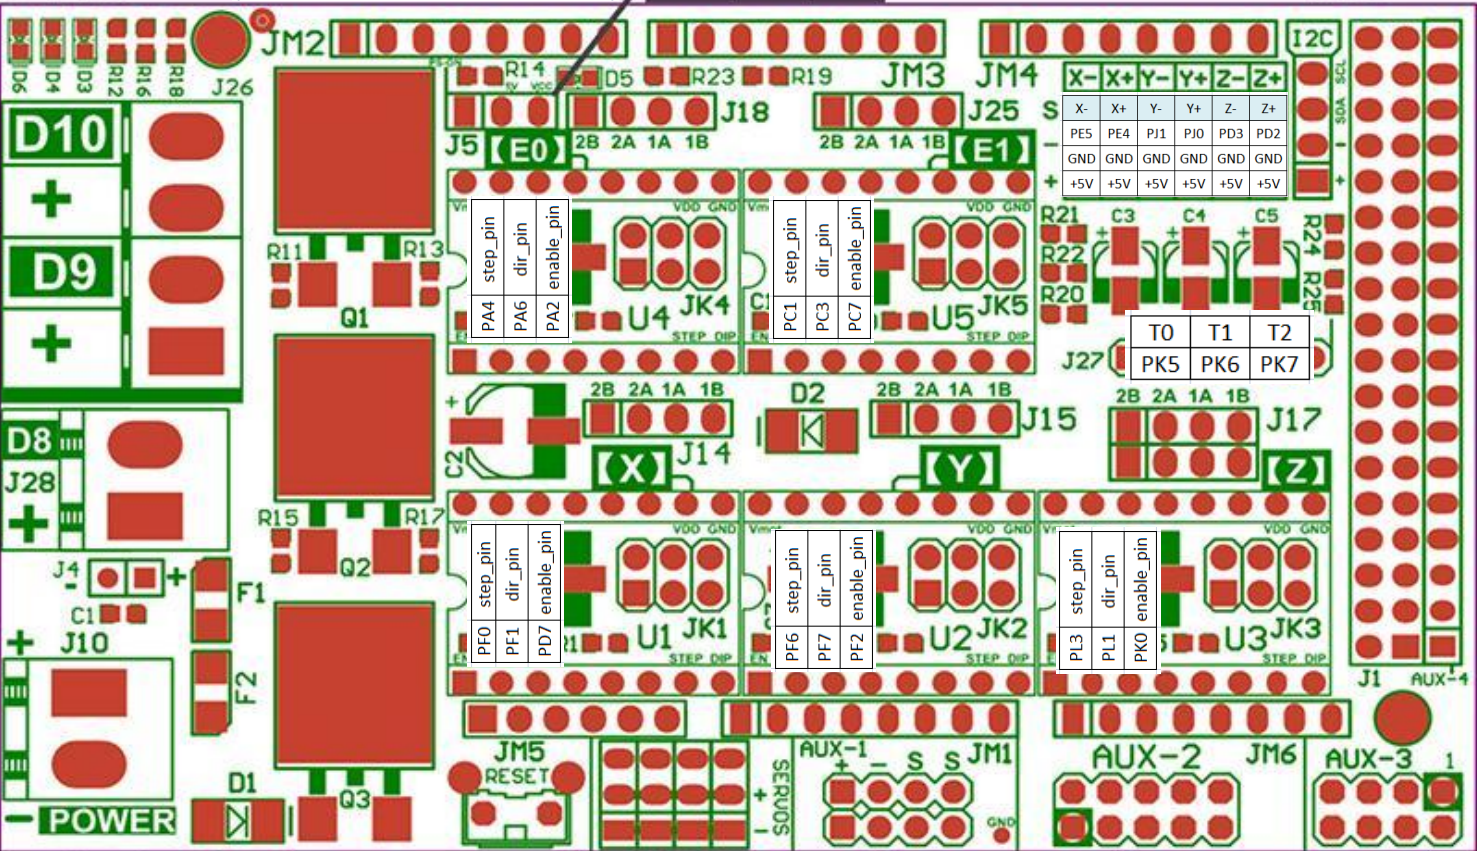
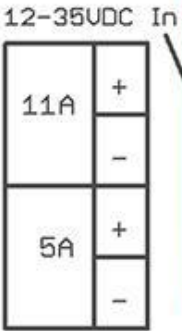


Reversing input power, and inserting stepper drivers incorrectly will destroy electronics.

RAMPS 1.6

JUMPER BETWEEN 5V AND VCC

PSON 5V VCC

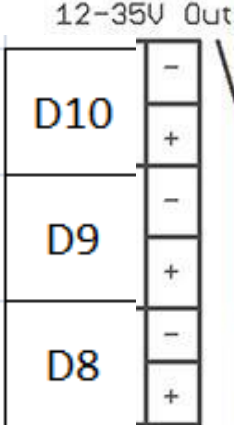

I2C

PD0
PD1
GND
5V

AUX-4

PH1
PH0
PA1
PA3
PA5
PA7
PC6
PC4
PC2
PC0
PG2
PG0
PL6
PL4
PL2
PC5
GND
5V

PB5	PH3	PE3	PG5
5V	5V	5V	5V
GND	GND	GND	GND
SERVO #1	SERVO #2	SERVO #3	SERVO #4

SERVO

AUX-1

5V	GND	PE1	PE0
5V	GND	PF3	PF4

AUX-2

GND	PK1	PG1	PL7	PK3
5V	PF5	PK2	PL5	PK4

AUX-3 / SPI

GND	PB1	PB3	5V
NC	PB0	PB2	PL0