



# Freenove Hardware View


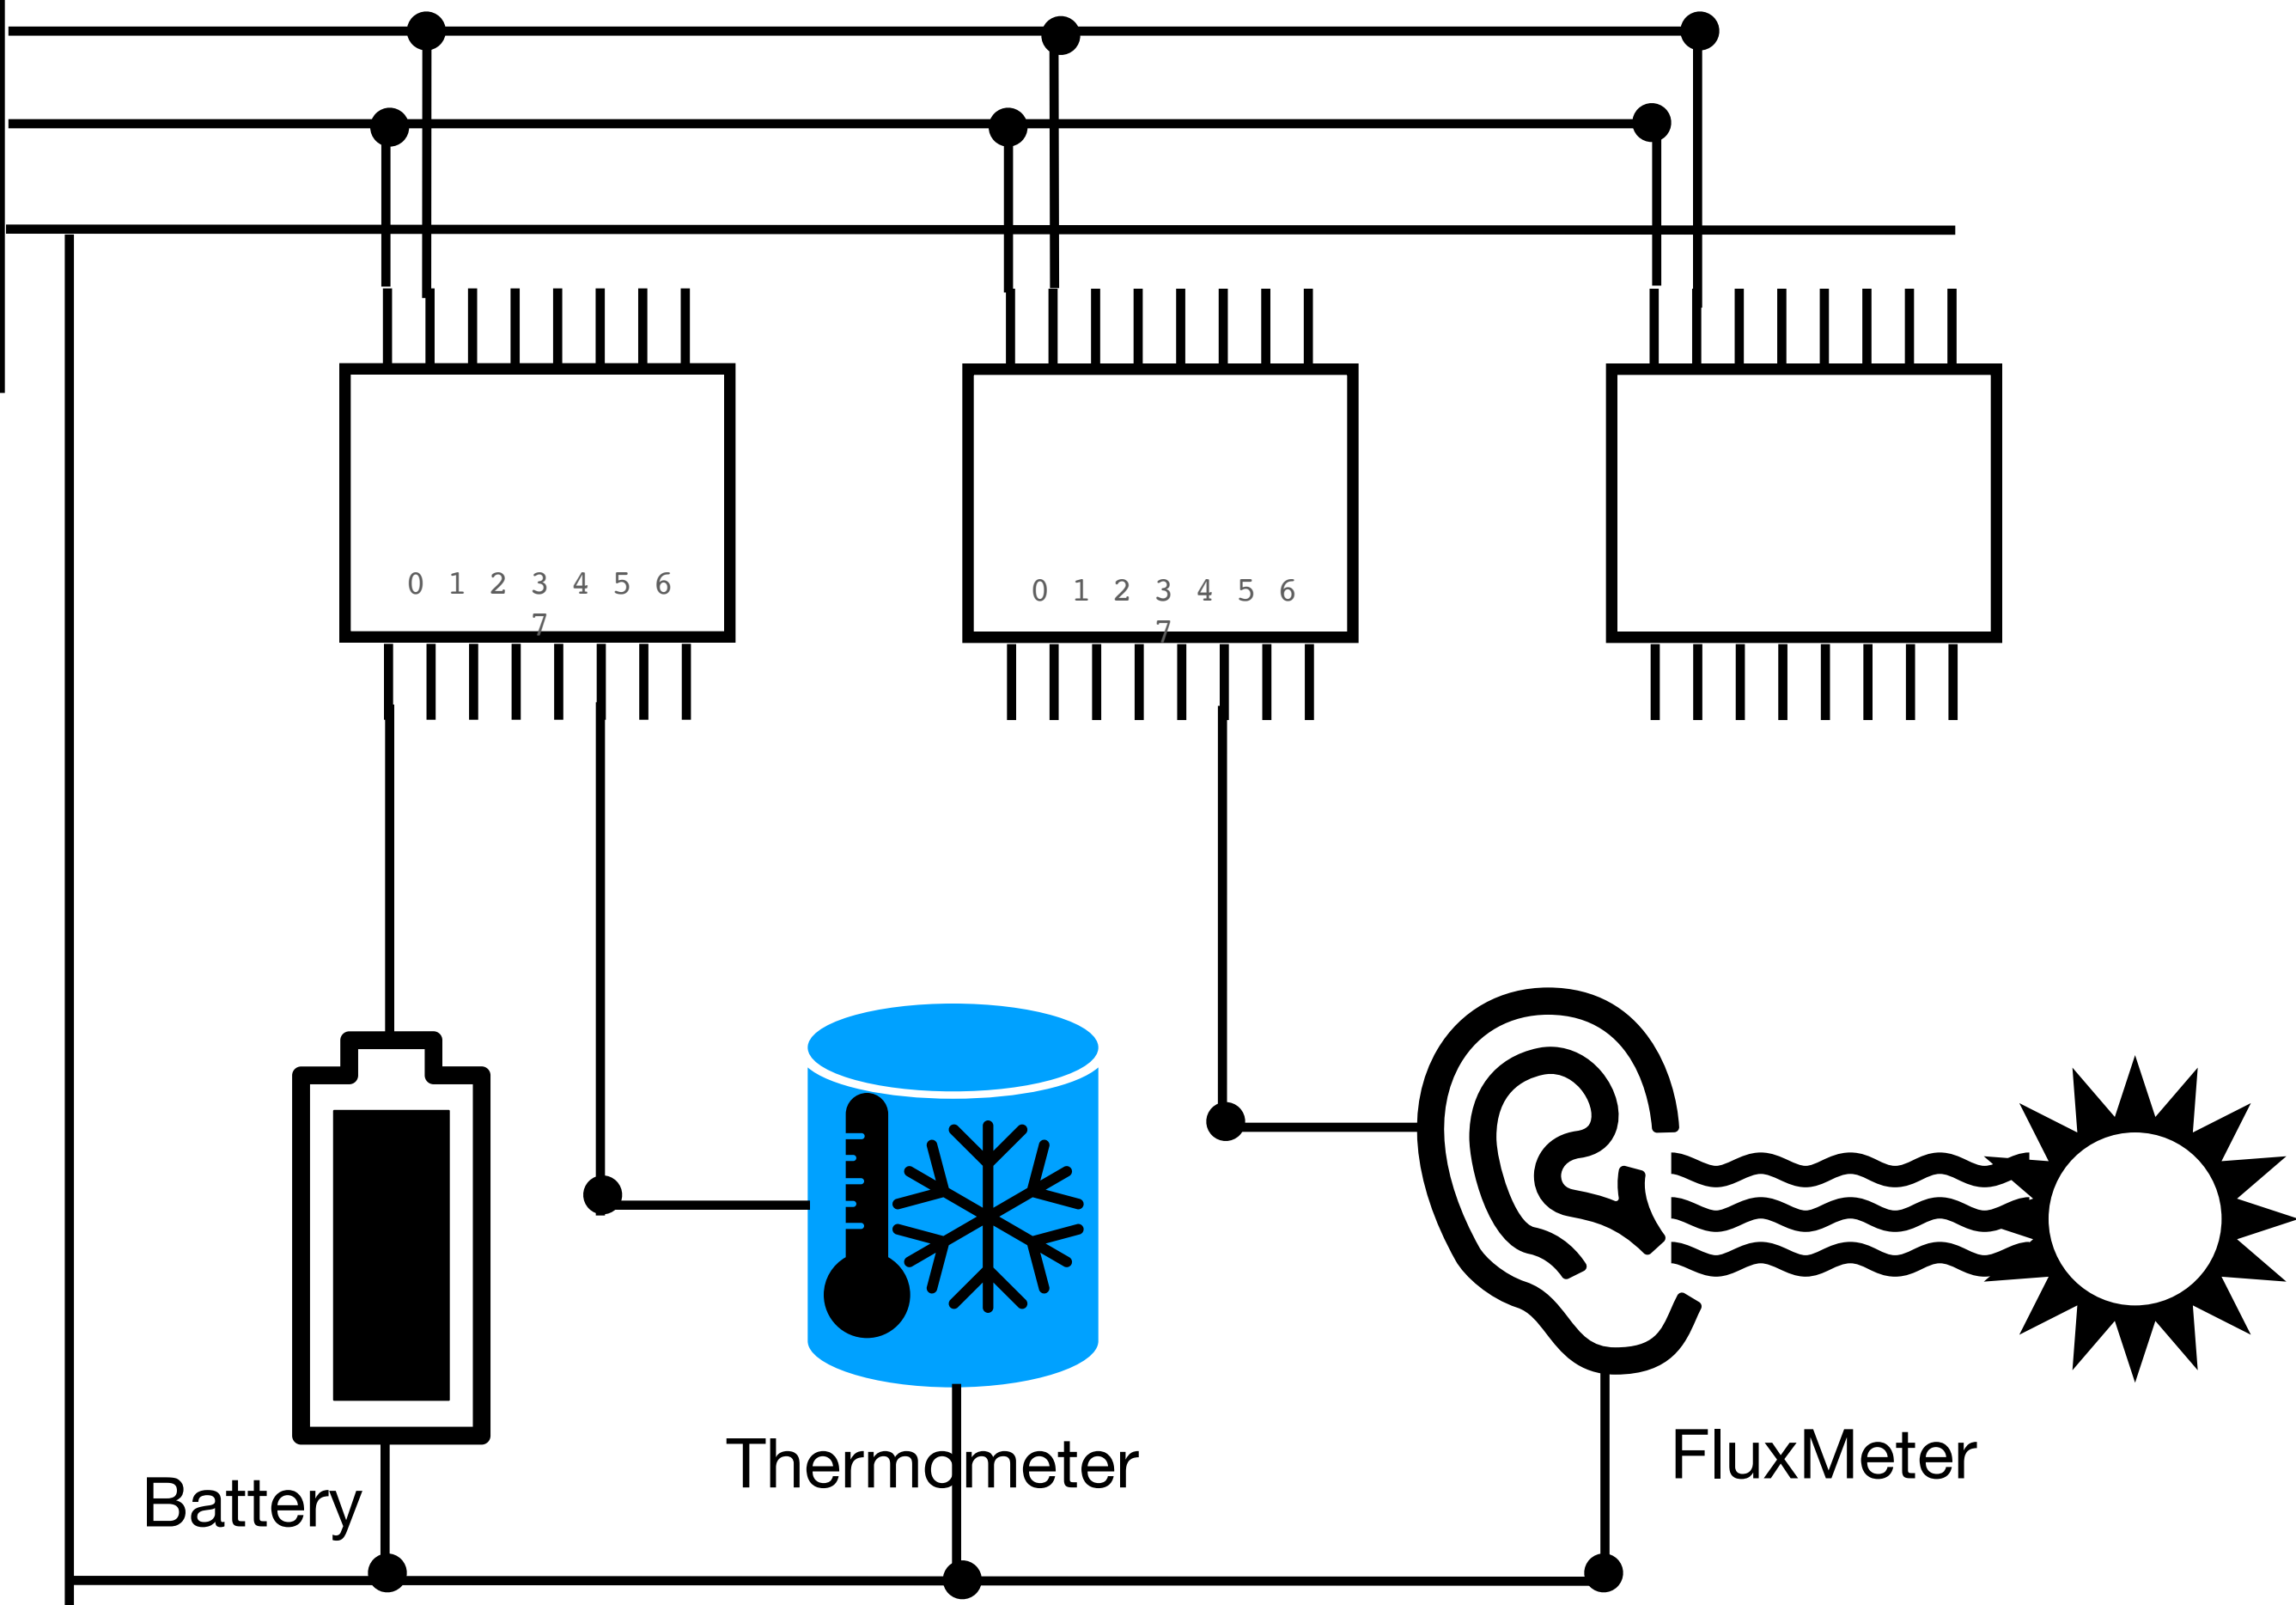


# Freenove Software View

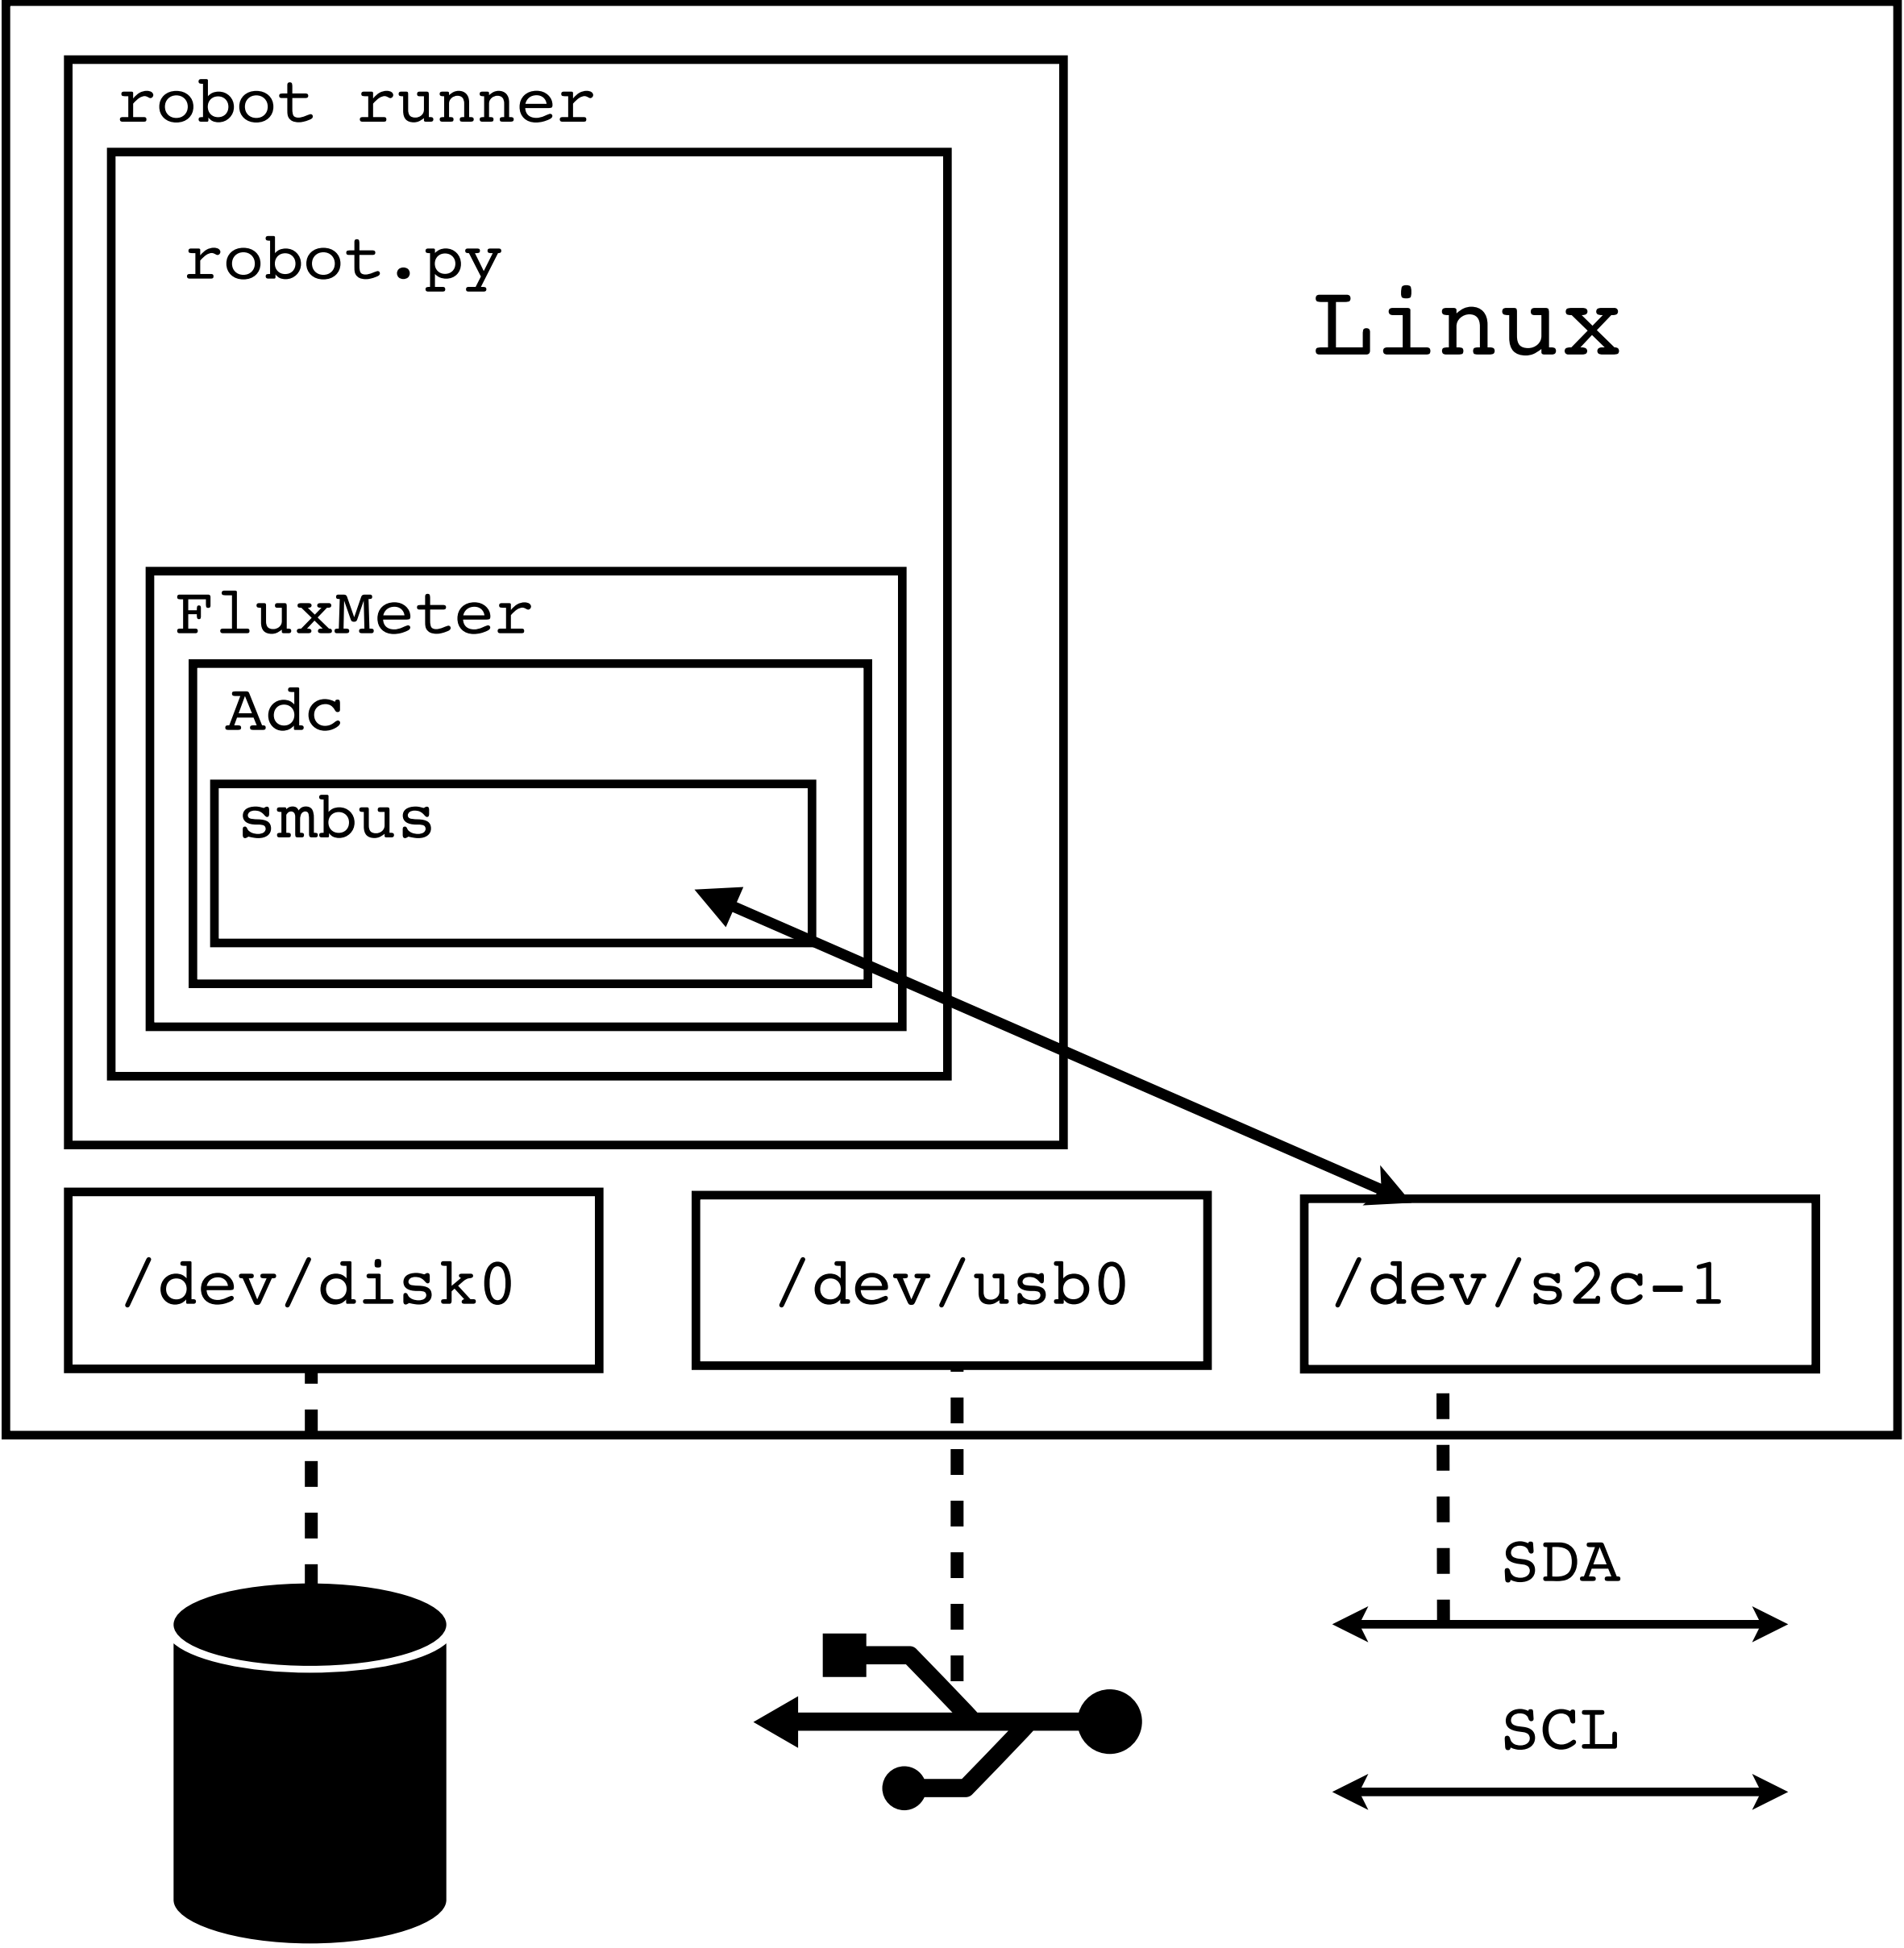


# RoboRIO Hardware View

Sensors connected to Analog Input Pins: AI0, AI2, and AI3

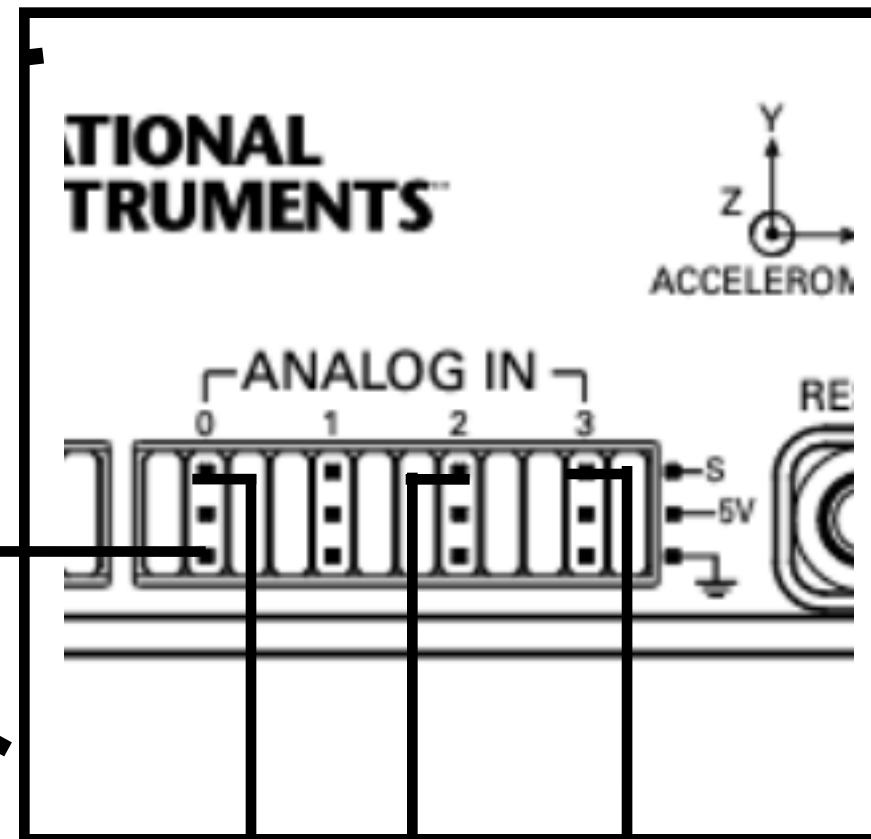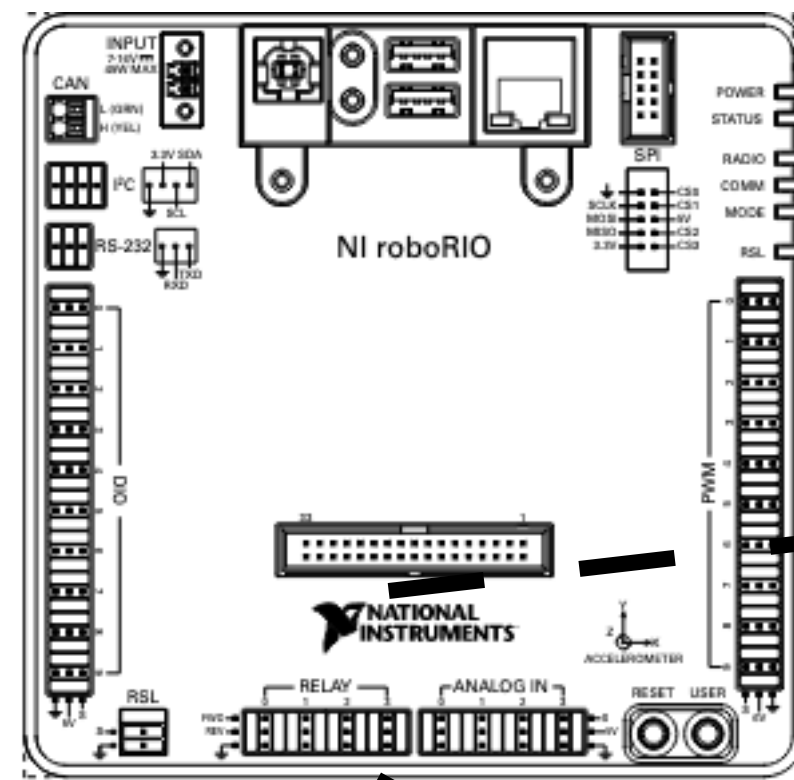

Note: many sensor devices may also need to be powered by a connection to +5. Connections are omitted to avoid clutter.

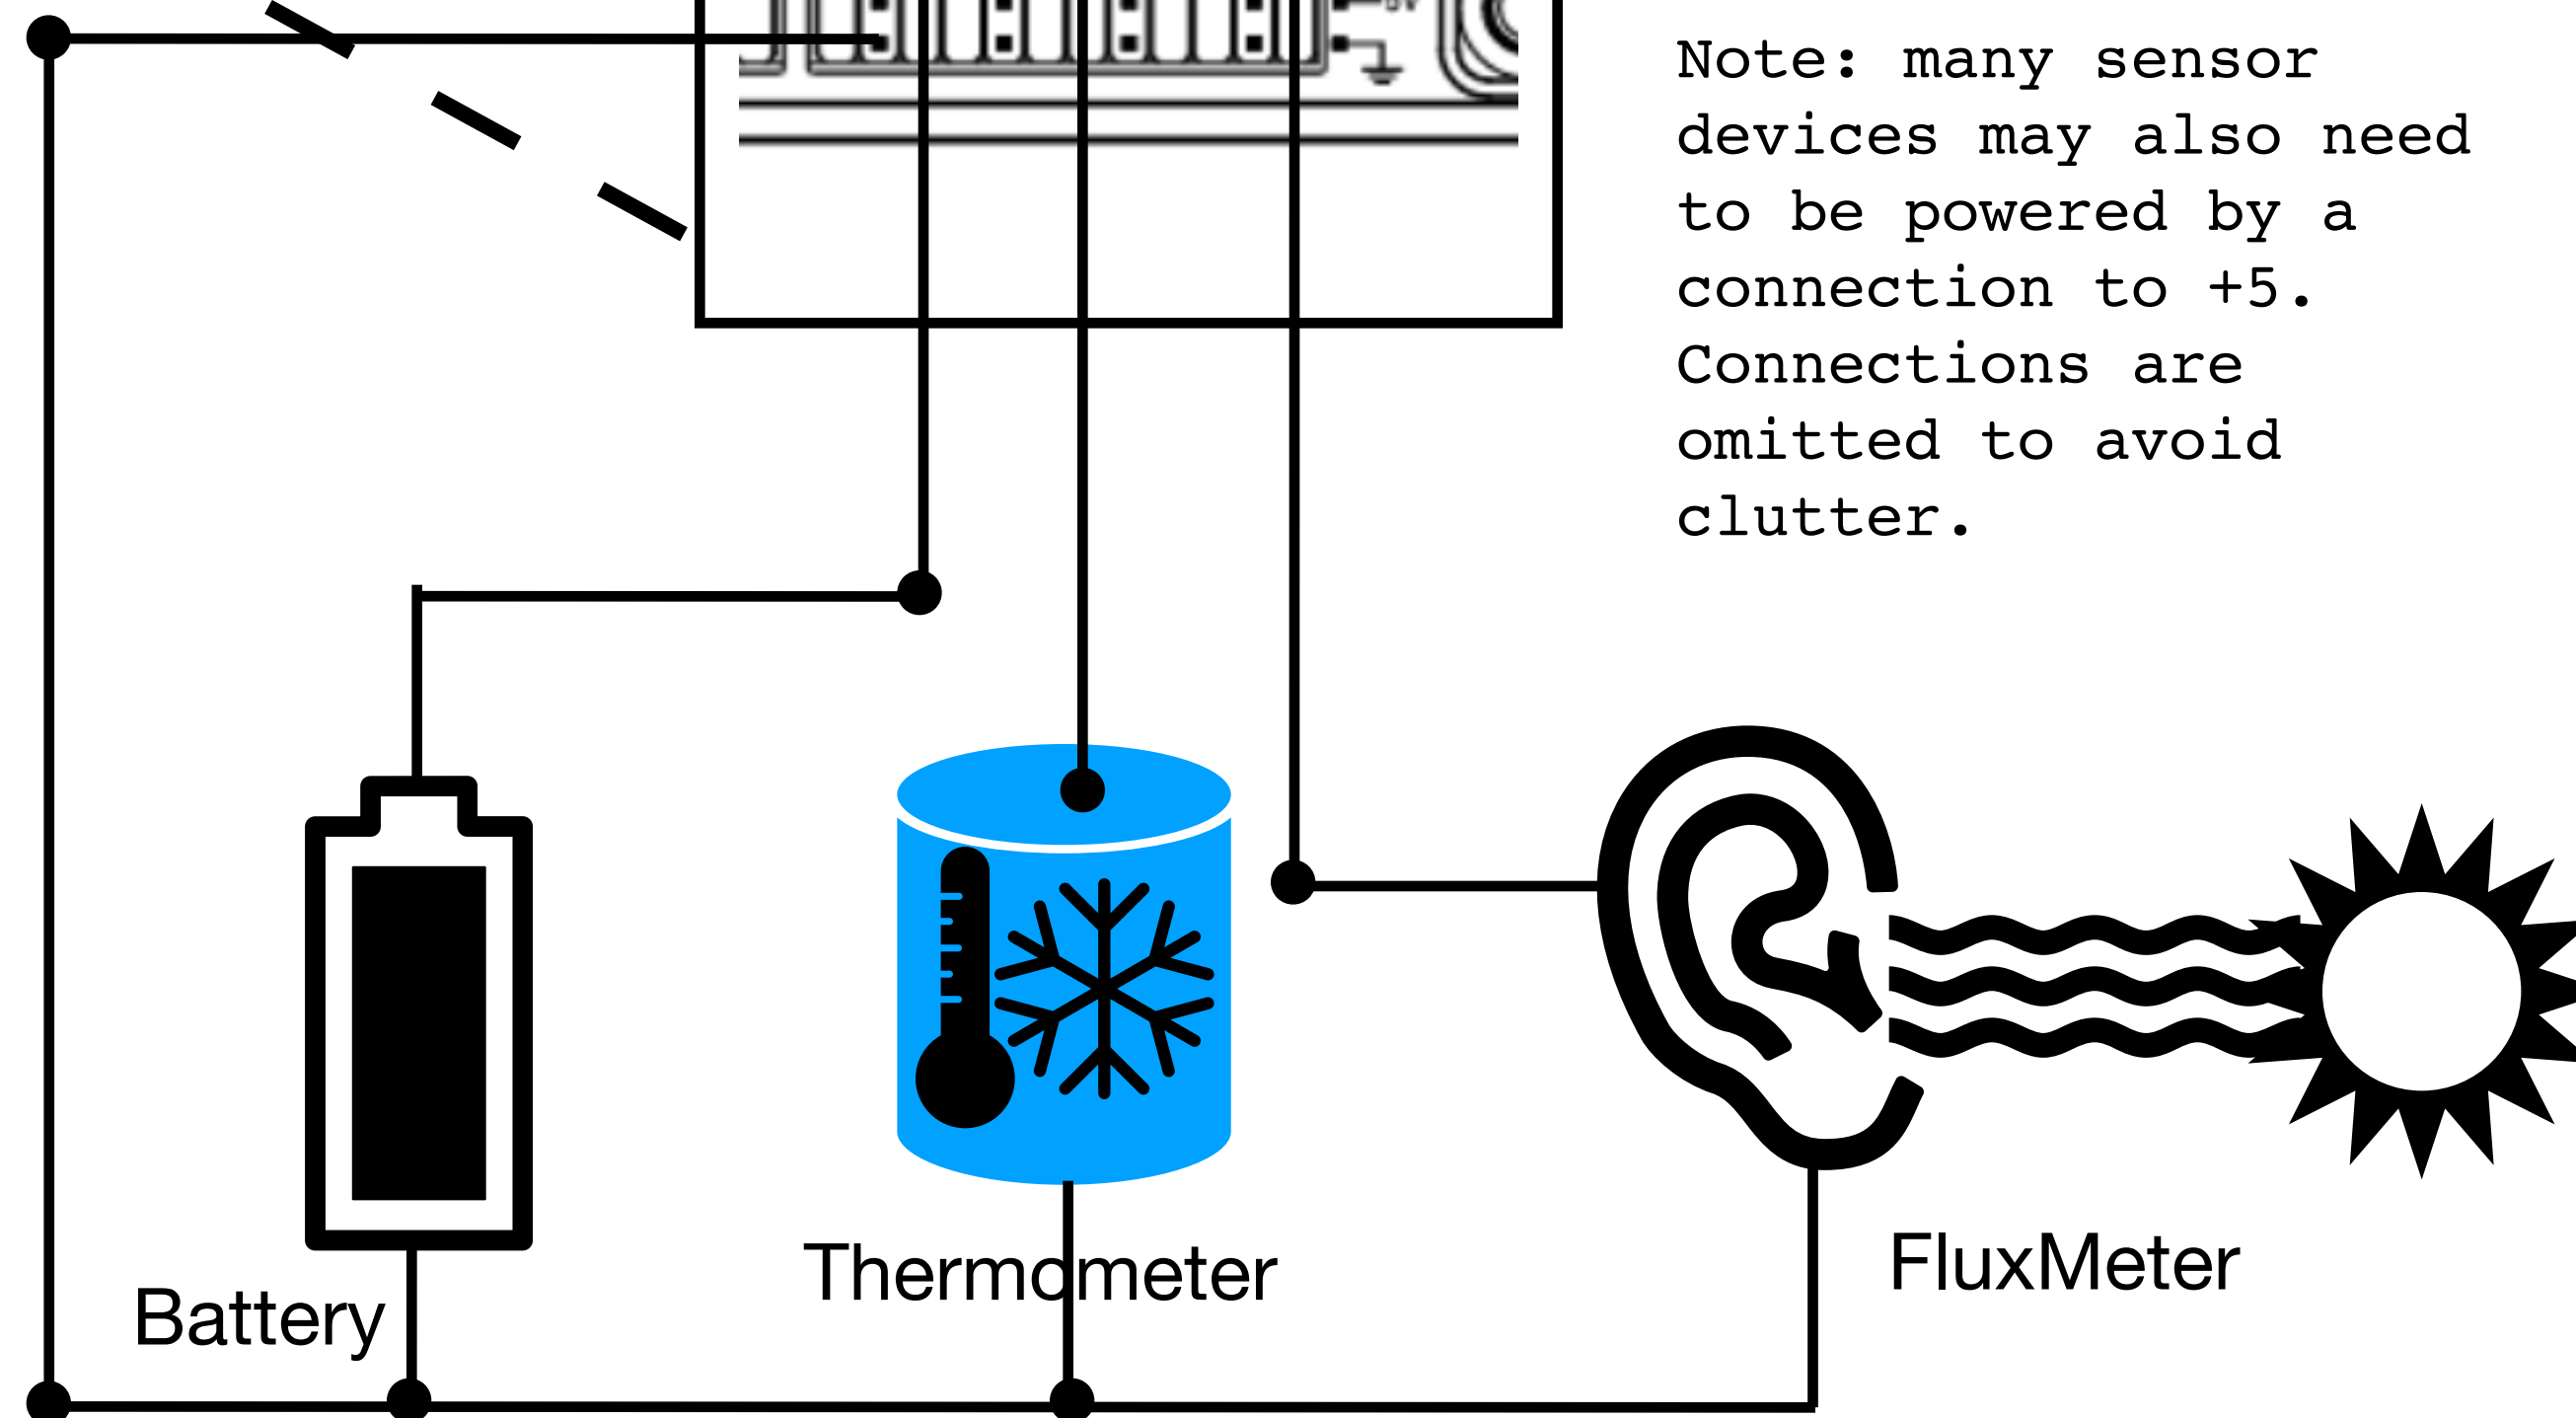

# RoboRIO Software View

