


Quattrobox V1.0.2

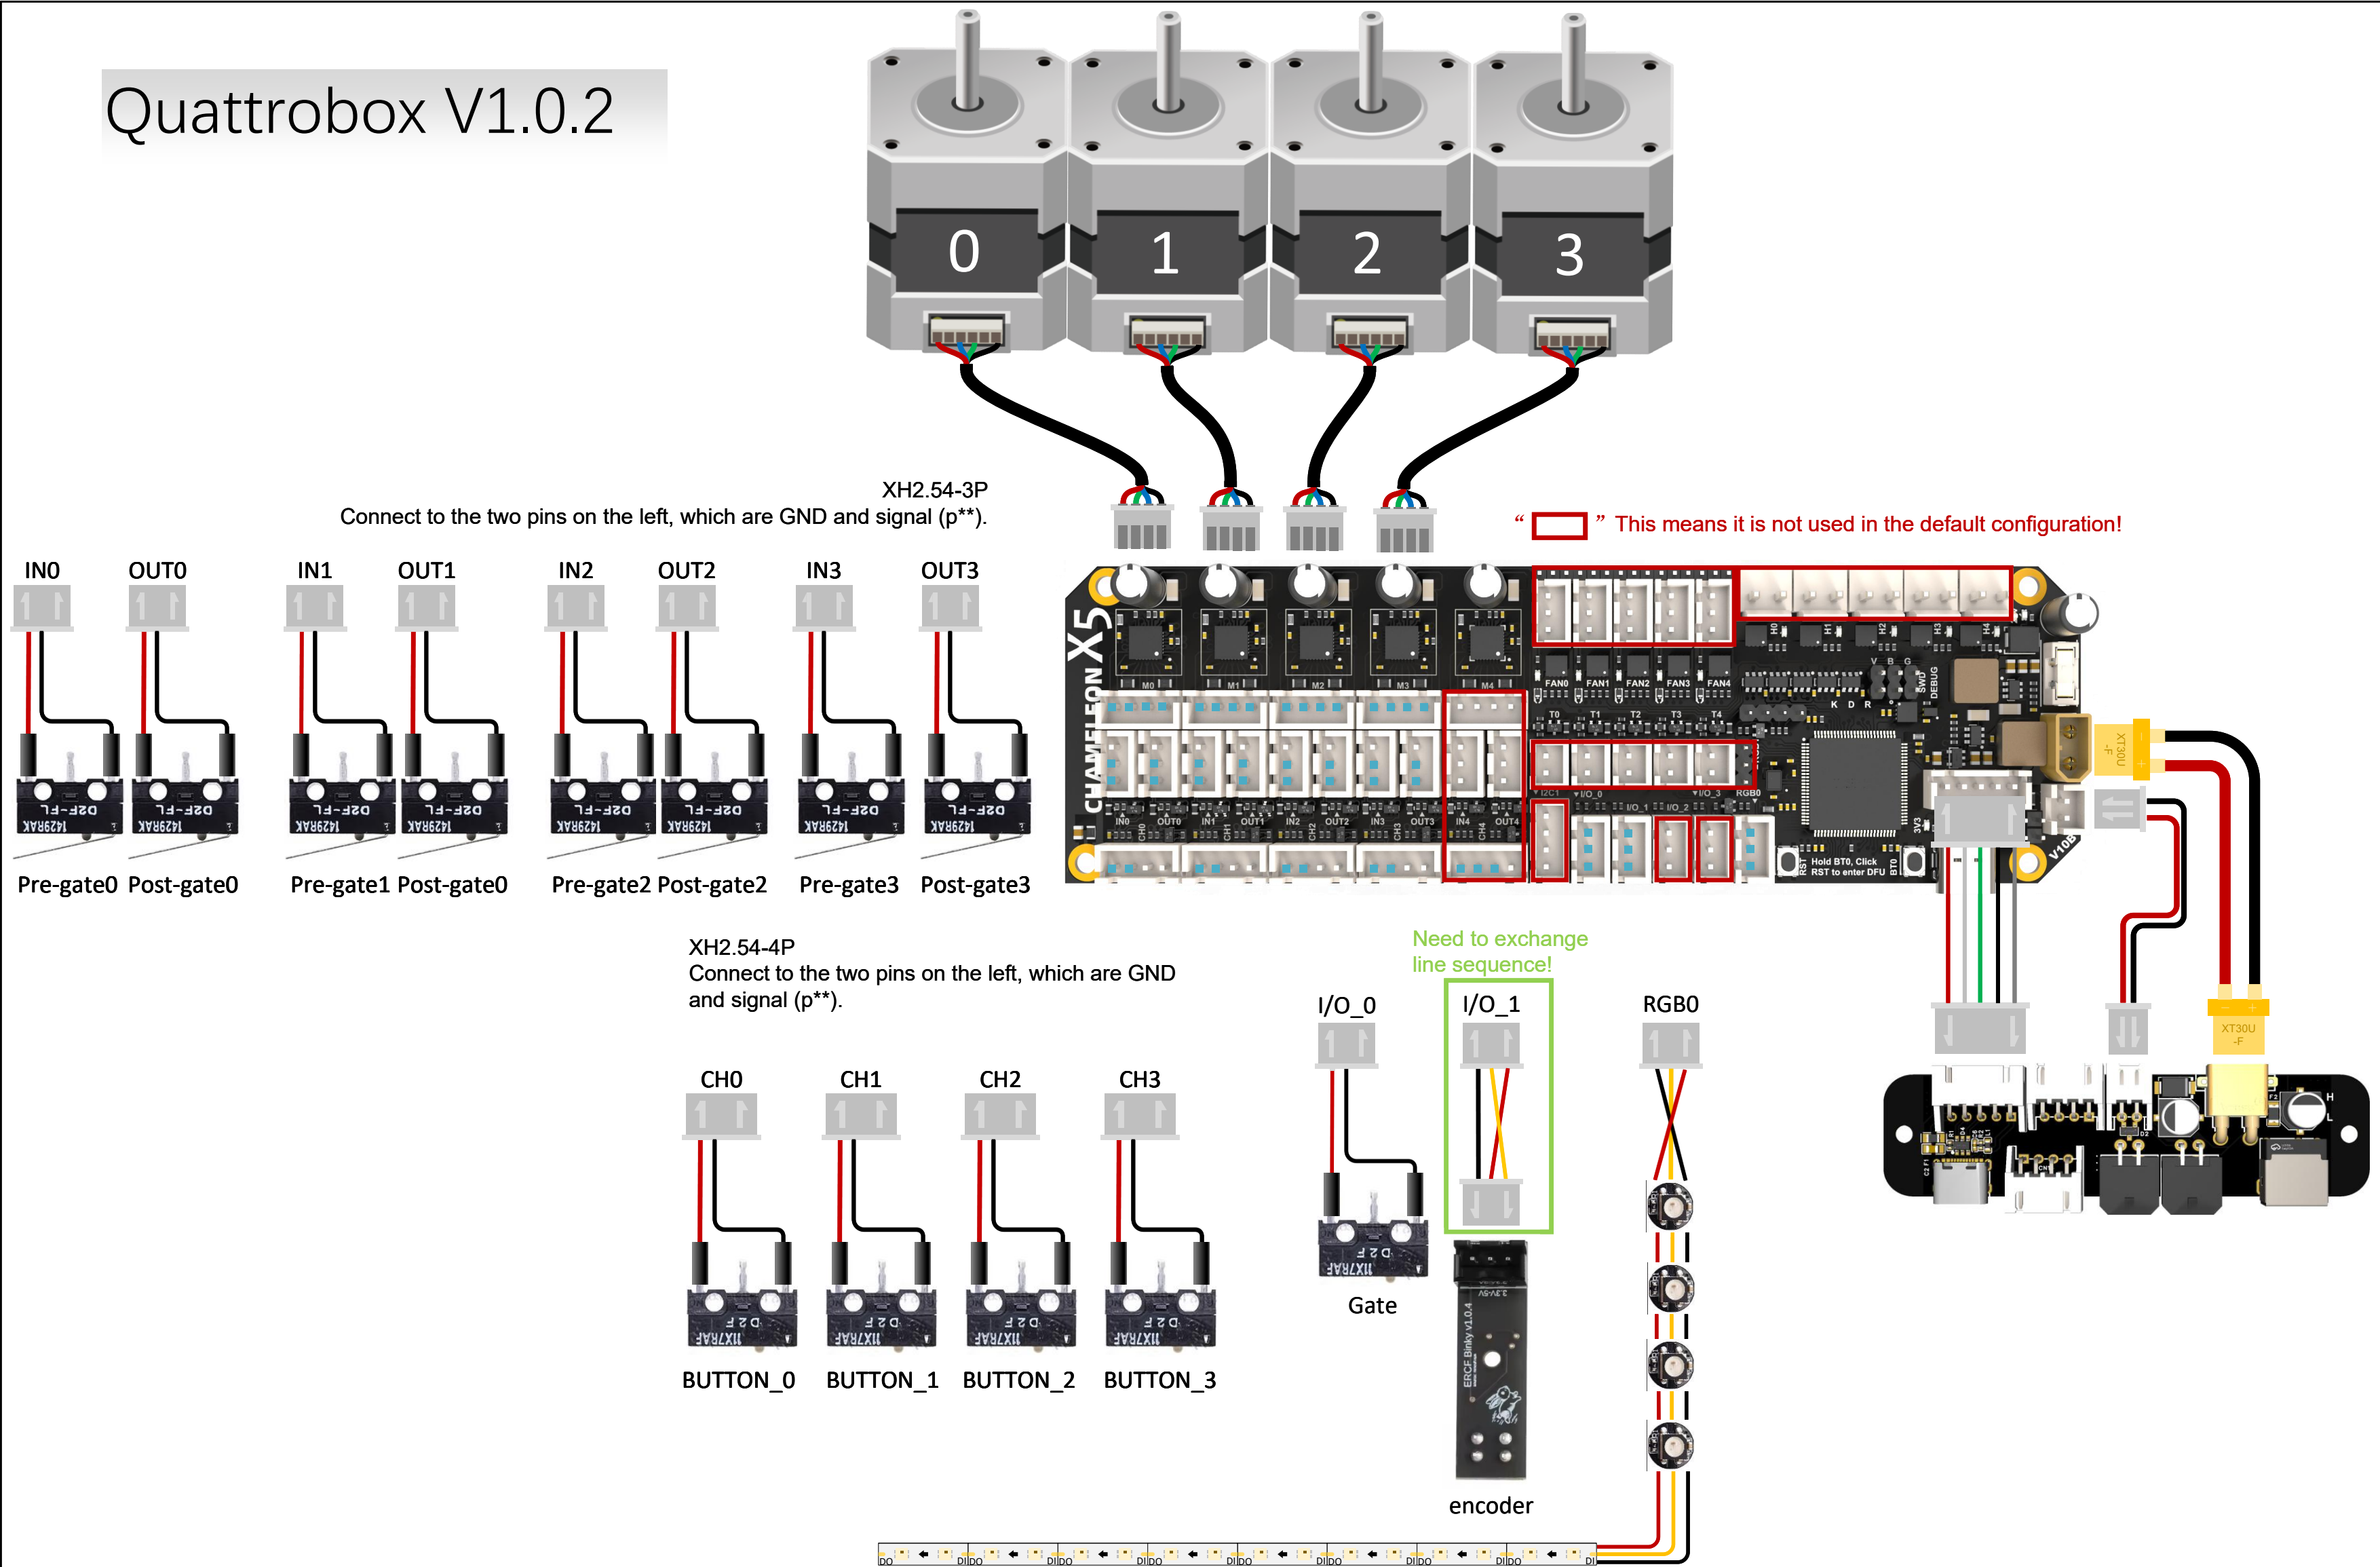

XH2.54-3P
Connect to the two pins on the left, which are GND and signal (p**).

“ ” This means it is not used in the default configuration!

XH2.54-4P
Connect to the two pins on the left, which are GND and signal (p**).

Need to exchange
line sequence!

encoder