

Roland GS-24

Vínyskeri

Notkunarleiðbeiningar

TODO

Viðhald

Að skipta um hníf

![Losa](../images/roland-gs24/gs24-00.jpg) ![Losa](../images/roland-gs24/gs24-01.jpg) ![Losa](../images/roland-gs24/gs24-02.jpg) ![Losa](../images/roland-gs24/gs24-03.jpg) ![Losa](../images/roland-gs24/gs24-04.jpg) ![Losa](../images/roland-gs24/gs24-05.jpg) ![Losa](../images/roland-gs24/gs24-06.jpg) ![Losa](../images/roland-gs24/gs24-07.jpg) ![Losa](../images/roland-gs24/gs24-09.jpg)

1. Losa hníf úr

Finna bút til að prófa og góðan vinnuflöt

Skrúfa botninn af, fjarlægja gamla og setja nýja í. Það er segull í haldaranum sem togar hnífinn til sín.

ATH: Setja hettuna á gamla áður en honum er fleygt, til öryggis

Stilla hnífinn með því að herða botninn. Á bara rétt að sjást örlítið.

Prófa á efninu, þéttingsfast. Á EKKI að skera í gegn

Setja hnífinn aftur í tækið

Prófa á límmiðafilmu.

ATH: Venjulegur styrkur (e. force) fyrir það er á bilinu 150-170gf (en það er misjafnt)

Prófa með Test, halda inni í 2 sec. Prófa að plokka hringinn, svo krossinn og svo kassan.

Ef það þarf að hækka styrkinn meira en nefnt er hér að ofan, þarf að færa hnífinn örlítið lengra út. 1/8 úr hring eða svo.

Halda áfram að prófa þar til auðvelt er að plokka límmiðana, bakhliðin kemur ekki með og skurðurinn er ekki of djúpur.