


# takt

## grid controls

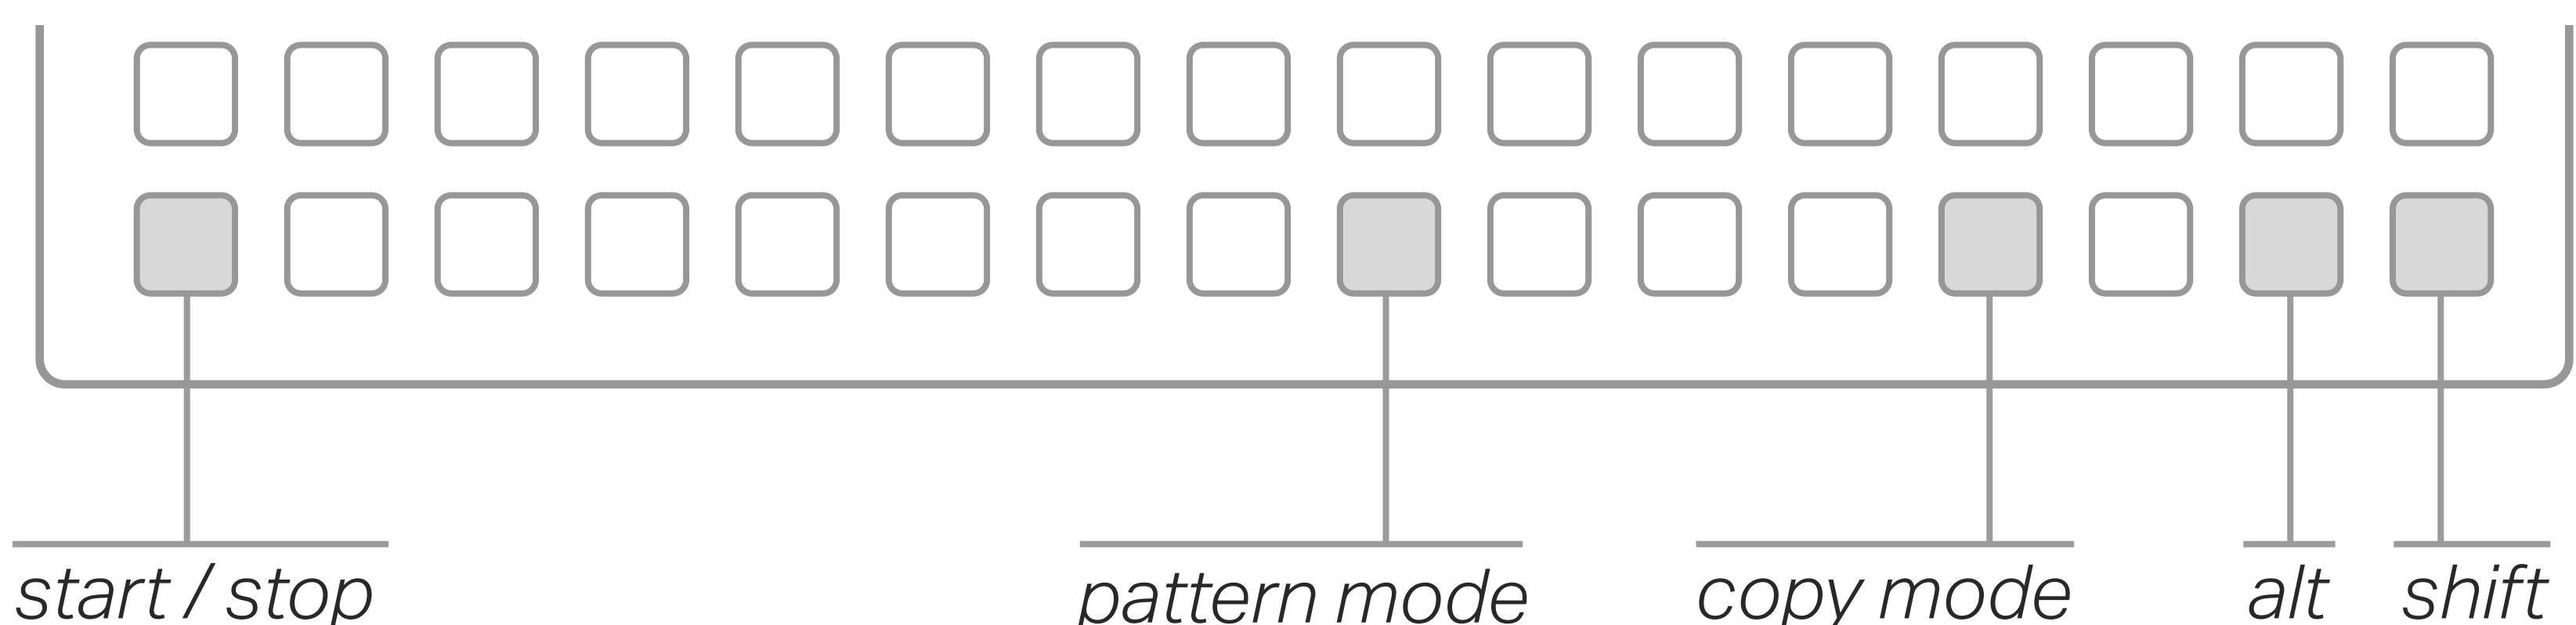


## copy mode

while in copy mode  
currently selected step will blink.

press any other step to define destination

copy mode works for patterns

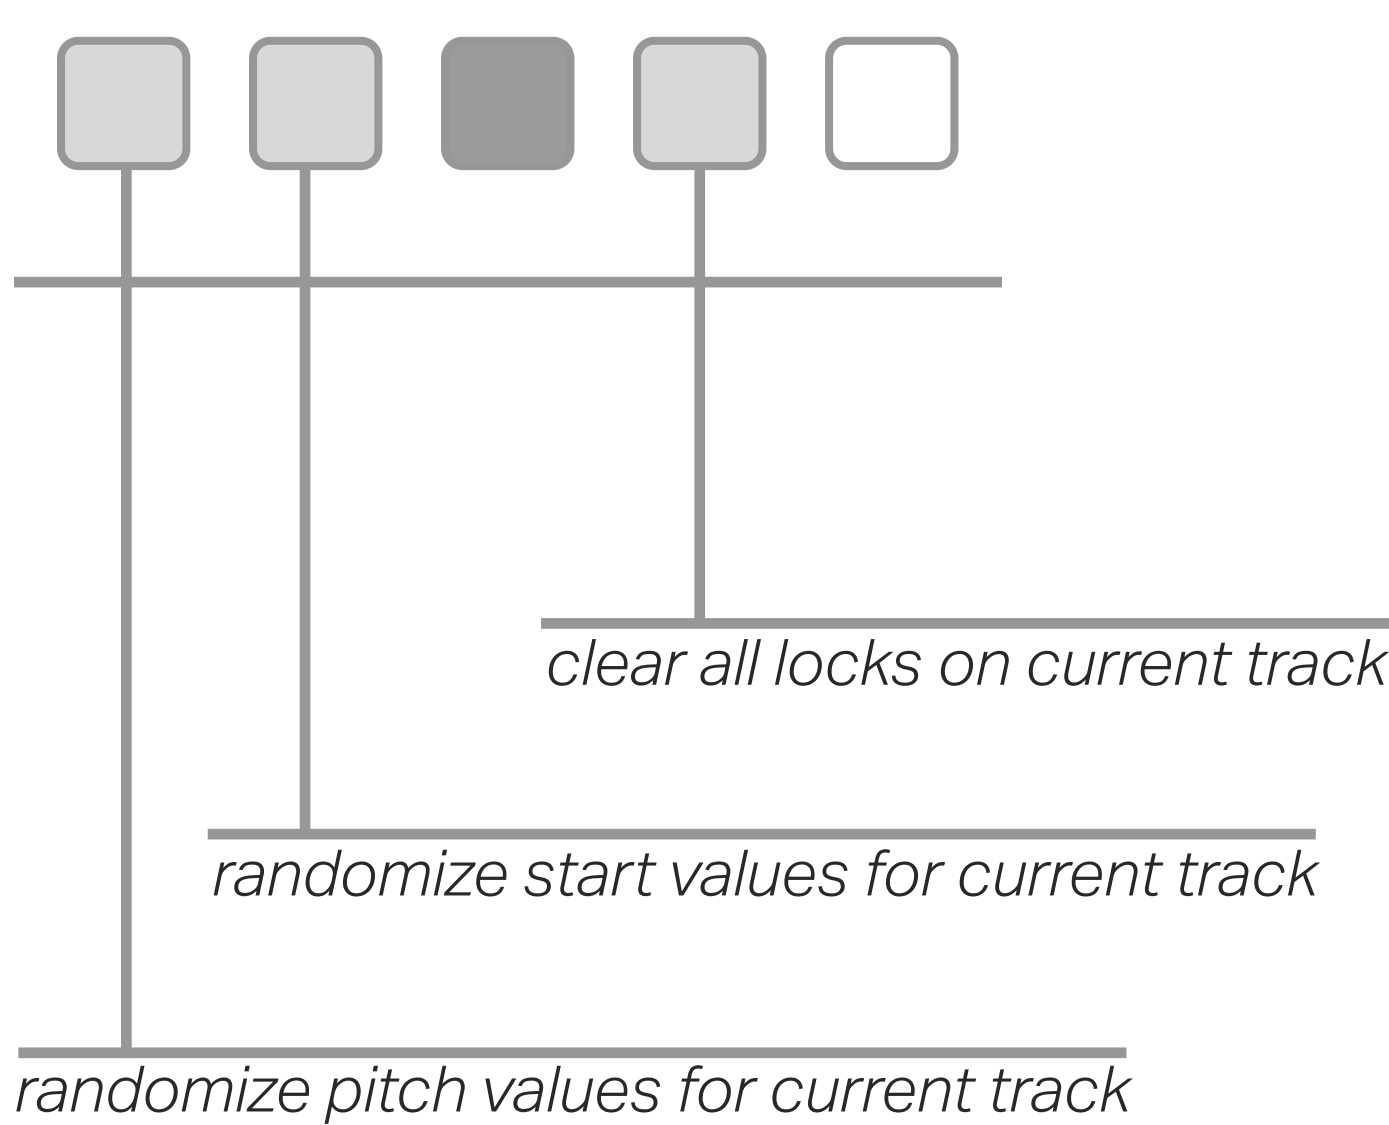

## pattern mode


PATTERNS  
press to select pattern  
press again to switch to selected pattern

PATTERN STEPS  
press to place selected pattern  
into parrern sequence  
press again to clear step

SEQ START / STOP POINTS

SEQ TEMPO MODIFIER


START / STOP

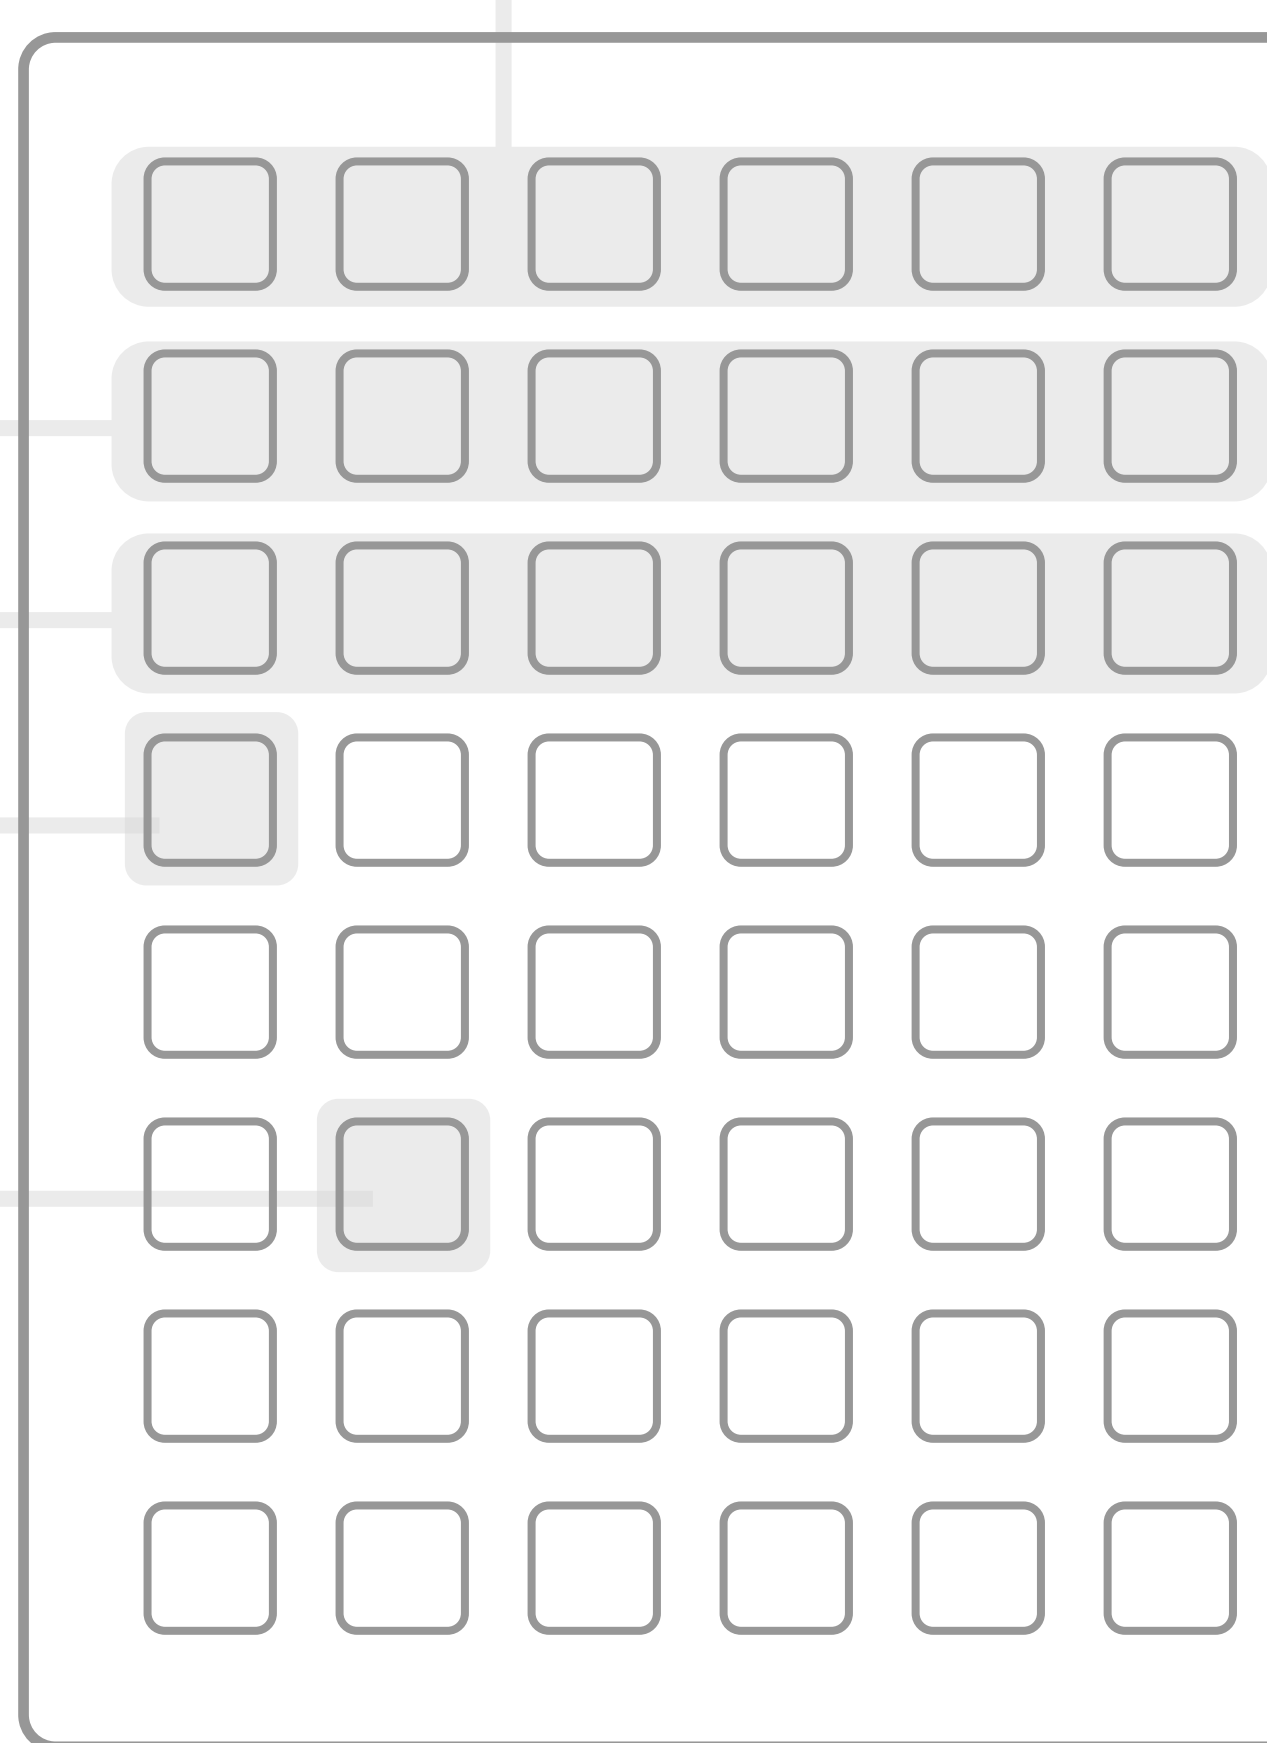

## shift mode



TRACK TEMPO MODIFIERS

TRACK MUTES

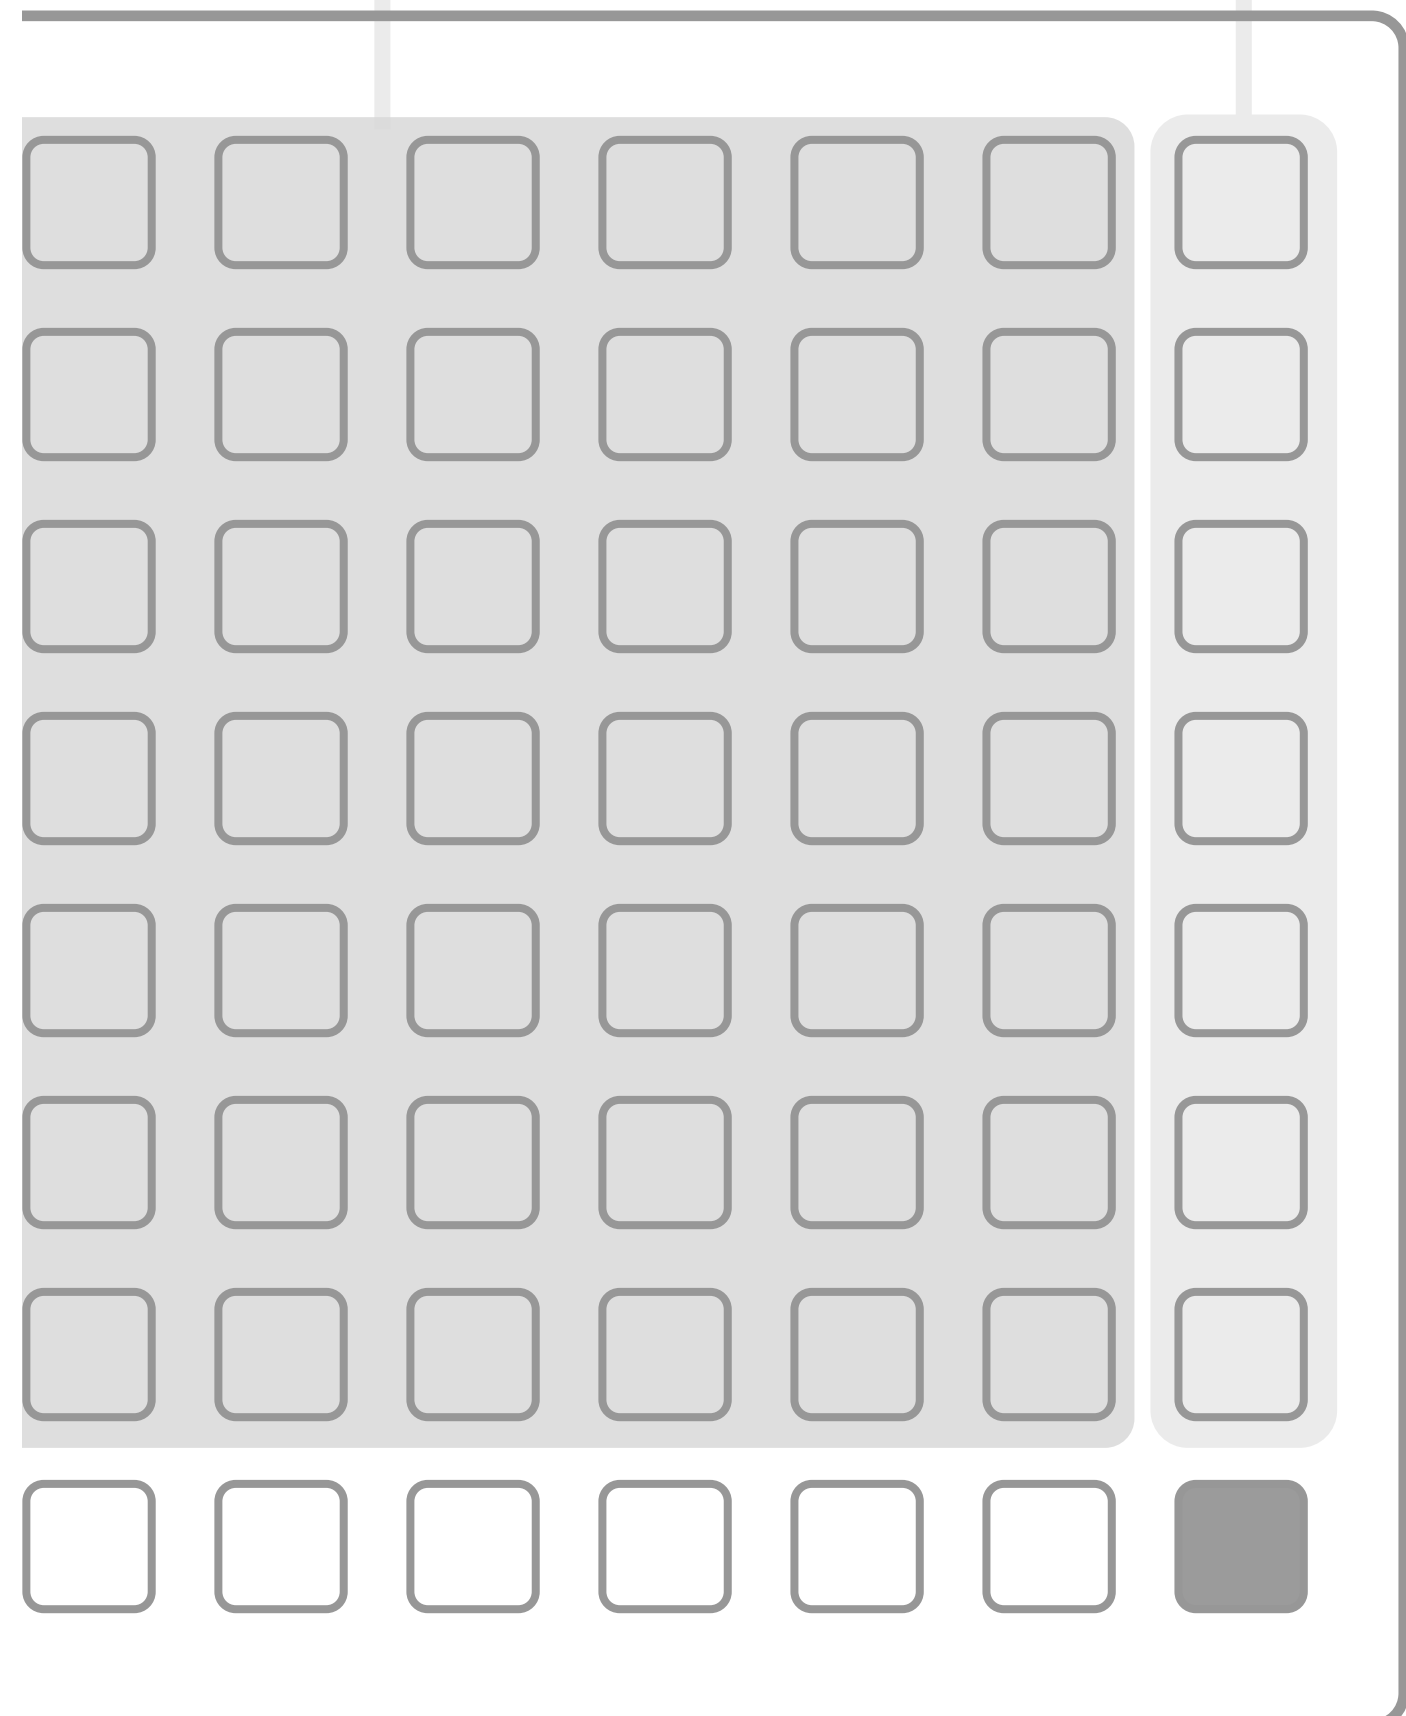

## alt mode

set start and end point per track

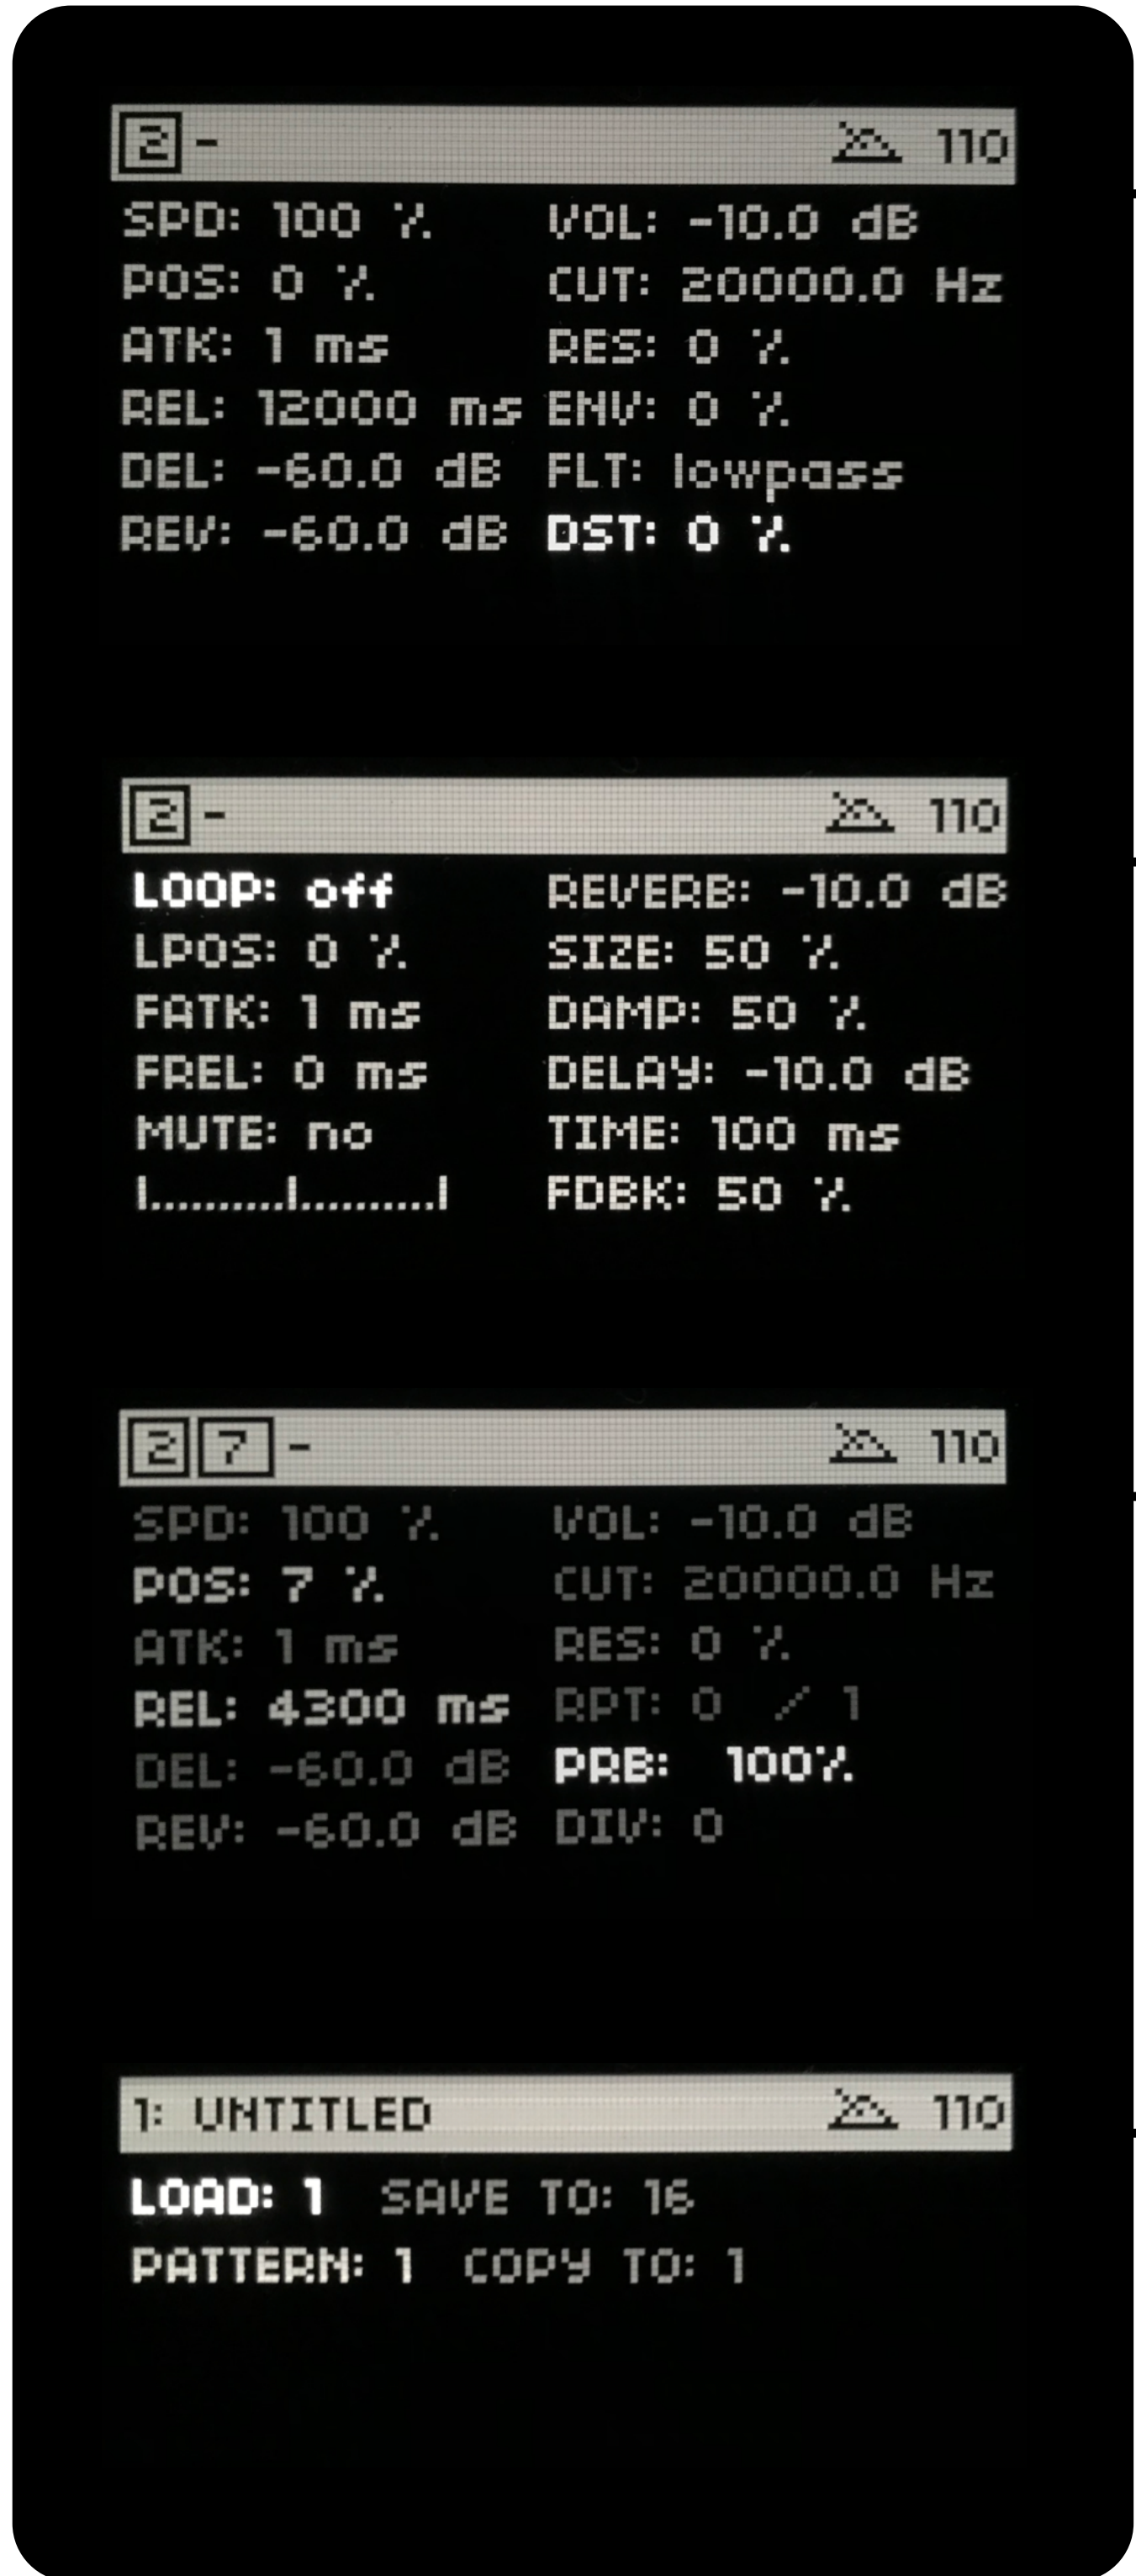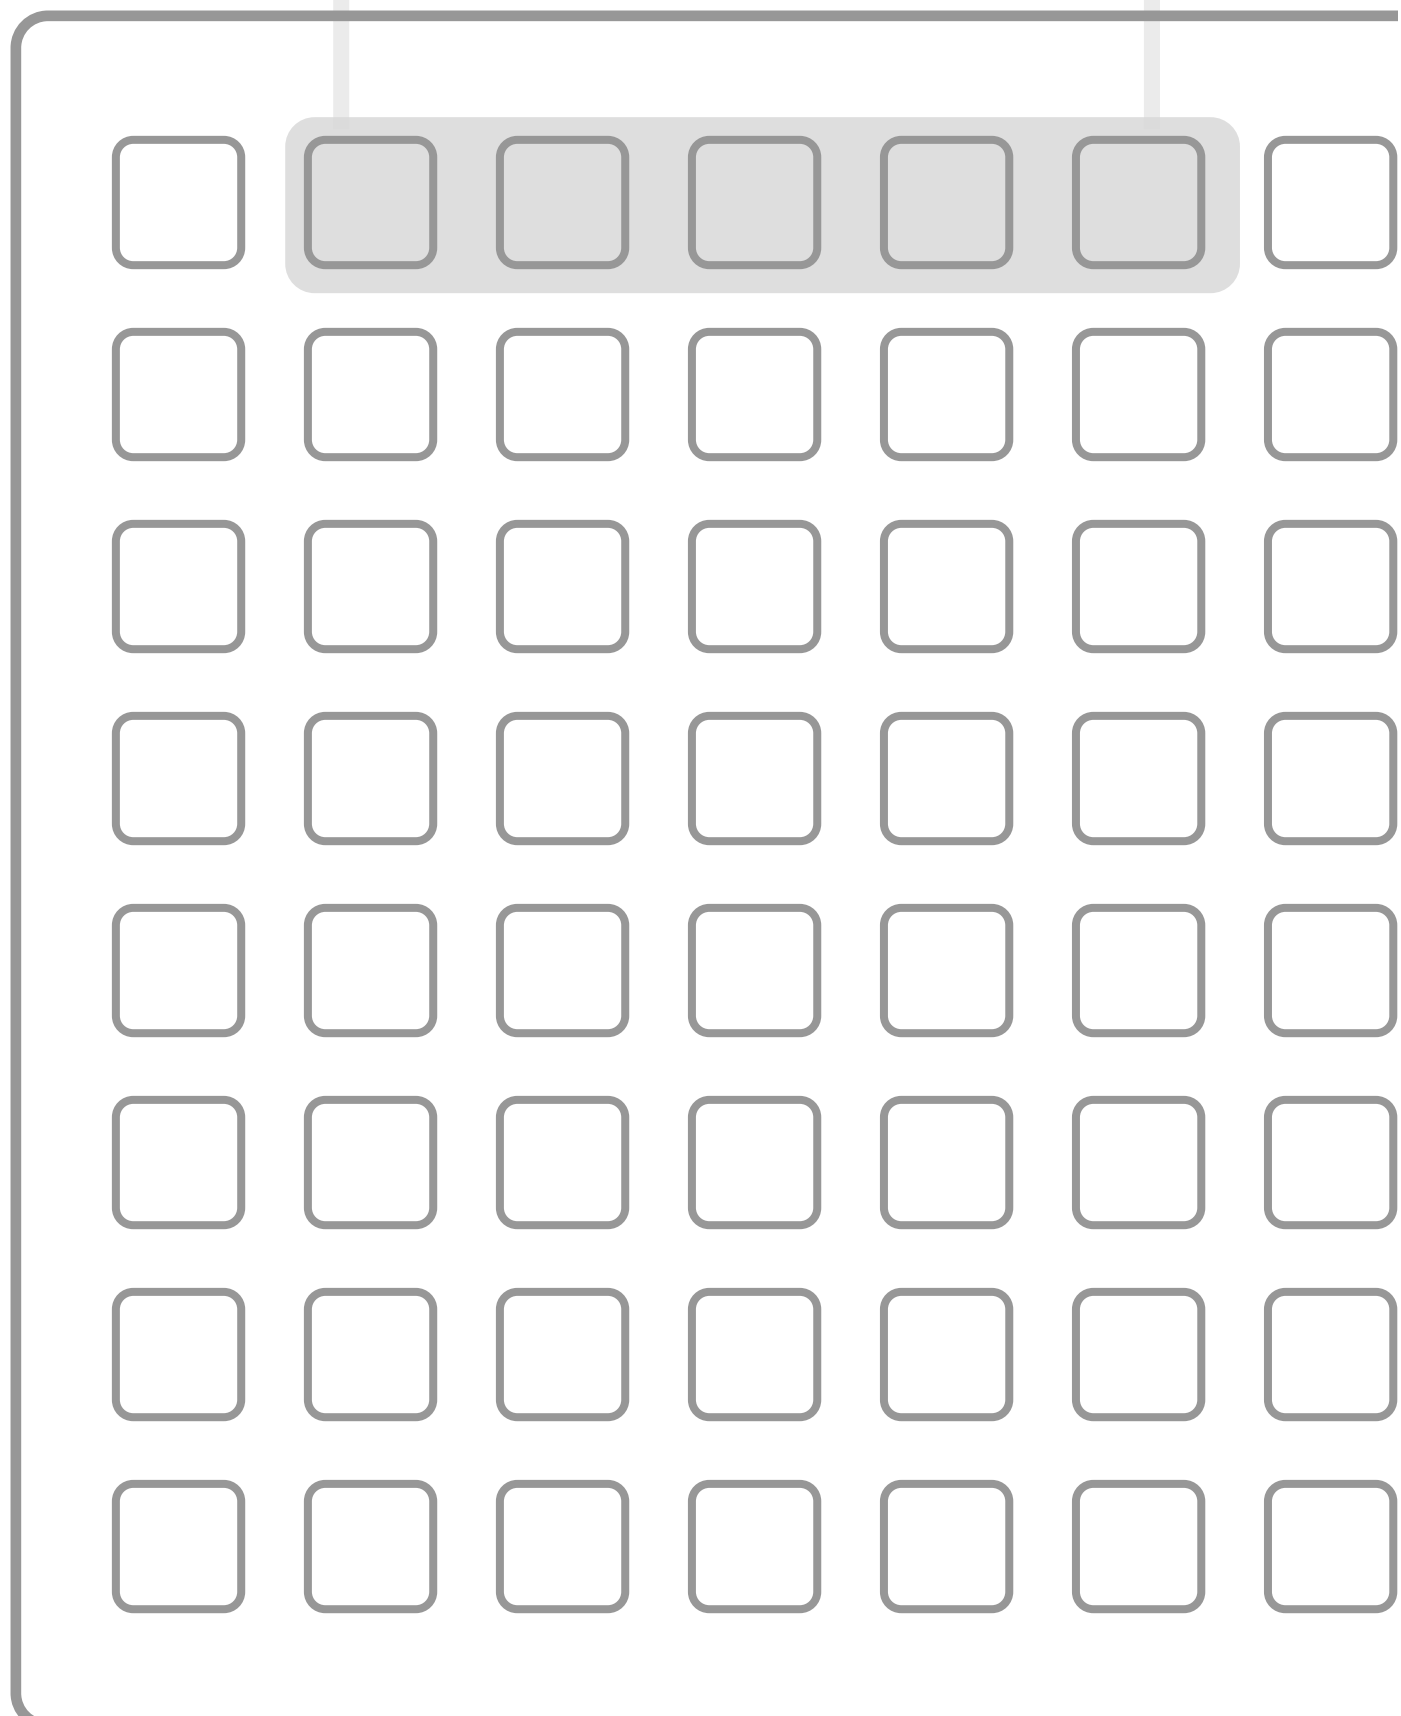

## track edit screen

btn 2 -3 switch between tracks  
hold btn 1 to enter persistence screen

if sample highlighted, btn 2 will enter alt screen and  
btn 3 will open sample selection screen

## alt track edit screen

btn 1 / 2 to exit

## lock edit screen

change value to place lock  
placed lock will be displayed with higher brightness

btn 3 to erase lock  
btn 2 to exit lock edit mode

## persistence screen

rename, load and save projects,  
switch and copy patterns  
change bpm  
btn 1 / 2 to exit