

Check with Putty the SEN5x sensor on USB

```
MQTT Client_id = airRohr-3374037
Read SEN5X...
Start to Initialize SEN5X sensor.
ProductName: SEN55
Firmware: 2.0, Hardware: 4.0
SerialNumber: FA5B515B722F8DA1
Temperature Offset = 0.00 °C. (SEN54/SEN55 only)
Emulate SEN55:
    PM - SPS30
    TH - SHT3X
SEN5X sensor active. Sensor Fan Cleaning and Warm-Up for the first Measurement.
----
Send to :
```

This is wrong no connection

```
Read SEN5X...
Start to Initialize SEN5X sensor.
SEN5X_DeviceReset() return Error: Received NACK on transmit of address
Check SEN5x sensor is NOT connected!
----
Send to :
```

Do not forget the pull up resistors (10K)