



**TASHA**

All Your Kitchen Needs

# User Manual: Laundry

Prepared by:  
TASHA - The Home Brand

Copyright 2019 

---

# FAQs

*Some commonly asked questions :*

**Why does the machine not take the fabric conditioner during the cycle?**

Remove the dispenser drawer/soap box from your machine completely, and give it a thorough clean.

---

# FAQs

*Some commonly asked questions :*

**Remove the dispenser drawer/soap box from your machine completely, and give it a thorough clean.**

Ensure your washing machine is level.

You can also try redistributing the load to ensure an even balance, followed by a quick test on full load, half load, and empty.

---

# FAQs

*Some commonly asked questions :*

**My machine is leaking and I've found water underneath the unit. It does not seem to be coming from the door, dispenser or filter casing. How can I stop this from happening?**

Check for blockages within your drain hose, it may be worth also checking your internal home plumbing for blockages too.

---

# FAQs

*Some commonly asked questions :*

**Since purchase & installation, my washing machine is vibrating so much it's moving across the floor. How can I stop this from happening?**

Make sure that your washing machine is levelled correctly.

Alternatively, you could try placing a hard surface/plate underneath the unit.



# Maintenance Guide

*Here is how to get the best of your laundry unit.*

- Inspect the hoses.
- Don't overload it..
- Use the right type of detergent.
- Use the right amount of detergent.
- Clean the interior and dispensers
- Wipe down the drum, door and gasket
- Leave the door ajar after a load.
- Transfer clean laundry to the dryer as soon as it's done.

## Storage

Do not throw the knife in the kitchen drawer. Store it in its sheath or on a clean magnetic rack/strip. You could use a wooden knife block, but be sure that the blade isn't touching anything while stored.

When using a magnetic rack, always store your knives with the tip up!