

8. Add Role Map

<Abstract>

Mapping of the role functions is set.

A screen to update the data in the RoleMap table.

<Image after setup>

System online/offline :	Start	End
Station mode :	Select	
Station status :	Operation	Suspend
Generate reports :	Inventory	Item master
Download reports :	Select	Performance data
Daily maintenance :	Performance data	Daily cleanup
System maintenance 1 :	Force termination	Cancel allocation
System maintenance 2 :	Modify conditions	Schedule status
Upload data :	Item master	Printer setup
		Retrieval task

Buttons corresponding to role are displayed.

<Screen Image>

1. Register Role Map - Microsoft Internet Explorer

Register Role Map

Configure

Role : **admin:administrator** View

Select Role from the pull-down list, and press View button.

2. ☒ All

Main Menu	Sub-menu	Select	Button Name
Storage	Normal storage	<input checked="" type="checkbox"/>	Select
	Assortment storage	<input checked="" type="checkbox"/>	Select
	Location-specific storage	<input checked="" type="checkbox"/>	Select
	Dummy storage and retrieval	<input checked="" type="checkbox"/>	Select
	Fragmented storage	<input checked="" type="checkbox"/>	Select
	Cross docking	<input checked="" type="checkbox"/>	Select
	Simple cross docking	<input checked="" type="checkbox"/>	Select
	Restorage	<input checked="" type="checkbox"/>	Select
	Floor loading storageE	<input checked="" type="checkbox"/>	Select
	Storage (initial storage)	<input checked="" type="checkbox"/>	Select
Retrieval	Retrieve by item code	<input checked="" type="checkbox"/>	Select
	Inquiry retrieving	<input checked="" type="checkbox"/>	Select
	Planned retrieval	<input checked="" type="checkbox"/>	Select
	Start cycle counting	<input checked="" type="checkbox"/>	Select
	Stop cycle counting	<input checked="" type="checkbox"/>	Select
	Start empty location checking	<input checked="" type="checkbox"/>	Select

3. Submit Cancel

DAIFUKU Copyright(C) 2002 DAIFUKU Co., Ltd. All rights reserved

<Procedure>

1. Select the role of which you link the function.

- (1) Select role.
- (2) Press [View] button.
 - Mapping between selected role and function is reflected to the check box.
 - *If you press the View button without pressing Submit button after changing the status of the check box, the message stating that the no change is reflected appears.

2. Select the function you link with role.

- If you tick "All", all the functions will be selected.

3. Confirm the mapping, and reflect it to the RoleMap table.

- (1) Press [Submit] button.
- (2) Press [OK] button on the message for the confirmation.
 - Press [Submit] button, and the message for confirmation appears.
 - Press [OK] to continue.
 - => The changed mapping data of role and function is updated.
 - Press [Cancel] button to stop setting.
 - => The changed mapping data of role and function is left as it is, and the updating process is canceled.