

9. User Setup

<Abstract>

User is set.

A screen to add/modify/delete the data in LoginUser table and UserAttribute table.

<Screen Image>

1. User ID : admin Search
Add Modify Delete

2. User ID : admin
Password : admin
Password Update Interval (days) : 0 ☐ Set to Indefinite.
Password Expiration Date :
Role ID : admin Search
Max. Logins per User : 20
Max. Login Attempts : Do not count by user
User Name : AWC Manager
Company : DAIFUKU
Date of Birth : 20041217
Sex : Male
Remarks :

3. Submit Clear

DAIFUKU Copyright(C) 2002 DAIFUKU Co., Ltd. All rights reserved

<Notes>

- For technical staff use: You may modify "anonymous user", but are not allowed to delete it.
- For customer user: You are not allowed to modify or delete "anonymous user".
- For customer's use: "anonymous user" is not displayed in the User List Box.

anonymous user

Anonymous user is a user defined in the system, and provided when you log on automatically (without authentication).

If you automatically log on, sub-menu of the role in the terminal you have automatically logged on appears.

* Anonymous user's role has no influence.

Add

Add a new data into the LoginUser table and UserAttribute table.

<Procedure>

1. Enter the user ID you add, and press “Add” button.

- (1) Enter user ID. (Necessary)
 - Enter the user ID which is not registered in the LoginUser table and UserAttribute table.
- (2) Press [Add] button.
 - The entered user ID is displayed in the input field.

2. Enter the user data you add.

- (1) Enter the password. (Necessary)
- (2) Enter the Password Update Interval (days). (Necessary)
 - Password expiration date is set by adding password update interval with PC system date.
 - To set password expiration to indefinite, tick the check box of [Set to indefinite].
If it is ticked, “-1” is entered in the Password Update Interval. “-1” means indefinite.
 - * For details, refer to “Chapter 1. 1. User Control / Login Authentication”.
- (3) Enter role ID. (Necessary)
 - Enter the role ID of the role to which the user you add belongs.
 - Press [Search] button, and select “Role ID” from the “Role List Box”.
 - For the list box image, refer to the “Role List Box” of the Role Setup (Modify).
- (4) Enter the Max. Logins per User. (Necessary)
 - * e.g. If you set 5, the 6th user is not allowed to log on.
 - * For details, refer to the “Chapter 1. 1. User Control / Login Authentication”.
- (5) Select Max. Login Attempts.
 - * For details, refer to the “Chapter 1. 1. User Control / Login Authentication”.
- (6) Enter User Name.
- (7) Enter Company.
- (8) Enter Date of Birth.
- (9) Select Sex.
- (10) Enter Remarks.

3. Confirm the data you add, and reflect data to the LoginUser and UserAttribute tables.

- (1) Press [Submit] button.
- (2) Press [OK] button on the message for confirmation.
 - Press [Submit] button, and the message for confirmation appears.
 - Press [OK] to continue.
 - => The entered user data is added.
 - Press [Cancel] button to stop setting.
 - => The entered user data is left as it is, and the adding process is canceled.

Modify

Modify the user data.

<Procedure>

1. Enter the user ID you modify, and press “Modify” button.

- (1) Enter the user ID. (Necessary)
 - Enter the user ID registered in the LoginUser and UserAttribute tables.
 - Press [Search] button, and select “User ID” from the “User List Box”.
- (2) Press [Modify] button.
 - The entered user data is displayed in the input field.

User List Box

No.	User ID	Role ID	Role Name
1	ANONYMOUS_USER	guest	guest
2	admin	admin	administrator
3	awc	worker	worker

2. Enter the data you modify.

- (1) Enter the password. (Necessary)
- (2) Enter the Password Update Interval (days). (Necessary)
 - Password expiration date is set by adding password update interval with PC system date.
 - To set password expiration to indefinite, tick the check box of [Set to indefinite].
If it is ticked, "-1" is entered in the Password Update Interval. "-1" means indefinite.
 - * For details, refer to "Chapter 1. 1. User Control / Login Authentication".
- (3) Enter role ID. (Necessary)
 - Enter the role ID of the role to which the user you add belongs.
 - Press [Search] button, and select "Role ID" from the "Role List Box".
For the list box image, refer to the "Role List Box" of the Role Setup (Modify).
- (4) Enter the Max. Logins per User. (Necessary)
 - * e.g. If you set 5, the 6th user is not allowed to log on.
 - * For details, refer to the "Chapter 1. 1. User Control / Login Authentication".
- (5) Select Max. Login Attempts.
 - * For details, refer to the "Chapter 1. 1. User Control / Login Authentication".
- (6) Enter User Name.
- (7) Enter Company.
- (8) Enter Date of Birth.
- (9) Select Sex.
- (10) Enter Remarks.

3. Confirm the modified data, and reflect it to the LoginUser and UserAttribute tables.

- (1) Press [Submit] button.
- (2) Press [OK] button on the message for confirmation.
 - Press [Submit] button, and the message for confirmation appears.
 - Press [OK] to continue.
=> The entered user data is modified.
 - Press [Cancel] button to stop setting.
=> The entered user data is left as it is, and the modifying process is canceled.

Delete

Delete the entered user data from the LoginUser and UserAttribute tables.

<Procedure>

1. Enter the user ID you delete, and press “Delete” button.

- (1) Enter user ID. (Necessary)
 - Enter the user ID registered in the LoginUser and UserAttribute tables.
 - Press [Search] button, and select “User ID” in the “User List Box”.
For the list box image, refer to the “User List Box” of the User Setup (Modify).
- (2) Press [Delete] button.
 - The entered user data is displayed in the input field.

2. Confirm the user data you delete.

3. Confirm the data you delete, and reflect it to the LoginUser and UserAttribute tables.

- (1) Press [Submit] button.
- (2) Press “OK” button on the confirmation message.
 - Press [Submit] button, and the message for confirmation appears.
 - Press [OK] to continue.
 - => The entered user data is deleted.
 - Press [Cancel] button to stop setting.
 - => The entered user data is left as it is, and the deleting process is canceled.