

4. Sub-menu Rearrangement

<Abstract>

Arrangement of the sub-menu is changed.


A screen to change the [Function Display Order] in the Function table.

<Image after setup>

System online/offline	:	Start	End
Station mode	:	Select	
Station status	:	Operation	Suspend
Generate reports	:	Inventory	Item master
Download reports	:	Select	Performance data
Daily maintenance	:	Performance data	Daily cleanup
System maintenance 1	:	Force termination	Cancel allocation
System maintenance 2	:	Schedule status	Printer setup
Upload data	:	Modify conditions	
	:	Item master	Retrieval task

Menu order is changed.

<Screen Image>

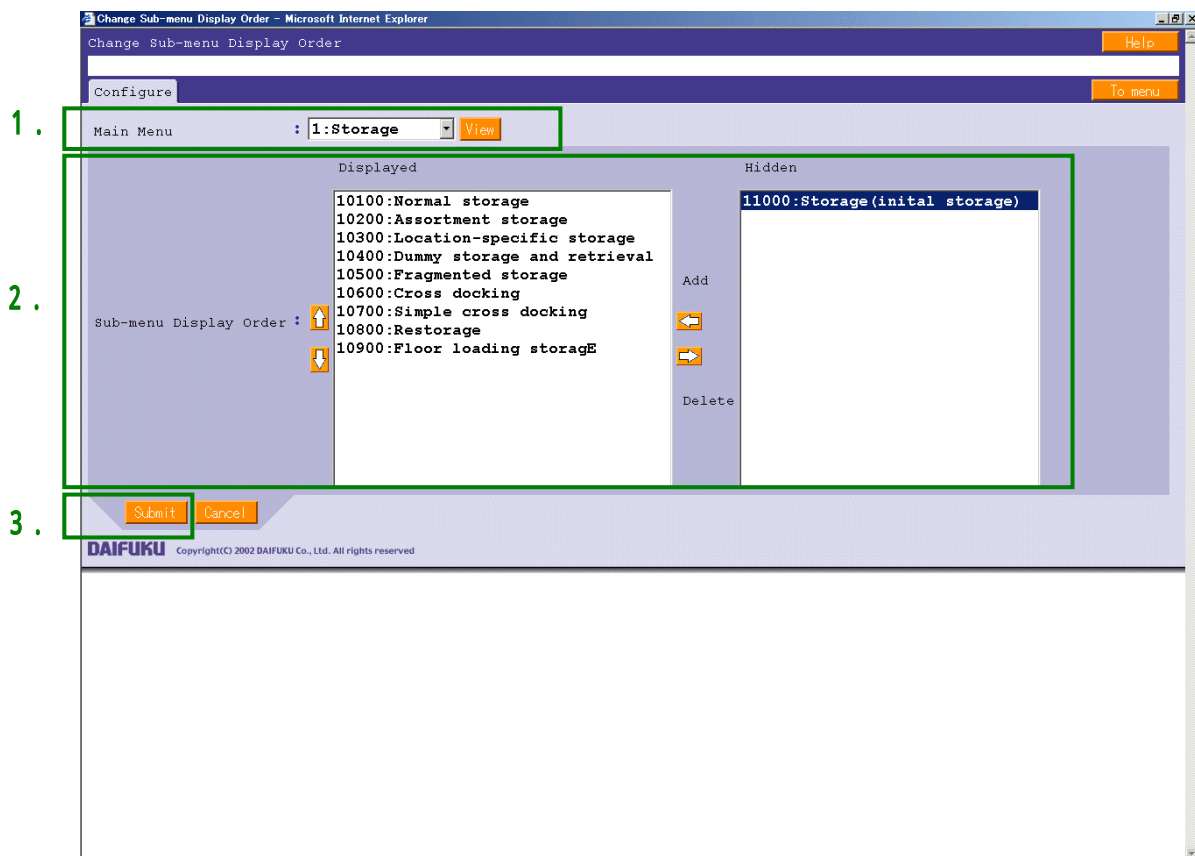

<Procedure>

1. Select the main menu to which the sub-menu you change belongs.

- (1) Select main menu.
- (2) Press [View] button.
 - The list of the sub-menu which belongs to the selected main menu.

2. Select sub-menu you rearrange, and relocate it.

- (1) Select the sub-menu you rearrange from the [Displayed Item] List Box item.
- (2) Press [] or [] button.
 - * When there is a menu you do not use...
- (3) Select menu you do not use from the [Displayed Item] List Box item, and move it into the [Hidden] list box by the [] button.
 - Press [] button to return it from [Hidden] list box to [Displayed] list box.

3. Confirm the Display Order, and reflect it to the Function table.

- (1) Press [Submit] button.
- (2) Press [OK] button on the message for confirmation.
 - Press [Submit] button, and the message for confirmation appears.
 - Press [OK] to continue.
 - => The data corresponding to the confirmed sub-menu data is deleted.
 - Press [Cancel] button to stop setting.
 - => The entered sub-menu data is left as it is, and the updating process is canceled.