

6. Sub-menu Button Rearrangement

<Abstract>

Sub-menu buttons are rearranged.

A screen to change the "Button Display Order" in the FunctionMap table.

<Image after setup>

System online/offline	:	Start	End
Station mode	:	Select	
Station status	:	Operation	Suspend
Generate reports	:	Inventory	Item master
Download reports	:	Select	Performance data
Daily maintenance	:	Performance data	Daily cleanup
System maintenance 1	:	Force termination	Cancel allocation
System maintenance 2	:	Schedule status	Printer setup
Upload data	:	Modify conditions	
	:	Item master	Retrieval task

Buttons are rearranged.

<Screen Image>

Change Sub-menu Button Display Order - Microsoft Internet Explorer

Change Sub-menu Button Display Order Help

Configure To menu

1. Main Menu : 4:Maintenance
Sub-menu : 40500:Planned retrieval data maintenance View
2. Sub-menu Button Display Order :

↑

40501:New registration

40502:Modify

40503:Delete

↓
3. Submit Cancel

DAIFUKU Copyright(C) 2002 DAIFUKU Co., Ltd. All rights reserved

<Procedure>

1. Select the main menu and sub-menu to which the sub-menu button you rearrange belongs.

- (1) Select main menu.
- (2) Select sub-menu.
- (3) Press [View] button.
 - A list of the sub-menu button belonging to the selected main menu and sub-menu is displayed in the input field.

2. Select the sub-menu button you rearrange, and relocate it.

- (1) Select the sub-menu you rearrange from the list box items.
- (2) Press [] or [] button.

3. Confirm the display order and reflect it to the FunctionMap table.

- (1) Press [Submit] button.
- (2) Press [OK] button on the message for the confirmation.
 - Press [Submit] button, and the message for confirmation appears.
 - Press [OK] to continue.
 - => The modified sub-menu button data is updated.
 - Press [Cancel] button to stop setting.
 - => The modified sub-menu data is left as it is, and the updating process is canceled.