

7. Role Setup

<Abstract>

Role is set.

A screen to add/modify/delete data in the Role table.

<Screen Image>

The screenshot shows a web browser window titled "Role Settings - Microsoft Internet Explorer". The page has a purple header bar with "Role Settings" and a "Help" button. Below the header is a "Configure" button and a "To menu" button. The main content area is divided into three sections, each highlighted with a green box and a number:

- 1.** A section containing a "Role ID" label, a text input field with "admin", a "Search" button, and three buttons: "Add", "Modify", and "Delete".
- 2.** A section containing a "Role ID" label, a text input field with "admin", a "Role Name" label, a text input field with "administrator", and a "Max. Login Attempts" label with a dropdown menu showing "No limit".
- 3.** A section containing two buttons: "Submit" and "Clear".

At the bottom of the page, there is a footer with the "DAIFUKU" logo and the text "Copyright(C) 2002 DAIFUKU Co., Ltd. All rights reserved".

Add

Enter a new data into the Role table.

<Procedure>

1. Enter the Role ID you add, and press “Add” button.

- (1) Enter a role ID. (Necessary)
 - Enter the role ID which is not registered in the Role table.
- (2) Press [Add] button.
 - The entered role ID is displayed in the input field.

2. Enter the role data you add.

- (1) Enter the role name. (Necessary)
- (2) Select the Max. Login Attempts.
 - * For details, refer to the “Chapter 1. 1. User Control / Login Authentication”.

3. Confirm the data you add, and reflect it to the Role table.

- (1) Press [Submit] button.
- (2) Press [OK] button on the message for confirmation.
 - Press [Submit] button, and the message for confirmation appears.
 - Press [OK] to continue.
 - => The entered role data is added.
 - Press [Cancel] button to stop setting.
 - => The entered role data is left as it is, and the adding process is canceled.

Modify


Modify a role data.

<Procedure>

1. Enter the role ID you modify, and press “Modify” button.

- (1) Enter the Role ID. (Necessary)
 - Enter the role ID registered in the Role table.
 - Press [Search] button, and select [Role ID] from the [Role List Box].
- (2) Press [Modify] button.
 - The entered role data is displayed in the input field.

Role List Box.

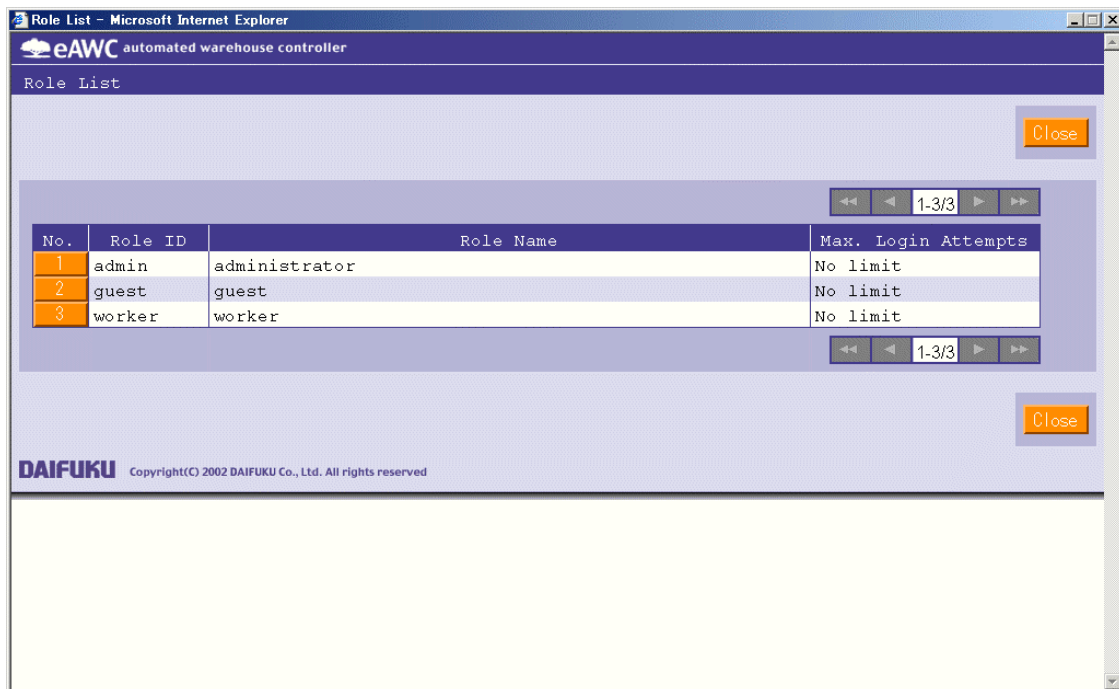

2. Enter the role data you modify.

- (1) Enter the role name.
- (2) Select Max. Login Attempts.
 - * For details, refer to the “Chapter 1. 1. User Control / Login Authentication”.

3. Confirm the data you modify, and reflect it to the Role table.

- (1) Press [Submit] button.
- (2) Press [OK] button on the message for confirmation.
 - Press [Submit] button, and the message for confirmation appears.
 - Press [OK] to continue.
 - => The entered role data is modified.
 - Press [Cancel] button to stop setting.
 - => The entered role data is left as it is, and the modifying process is canceled.

Delete

Delete the entered role data from the Role table.

<Procedure>

1. Enter the role ID you delete, and press “Delete” button.

- (1) Enter the Role ID. (Necessary)
 - Enter the role ID registered in the Role table.
 - Press [Search] button, and select “Role ID” from the “Role List Box”.
For the list box image, refer to the “Role List Box” of the Role Setup (Modify).
- (2) Press [Delete] button.
 - The entered role data is displayed in the input field.

2. Confirm the role data you delete.

3. Confirm the data you delete, and reflect it to the Role table.

- (1) Press [Submit] button.
- (2) Press [OK] button on the message for the confirmation.
 - Press [Submit] button, and the message for confirmation appears.
 - Press [OK] to continue.
 - => The confirmed role data is deleted.
 - Press [Cancel] button to stop setting.
 - => The confirmed role data is left as it is, and the deleting process is canceled.