

Crowd Connected's Colocator beacons are long-range iBeacon transmitters.

UUID

2c2d41fb-d4c5-4a4d-a49a-e8fd5c256293

Major 0

Minor Indicated on the label

861 in the photograph



Beacons are shipped with batteries installed, but with a plastic disc ensuring they are not powered up.

The first step is to remove the battery cover on the rear using a coin or screwdriver turning it counter-clockwise to unlock it.



Once the cover is removed, the battery inside can be removed.



There's a small clear or white plastic disc preventing the battery from touching the contacts.



Remove the disc exposing the metal contacts.

Keep the disc safe in case you need to use it again to ship the beacons.



Put the battery back in, with the positive side (with text) facing up.



Replace the battery cover, and tighten it again.

The beacon is now powered up and transmitting.



We recommend the use of 3M command strips to mount the beacons on walls.

The strips have a red backing (this side sticks to the beacon) and a black backing (this side sticks to the wall).



Remove the red backing from a single strip and stick it to the beacon as shown.



Then remove the black backing and stick the beacon on the wall.

The beacon should be installed at around 2m to 3m from floor height - a little over head height to get good line of sight from some distance away.

To remove the beacon, pull the tag gently down while holding the beacon in place. The command strip will pull away without damaging decoration.

