

BEAT707 NXT II

USB

PULSE OUT

FOOTSWITCH

MIDI IN

MIDI OUT

TRACKS

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16

A B C D
PATT SECTION

PLAY
REC STOP
BPM PANIC

LOAD
BANK PATT MUTE
MONITOR CHAIN

O P T I O N S
BANK PATT TRACK BACK NEXT
GLOBAL KEEP CHAIN SKIP

TRACK ACCENT
COPY

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

< >
CHAIN
HOLD
TO
DEL ADD