 
 
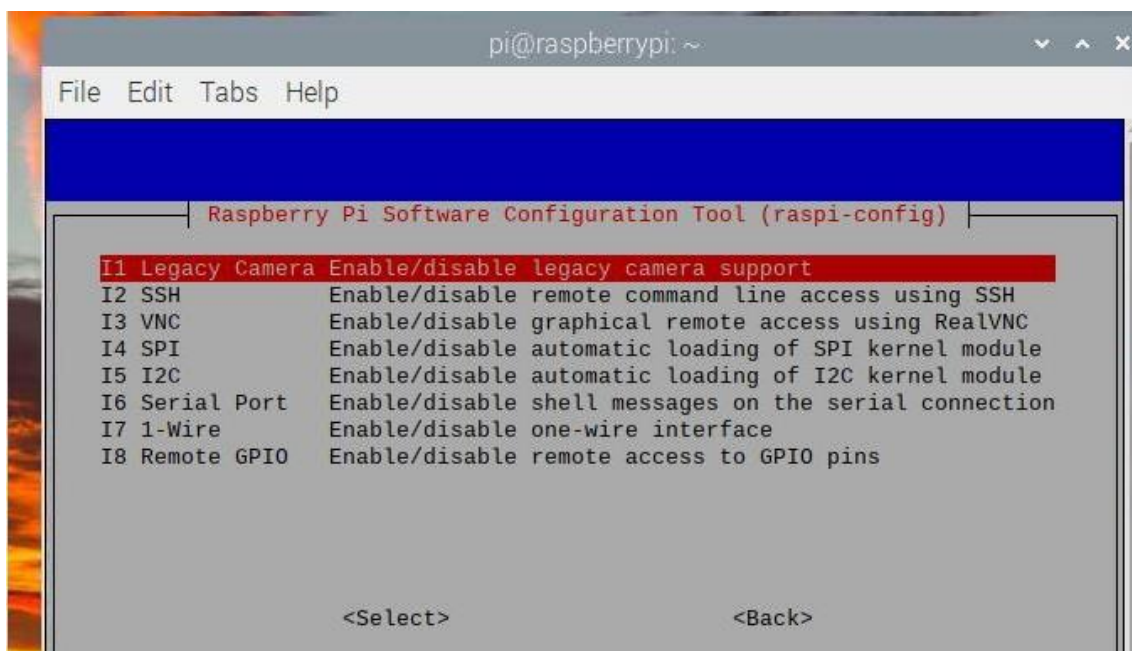 
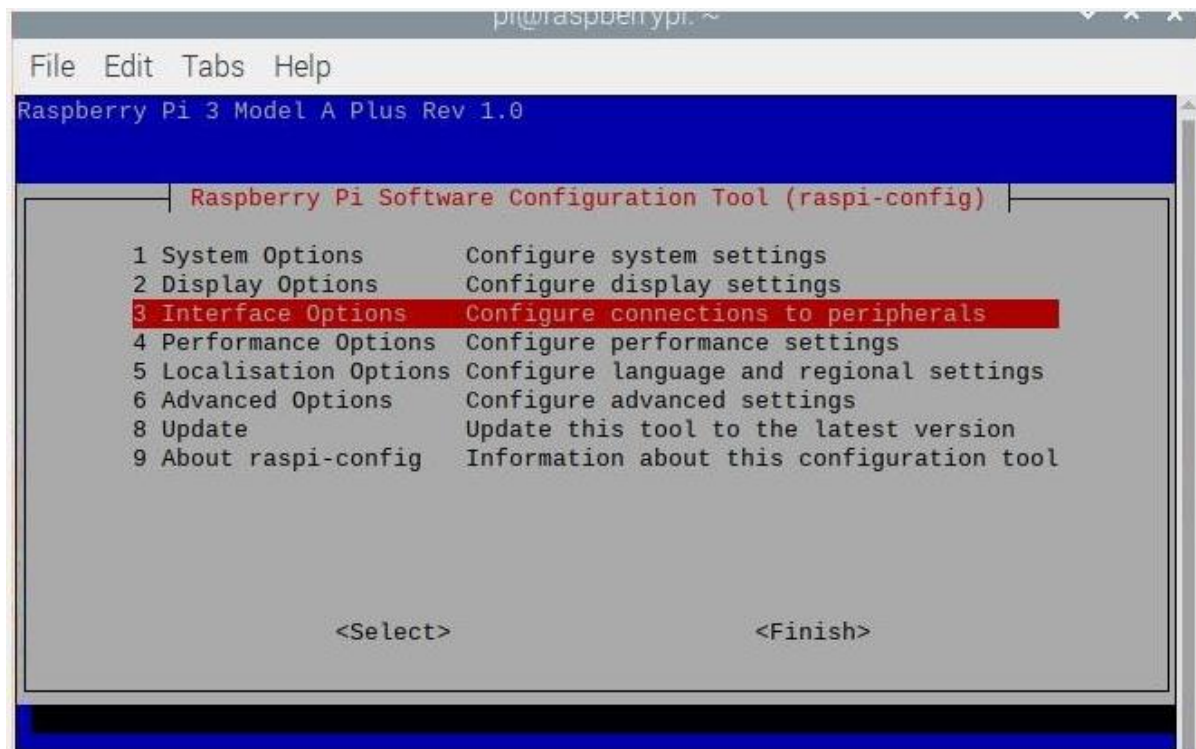 


Please try the following settings:

Enter the command `sudo raspi-config`

Select **3. Interface Options**<Legacy Camera<NO<OK.

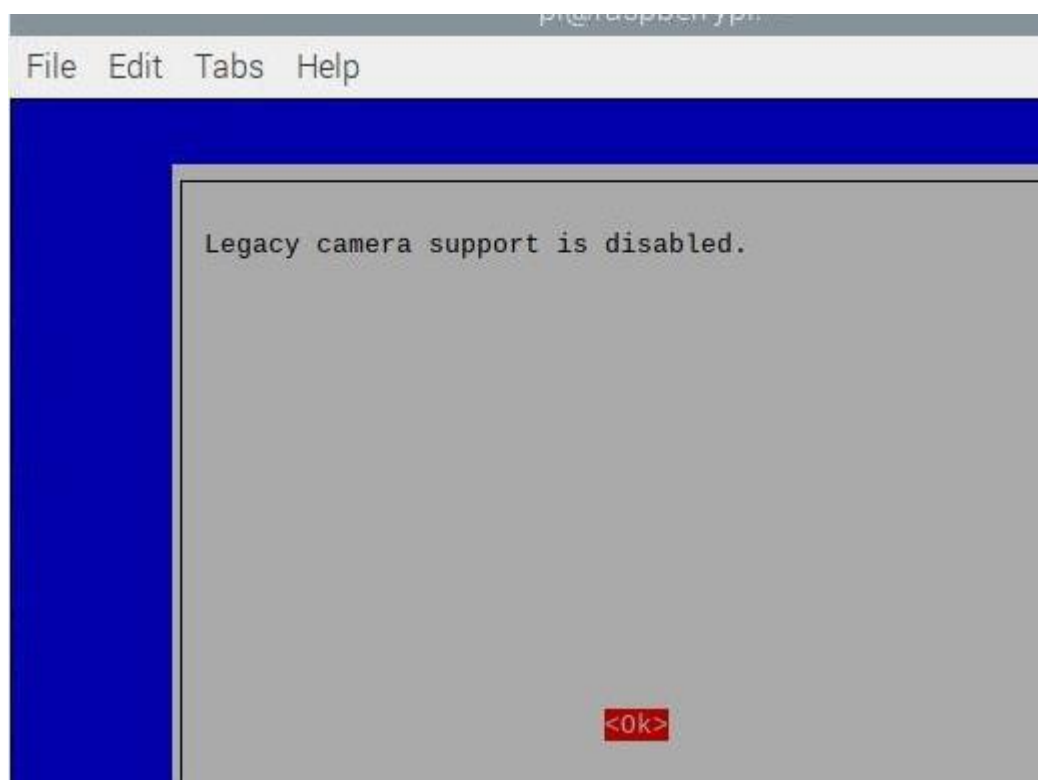

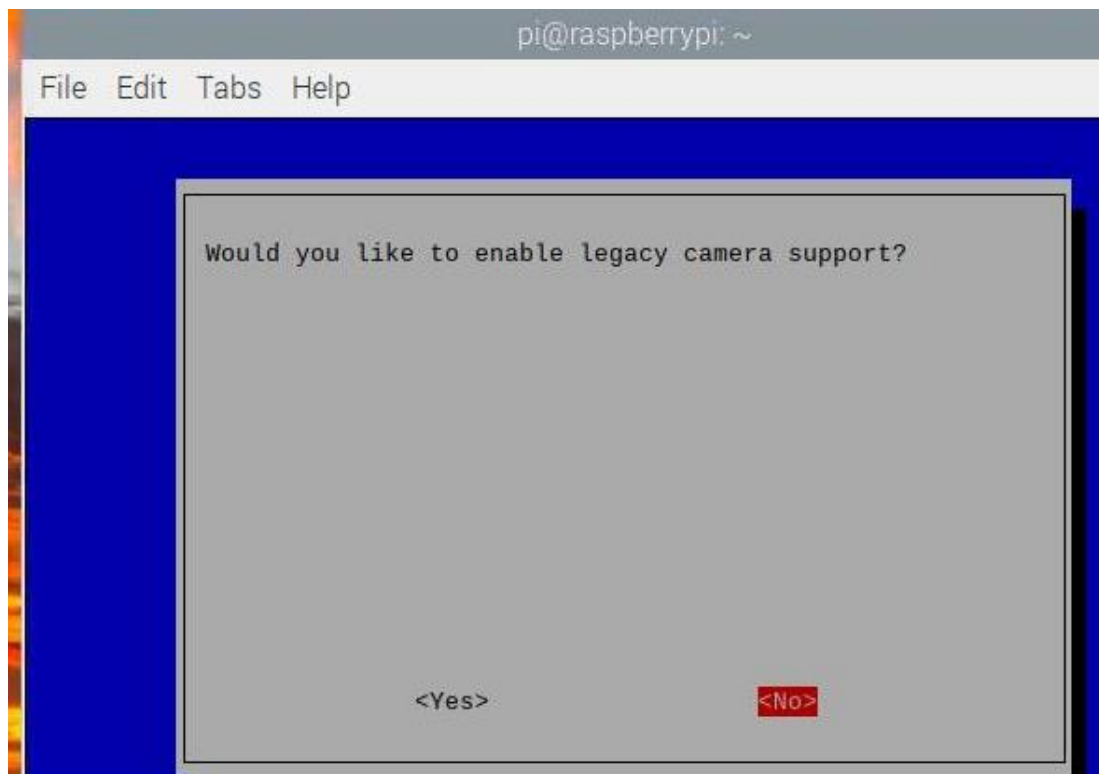

And then reboot the Raspberry Pi.

After the above configuration, do not run `vcgencmd get_camera` to detect the camera.

Just run `sudo python camera.py` and check if there is an image generated.

1. execute the `cd` command:

```
cd ~/Freenove_4WD_Smart_Car_Kit_for_Raspberry_Pi/Code/Server
```

2. Execute the following command:

```
python camera.py
```

Then please open and check the generated `image.jpg` under `/Freenove_4WD_Smart_Car_Kit_for_Raspberry_Pi/Code/Server`.

