




libcamera-apps does not work properly on Pi 0 to 3 devices when running the latest Bullseye images. A workaround is to open a terminal, run "**sudo raspi-config**", navigate to "**Advanced Options**" and enable "**Glamor**" graphic acceleration. Then reboot your Pi.

```
sudo raspi-config  
pi@raspberrypi:~ $ sudo raspi-config_
```

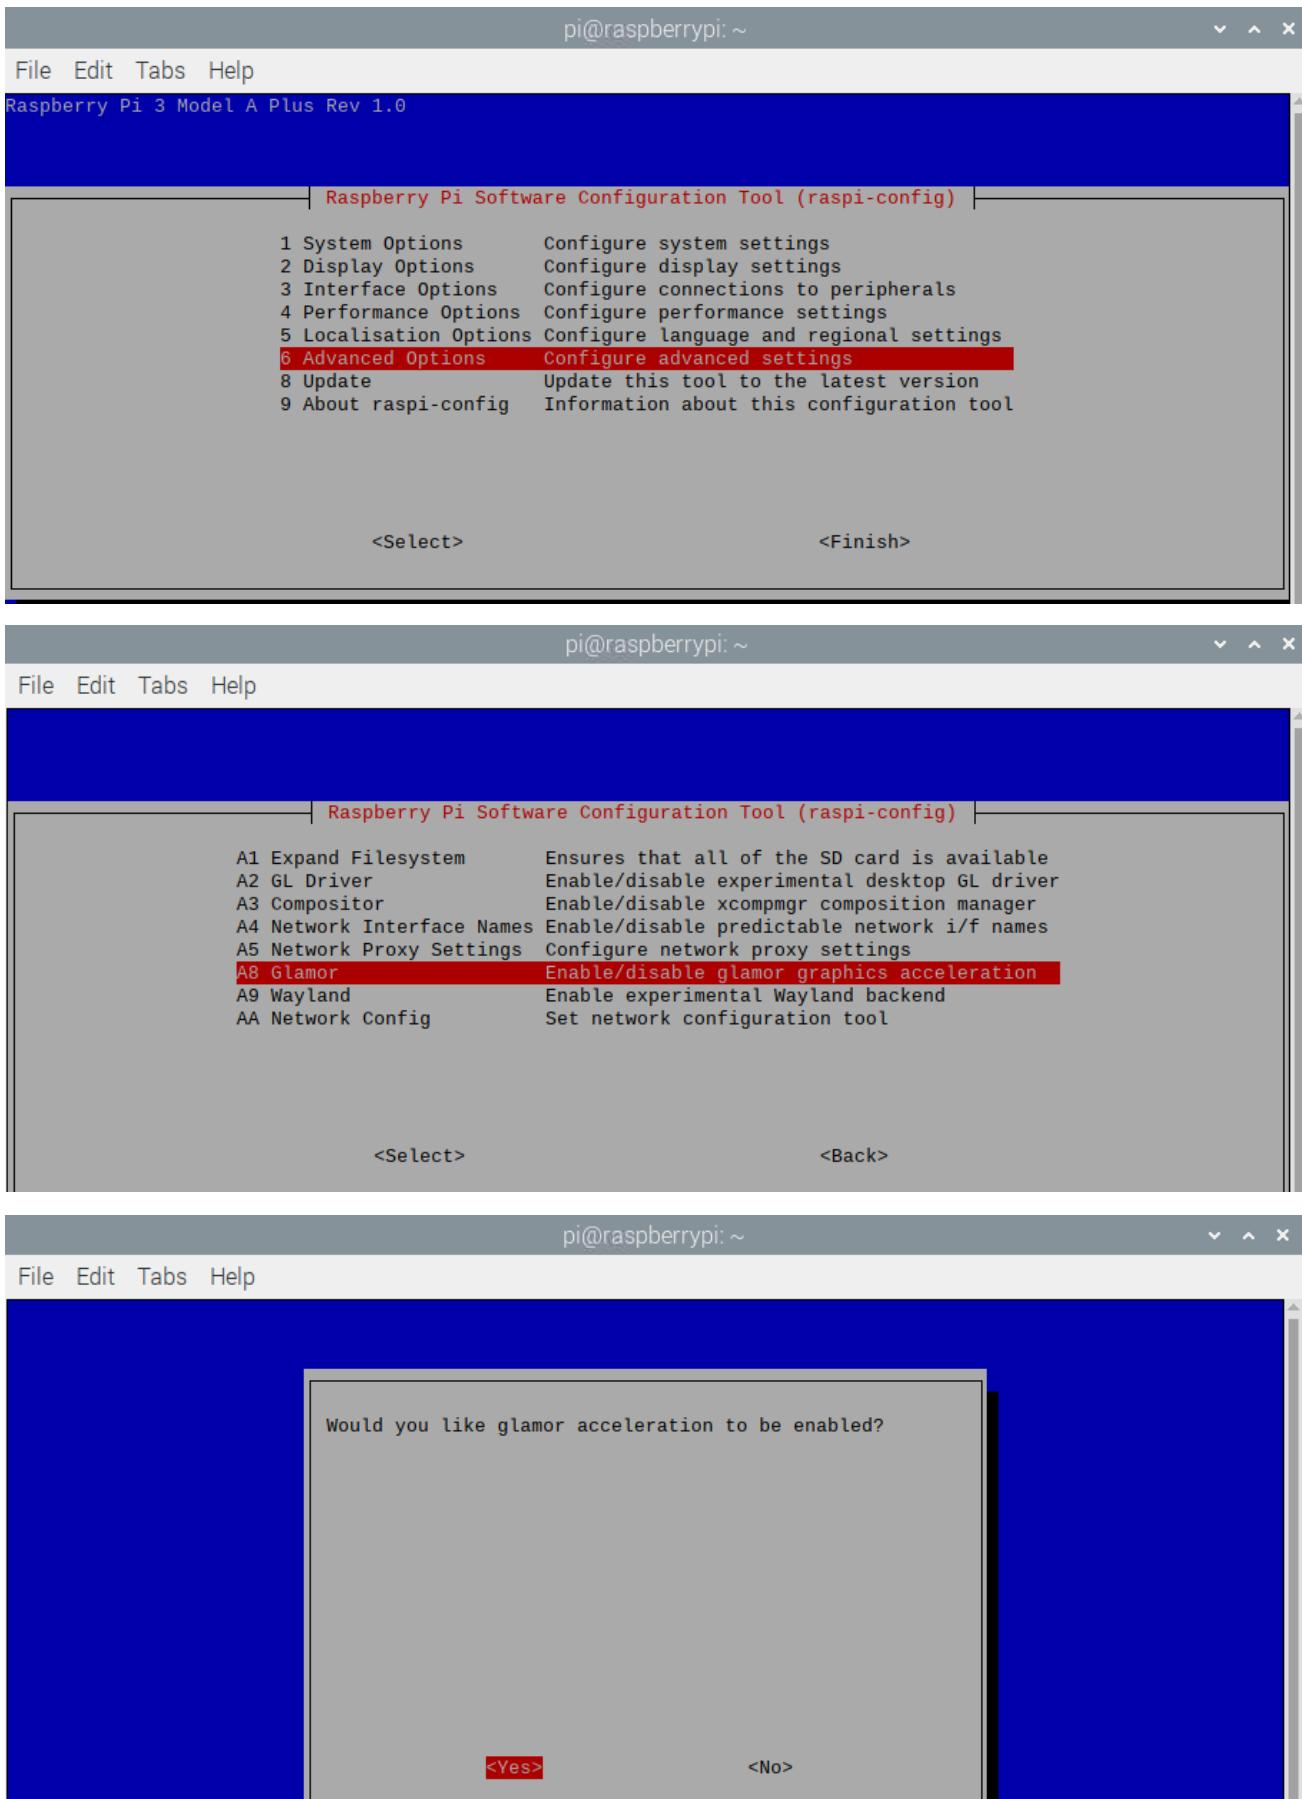

Then reboot your Pi.

If the result above does not appear, please check the camera [Wiring](#)

(Note: plugging and unplugging the cable requires the Raspberry Pi to be powered off, otherwise the camera module may be burned.)

Run program

1. execute the cd command:

```
cd ~/Freenove_Robot_Dog_Kit_for_Raspberry_Pi/Code/Server
```

2. Execute command below:

```
python camera.py
```

Then please open and check the generated image.jpg under
/Freenove_Robot_Dog_Kit_for_Raspberry_Pi/Code/Server.

