


How to Connect?

First, stick the two speakers behind the screen and connect the cables. Then fix the two stands with two screws.


Remove the sticker

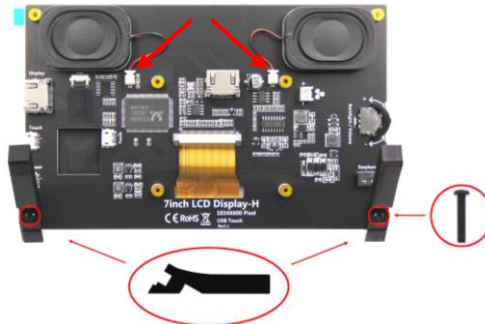

Raspberry Pi 400 / 4B / 3B+ / 3B / 3A+ / 2B / 1B+ / 1A+ run Raspberry Pi OS / Ubuntu

(Note: Raspberry Pi Zero W / Zero is also compatible but requires a USB adapter for USB cable.)

You need to configure the resolution manually. Download and view the guide: <http://freenove.com/fnk0055>

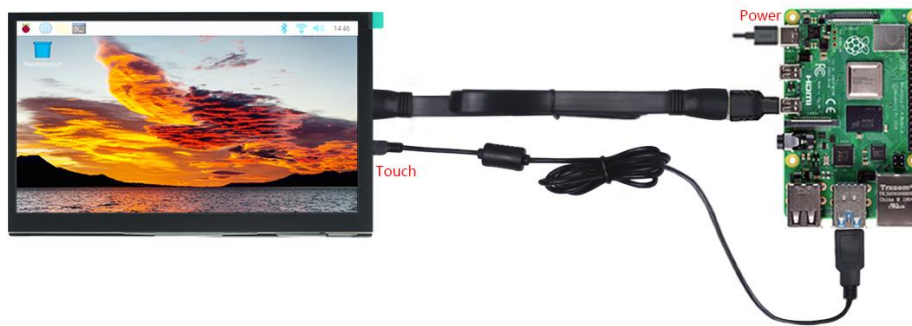

NVIDIA Jetson Nano Developer Kit / 2GB Developer Kit run Jetson Linux

The resolution will usually be adjusted automatically, otherwise please change the display settings.



Computers with an HDMI output port run Windows 11 / 10 / 8 / 7

The resolution will usually be adjusted automatically, otherwise please change the display settings.




Note: Usually only need to connect HDMI and Touch port, no need to connect Power port.


You can also fix your Raspberry Pi to the back of the screen.

(Note: Only Raspberry Pi 4B / 3B+ / 3B can be fixed.)

1. First, install the four standoffs. Then put on the Raspberry Pi and fasten it with four screws.

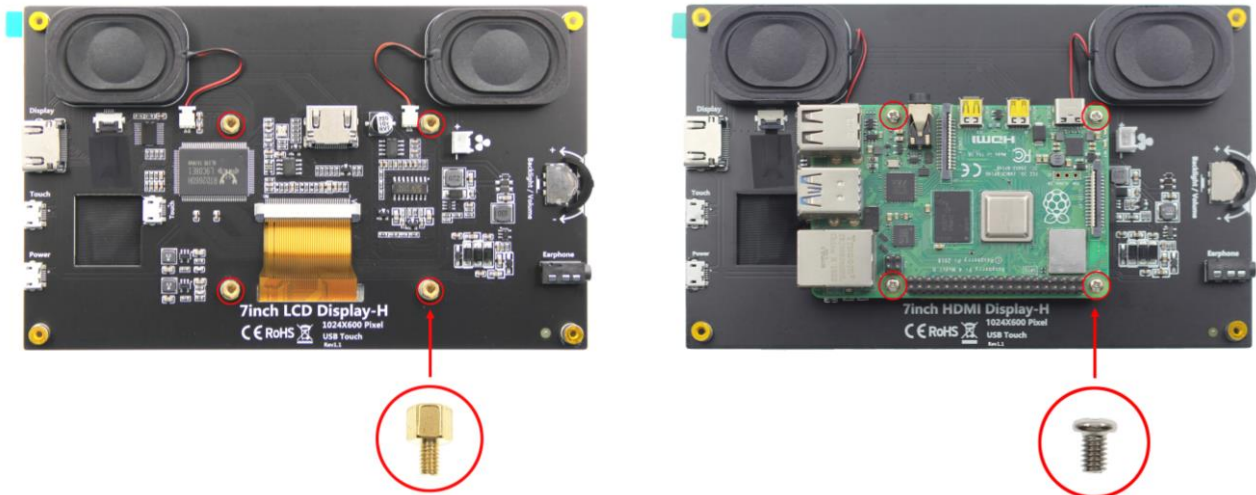

2. Connect the two connection boards. Finally, connect the power supply to the Raspberry Pi.
(Note: There are different connection boards for different Raspberry Pi models.)

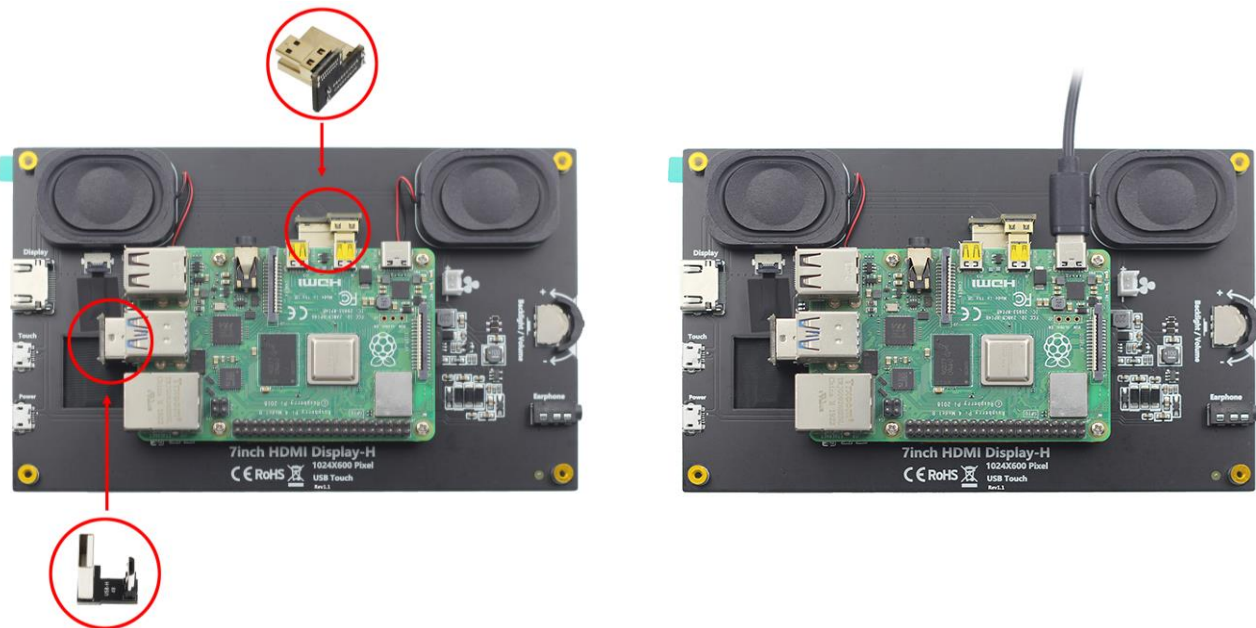

Having problems? Download the latest tutorial and troubleshooting: <http://freenove.com/fnk0055>
Need further help? Contact our technical support by email: support@freenove.com