






Instructions for updating the Chronopic chip.

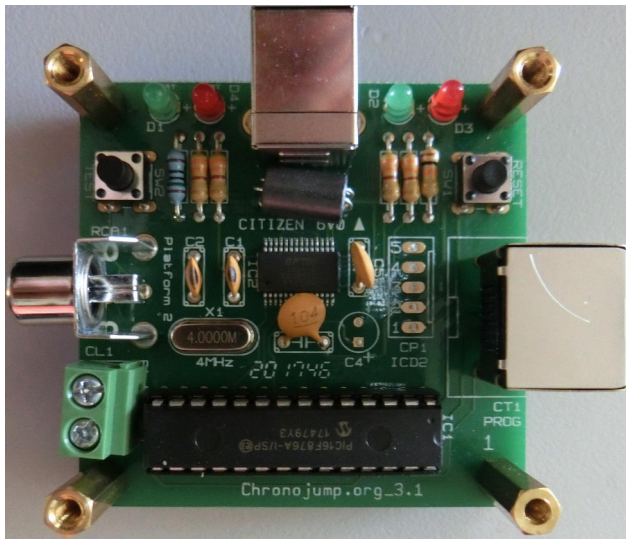


Remove the upper cap with a star screwdriver

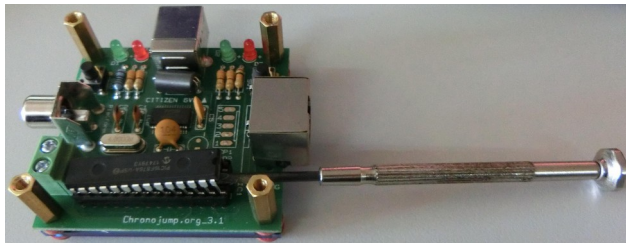

Insert a thin flat screw under the chip

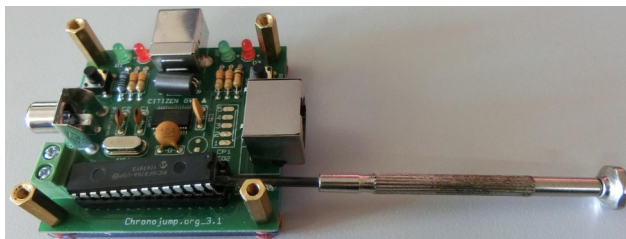

Use the screw as a lever to detach the chip

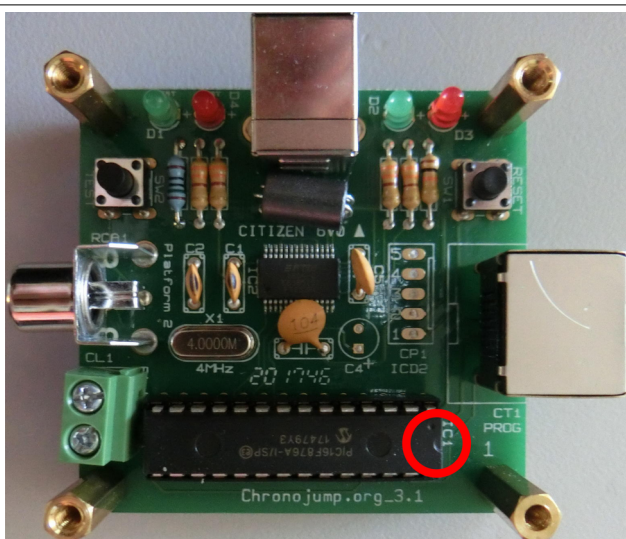

Remove the chip and insert the new chip taking care that the notch is in the correct side and making sure that all the pins enter vertically.