

Pioneer Dj

# DDJ-RZX

## Hardware Diagram for rekordbox dj



GROUP	No.	UI NAME	FUNCTION	+SHIFT
<b>1, DECK</b>				
1	1	JOG	Scratch (Vinyl on)	Seek
		<i>Top of jog</i>	Pitch Bend (Vinyl off)	
		<i>Side of jog</i>	Pitch Bend	No function assigned here
			JOG FEELING LIGHT/HEAVY	
	2	JOG FEELING ADJUST	Adjust the speed of playback stop	No function assigned here
	3	VINYL SPEED ADJUST TOUCH/BRAKE		No function assigned here
	4	JOG MODE	Vinyl Mode On/Off	Tempo Range
	5	MASTER TEMPO	Master Tempo On/Off	
	6	Takeover Indicator	Tempo Control	No function assigned here
	7	TEMPO RESET	TEMPO RESET on/off	
	8	TEMPO	Tempo Control	
	9	AUTO BEAT LOOP	Auto Beat Loop, Manual Loop On/Off	Active Loop On/Off
	10	LOOP 1/2X	Loop Size Select (Half)	Loop Move left
	11	LOOP 2X	Loop Size Select (Double)	Loop Move right
	12	LOOP IN	Loop in/Loop in adjust	RE-TRIGGER
			<i>Long press</i>	No function assigned here
	13	LOOP OUT	Loop out/Adjust loop out	RELOOP/EXIT
	14	SEQUENCER START	Start	Select a saved sequence.
	15	SEQUENCER OVERDUB	Overdub	Save
	16	CAPTURE	Capture	Slicer capture
	17	PLAY/PAUSE	Play/Pause	
	18	CUE	Set Cue/Play, Back Cue	Jump to track start
	19	QUANTIZE	Quantize	Load Sequence
	20	SYNC	SYNC On/Off	No function assigned here
	21	MASTER	Master	No function assigned here
	22	SHIFT	SHIFT	No function assigned here
	23	SLIP	SLIP Mode On/Off	No function assigned here
	24	DECK 1-4	Select Deck 1-4 (*1)	No function assigned here
			<i>Long press</i>	No function assigned here
	25	DIRECTION	REV	No function assigned here
			<i>Front</i>	No function assigned here
			<i>Back</i>	No function assigned here
	26	GRID SLIDE	SLIP REV	No function assigned here
			<i>Center</i>	No function assigned here
	27	GRID ADJUST	FWD (REV off)	No function assigned here
			Move Beat Grid (with JOG wheel)	Beat Adjust 2x
			BPM Adjust (with JOG wheel)	Beat Adjust 1/2x
<b>2, EFFECT COMMON</b>				
2	1	FX1	FX1 Assign On/Off	
	2	FX2	FX2 Assign On/Off	
	3	FX MODE	Switch FX MODE	
	10	RELEASE FX	RELEASE FX On	
	11	TIME	Adjust FX Time (for beat FX)	
	12	TAP	FX TAP (Adjust tempo manually)	FX auto beat
	13	BEAT (◀)	FX beat down	No function assigned here
	14	BEAT (▶)	FX beat up	No function assigned here
	<b>Multi Mode</b>			
	4	1	FX1 Level/Depth	
	5	2	FX2 Level/Depth	
	6	3	FX3 Level/Depth	
	7	ON	FX1 On/Off	Select FX 1
	8	ON	FX2 On/Off	Select FX 2
	9	ON	FX3 On/Off	Select FX 3
	<b>Single Mode</b>			
	4	1	FX Level Adjust	
	5	2	FX Parameter1 adjust	
	6	3	FX Parameter2 adjust	
	7	ON	FX On/Off	FX select
	8	ON	FX Parameter Button1	No function assigned here
	9	ON	FX Parameter Button2	No function assigned here
<b>3, BROWSER</b>				
1	1	ROTARY SELECTOR	<i>rotate</i>	Scroll through files/folders/items
			<i>press</i>	Waveform Zoom In/Out
	2	BACK	Show panels forward (*2)	No function assigned here
			Show tree view/panels backward	Show Tag List/Playlist Palette
	3	TAG TRACK	Add/delete Tag List	Show Related Tracks
			Load to deck1	Sort by BPM
	4	LOAD	Instant Doubles	No function assigned here
			<i>press twice</i>	Sort by TRACK TITLE
	5	LOAD	Load to deck2	No function assigned here
			<i>press twice</i>	Sort by TRACK#
	6	LOAD	Instant Doubles	No function assigned here
			<i>press twice</i>	Sort by TRACK#
	7	LOAD	Load to deck3	No function assigned here
			<i>press twice</i>	Sort by ARTIST
	8	WAKE UP (UTILITY)	Instant Doubles	No function assigned here
			<i>press twice</i>	Hide the utilities screen/Cancel standby mode
			<i>Long press</i>	Show the utilities screen

GROUP	No.	UI NAME	FUNCTION	+SHIFT
<b>4, MIXER</b>				
1	1 OFF/ON/TALK OVER		MIC OFF/ON/TALK OVER	
	2	USB (A)	Select USB-A	
	3	USB (B)	Select USB-B	
	4	MASTER LEVEL	Master Out level	
	5	MASTER BALANCE	Master Out balance (left and right)	
	6	BOOTH MONITOR LEVEL	Booth Out level	
	7	MASTER LEVEL indicator	Master level indicator	
	8	MASTER OUT COLOR	SOUND COLOR FX Parameter adjust (MASTER OUT)	
	9	MASTER CUE	Master CUE (All Headphone CUE valid/invalid)	
	10	OSC SAMPLER (NOISE)	OSC SAMPLER (NOISE) On/Off	
	11	OSC SAMPLER (SINE)	OSC SAMPLER (SINE) On/Off	
	12	OSC SAMPLER (SIREN)	OSC SAMPLER (SIREN) On/Off	
	13	OSC SAMPLER (HORN)	OSC SAMPLER (HORN) On/Off	
	14	OSC SAMPLER VOLUME	OSC SAMPLER VOLUME	
	15	OSC SAMPLER PARAMETER	OSC SAMPLER PARAMETER	
	16	OSC SAMPLER SOURCE	OSC SAMPLER SOURCE select (USB A/INT./USB B)	
	17	EQ CURVE (ISOLATOR/EQ)	Select ISO/EQ	
	18	CHANNEL FADER CURVE	Channel fader curve	
	19	CROSS FADER CURVE	Crossfader curve	
	20	HEADPHONES LEVEL	HEADPHONES LEVEL	
	21	HEADPHONES MIXING	Monitor balance	
	22	HEADPHONES MONO SPLIT / STEREO	Monitor sound MONO SPLIT / STEREO	
	23	SOUND COLOR FX PARAMETER	SOUND COLOR FX Parameter adjust	
	24	SOUND COLOR FX (SPACE)	SOUND COLOR FX (SPACE) On/Off	
	25	SOUND COLOR FX (DUB ECHO)	SOUND COLOR FX (DUB ECHO) On/Off	
	26	SOUND SAMPLER FX (CRUSH)	SOUND COLOR FX (CRUSH) On/Off	
	27	SOUND COLOR FX (JET)	SOUND COLOR FX (JET) On/Off	
	28	SOUND COLOR FX (PITCH)	SOUND COLOR FX (PITCH) On/Off	
	29	SOUND COLOR FX (FILTER)	SOUND COLOR FX (FILTER) On/Off	
	30	MIC FX PARAMETER	MIC FX Parameter adjust	
	31	MIC FX (ECHO)	MIC FX (ECHO) On/Off	
	32	MIC FX (REVERB)	MIC FX (REVERB) On/Off	
	33	MIC FX (PITCH)	MIC FX (PITCH) On/Off	
	34	MIC FX (VTUNE)	MIC FX (VTUNE) On/Off	
	35	MIC EQ HI	MIC EQ HI	
	36	MIC EQ MID	MIC EQ MID	
	37	MIC EQ LOW	MIC EQ LOW	
	38	MIC LEVEL (MIC 2)	MIC 2 Level	
	39	MIC LEVEL (MIC 1)	MIC 1 Level	
	40	CD/USB	PC/External input (CD) select	
	41	LINE/PHONO/USB	PC/External input (LINE/PHONO) select	
	42	CH LEVEL	Channel level indicator	
	43	TRIM	Trim	
	44	ISO/EQ HI	ISO/EQ High	
	45	ISO/EQ MID	ISO/EQ Mid	
	46	ISO/EQ LOW	ISO/EQ Low	
	47	COLOR	SOUND COLOR FX Parameter adjust (CH1~4)	
	48	CUE	Headphone CUE On/Off	Tap BPM
	49	CH FADER	Channel fader	Channel fader start
	50	CROSSFADER ASSIGN	<i>A</i>	Assign to left deck
			<i>THRU</i>	Through
			<i>B</i>	Assign to right deck
	51	CROSSFADER	Crossfader	Crossfader start
	52	SAMPLER CH USB (A)	Select SAMPLER CH of USB-A	
	53	SAMPLER CH USB (B)	Select SAMPLER CH of USB-B	
	54	SAMPLER SYNC	SAMPLER Sync On/Off	BPM DOWN
	55	SAMPLER MASTER	SAMPLER Master	BPM UP
	56	SAMPLER QUANTIZE	SAMPLER Quantize	No function assigned here
	57	SAMPLER TRIM	SAMPLER Trim	No function assigned here
	58	SAMPLER COLOR	SOUND COLOR FX Parameter adjust (SAMPLER)	
	59	SAMPLER CUE	Headphone CUE On/Off (SAMPLER)	Tap BPM
	60	SAMPLER VOLUME	Sampler volume	

GROUP	No.	UI NAME	FUNCTION	+SHIFT
<b>5, DISPLAY</b>				
1	1	VIEW (PAD INFO/DECK VIDEO)	Switch screen(performance pad information/video track infomtion)	
			Display the track information	Display the memory cue information
	2	TRACK INFO	Display the memory cue information	
			<i>Long press</i>	Auto Cue On/Off
	3	TIME MODE	Switch the display method of the playback time (remain/elapsed)	
			<i>Long press</i>	Auto Cue On/Off
	4	COMBO FX	Switch to the COMBO FX screen	Switch to the effect selection screen
			<i>press twice</i>	Switch to the effect selection screen
	5	SAMPLER REPEAT	Switch to the SAMPLER REPEAT screen	Switch to the effect selection screen
			<i>press twice</i>	Switch to the effect selection screen
	6	VIEW (WAVEFORM/ MASTER VIDEO)	Switch screen(detailed waveform/video output after mixing)	DUAL DISPLAY
			<i>Long press</i>	Switch all (center, left and right) screen to video infomation display
	7	2 DECK/4 DECK	DUAL DISPLAY	
			Switch detailed waveform display mode(2 decks/4 decks)	Switch detailed waveform display mode(USB A/USB B)
	8	SINGLE	Switch detailed waveform display mode(Vertical/Horizontal)	No function assigned here
			<i>Long press</i>	No function assigned here
	9	MULTI	Display the SINGLE MODE setting screen of SOUND COLOR FX	No function assigned here
			Display the MULTI MODE setting screen of SOUND COLOR FX	No function assigned here
	10	TOUCH DISPLAY	touch display	
<b>6, PERFORMANCE PADS</b>				
1	9	HOT CUE	Hot Cue Mode	Beat Jump Mode
			<i>press twice</i>	Active Censor Mode
	10	PAD FX1	PAD FX1 Mode	PAD FX2 Mode
			<i>press twice</i>	Slicer Mode
	11	SLICER	Slicer Mode	Slicer Loop Mode
			<i>press twice</i>	Velocity Sampler Mode
	12	SAMPLER	Sequence Call Mode	No function assigned here
			<i>press twice</i>	No function assigned here
	1-8	PERFORMANCE PAD 1-8	<i>Hot Cue</i>	Hot cue
			<i>Beat Jump</i>	Jump to assigned beat and direction
			<i>Active Censor</i>	Select FX(1-4), Range Specification(5-7), On/Off(8)
			<i>PAD FX1</i>	PAD FX1 ON (Momentary)
			<i>PAD FX2</i>	PAD FX2 ON (Momentary)
			<i>Slicer</i>	Slicer section Play
			<i>Slicer Loop</i>	Slicer Loop
			<i>Sampler</i>	Sampler slot Play
			<i>Velocity</i>	Sampler slot Play
			<i>Sequence Call</i>	Sequence playing Stop
13	PARAMETER (◀)	<i>mode</i>	<i>Hot Cue</i>	Call Memory Cue (◀)
			<i>Beat Jump</i>	Change Jump Range (1/2x)
			<i>Active Censor</i>	Jump to start position (◀)
			<i>PAD FX1</i>	Beat adjustment (down)
			<i>PAD FX2</i>	Beat adjustment (down)
			<i>Slicer</i>	Change Slice Roll (down)
			<i>Slicer Loop</i>	Change Slice Roll (down)
			<i>Sampler</i>	Change Bank (down)
			<i>Velocity</i>	Sequence MUTE mode on/off
			<i>Sequence Call</i>	Sequence MUTE mode on/off
				No function assigned here
				No function assigned here
14	PARAMETER (▶)	<i>mode</i>	<i>Hot Cue</i>	Call Memory Cue (▶)
			<i>Beat Jump</i>	Change Jump Range (2x)
			<i>Active Censor</i>	Jump to start position (▶)
			<i>PAD FX1</i>	Beat adjustment (up)
			<i>PAD FX2</i>	Beat adjustment (up)
			<i>Slicer</i>	Change Slice Roll (up)
			<i>Slicer Loop</i>	Change Slice Roll (up)
			<i>Sampler</i>	Change Bank (up)
			<i>Velocity</i>	Sequence ERASE mode on/off
			<i>Sequence Call</i>	Sequence ERASE mode on/off
				No function assigned here
				No function assigned here

\*1 Dual Deck mode can be enabled in the following ways.

Press the [DECK3] button while pressing the [DECK1] button or press the [DECK1] button while pressing the [DECK3] button.

Dual Deck mode can be disabled by pressing the [DECK1] or [DECK3] button.

\*2 When your 'Load Method' setting is 'Rotary Selector' in rekordbox Preferences, track load function is available.

\*3 Enables in selecting TRANS or V.BRAKE FX.