



Drag horizontal to adjust center frequency. Right-drag or SHIFT+UP/DOWN to adjust vertical scale; right-click to reset. 'B' to toggle decibels display.