

Select Coin	<input type="text" value="GRIN32"/>
Pool 1	<input type="text"/>
Pool1 worker	<input type="text"/>
Pool1 password	<input type="text"/>

Grinmint info can be found <https://grinmint.com/help.html>

Pool field: Pool server options in Asia, Europe or United States. This is the format for the Pool field:

stratum+tcp://asia-east-stratum.grinmint.com:3416

stratum+tcp://eu-west-stratum.grinmint.com:3416

stratum+tcp://us-east-stratum.grinmint.com:3416

Pool Worker: This is where you enter your account and rigname in the format of email/rigname, e.g. satoshi+randomvalue@nakamoto.com/ G1mini. We recommend that you use +randomvalue such as satoshi+345543@nakamoto.com/G1mini for more privacy.

Password: This field is only required the FIRST time you connect to grinmint as the first time you connect sets up an account for you. After your first connection you do not need to include the password and you should not include it for improved security.

Select Coin	<input type="text" value="GRIN32"/>
Pool 1	<input type="text" value="stratum+tcp://us-east-stratum.grinmint.com:341"/>
Pool1 worker	<input type="text" value="satoshi+345543@nakamoto.com/G1mini"/>
Pool1 password	<input type="text" value="G1miniPASSWORD"/>

Monitor your rewards and trigger payouts at the grinmint dashboard

<https://www.grinmint.com/dashboard.html?email=satoshi%2B345543%40nakamoto.com#>