




- 1 To increase temperature, click on the red button as shown below.

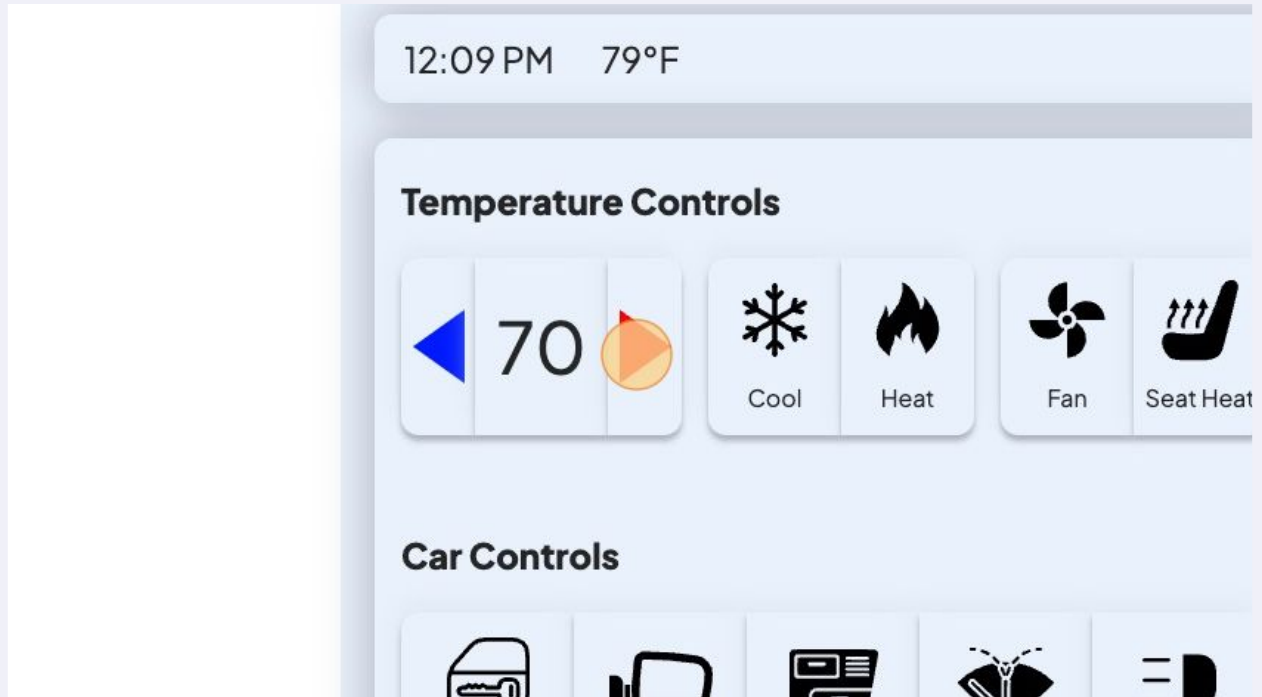

- 2 To decrease temperature, click on the blue button as shown below.

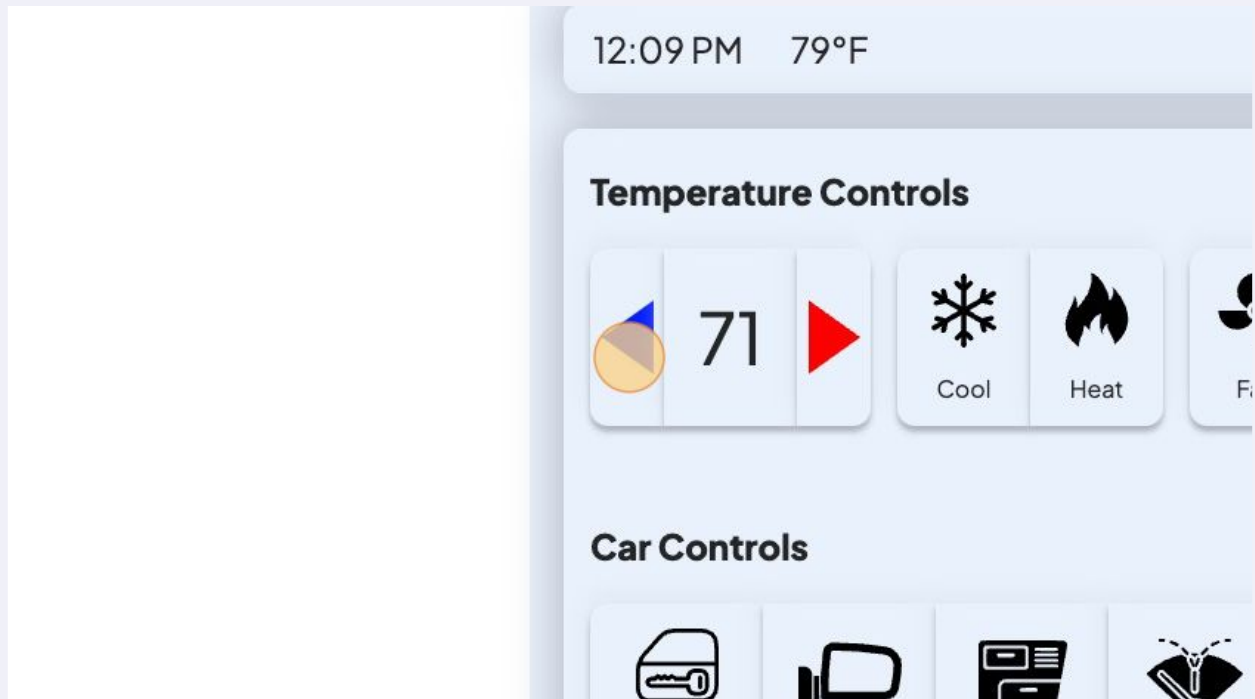


- 3 To change the fan settings, click on the fan button as shown in the image below.

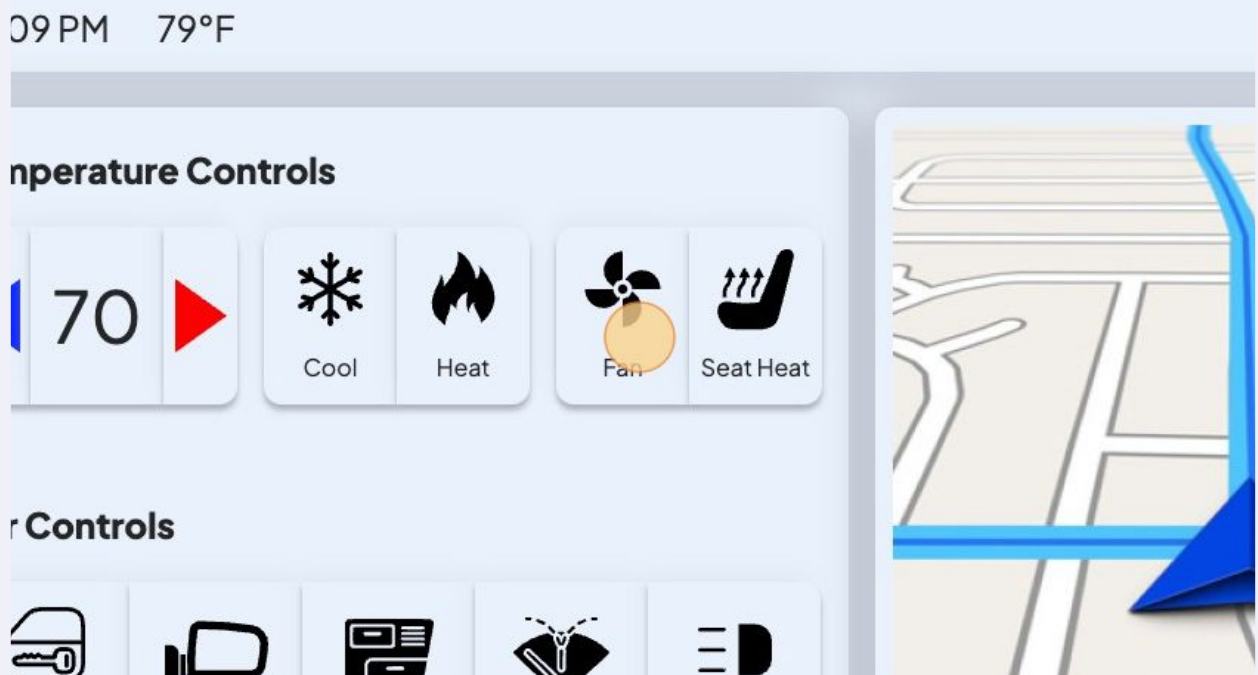


4

After clicking on the fan button, change according to desired fan speed by moving the slider either front or rear based on your preference.

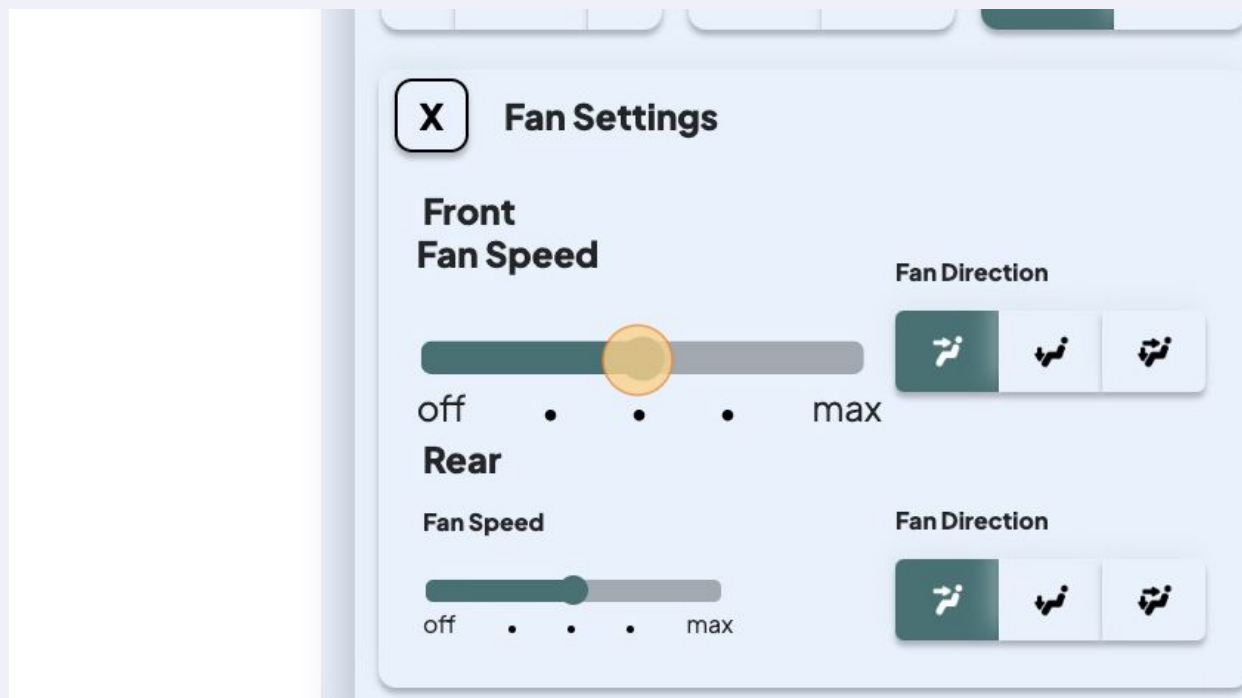


5


To change the fan direction to the foot area, click on the button shown below.

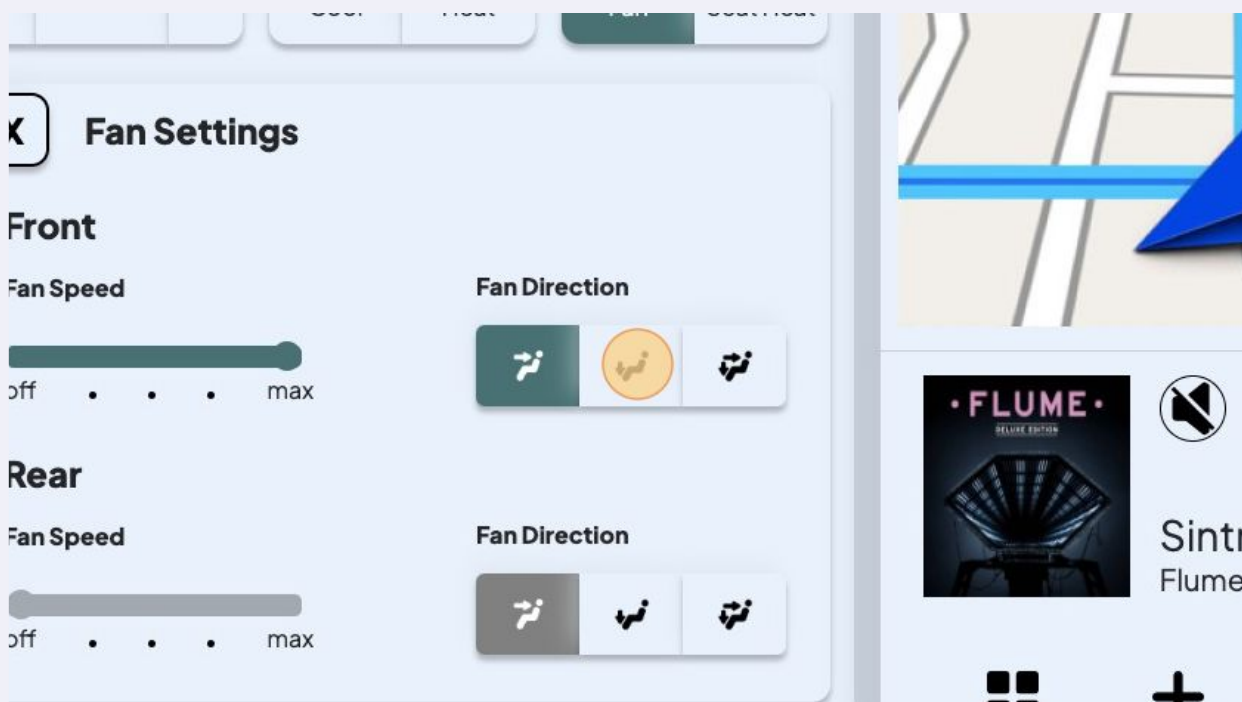


- 6 To change the fan direction, click on the button shown below.

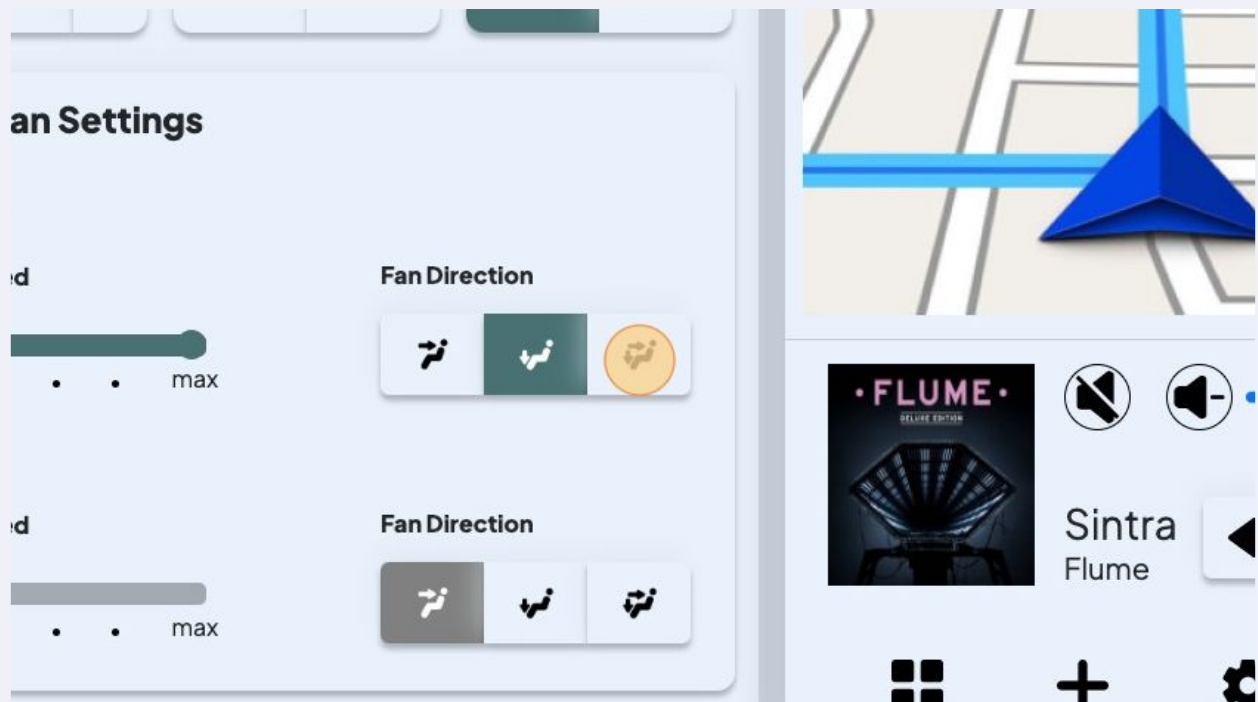


- 7 Click "Seat Heat", to turn on seat heating

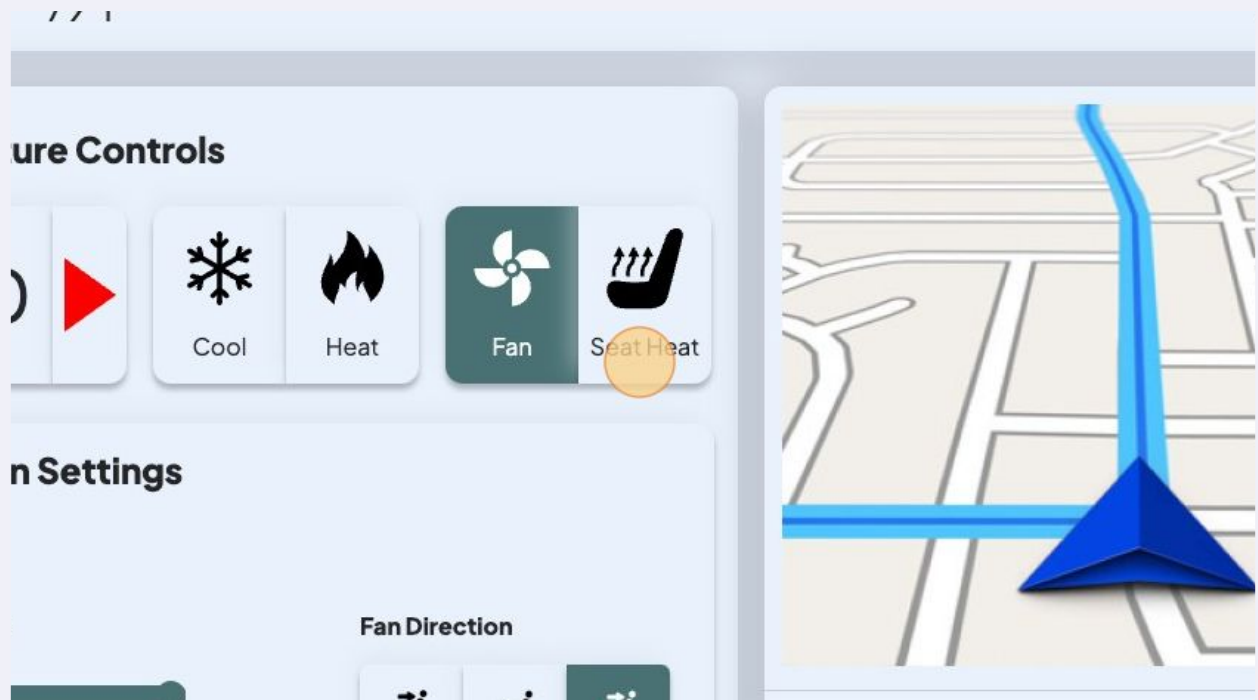


- 8 Adjust the slider to change seat heating

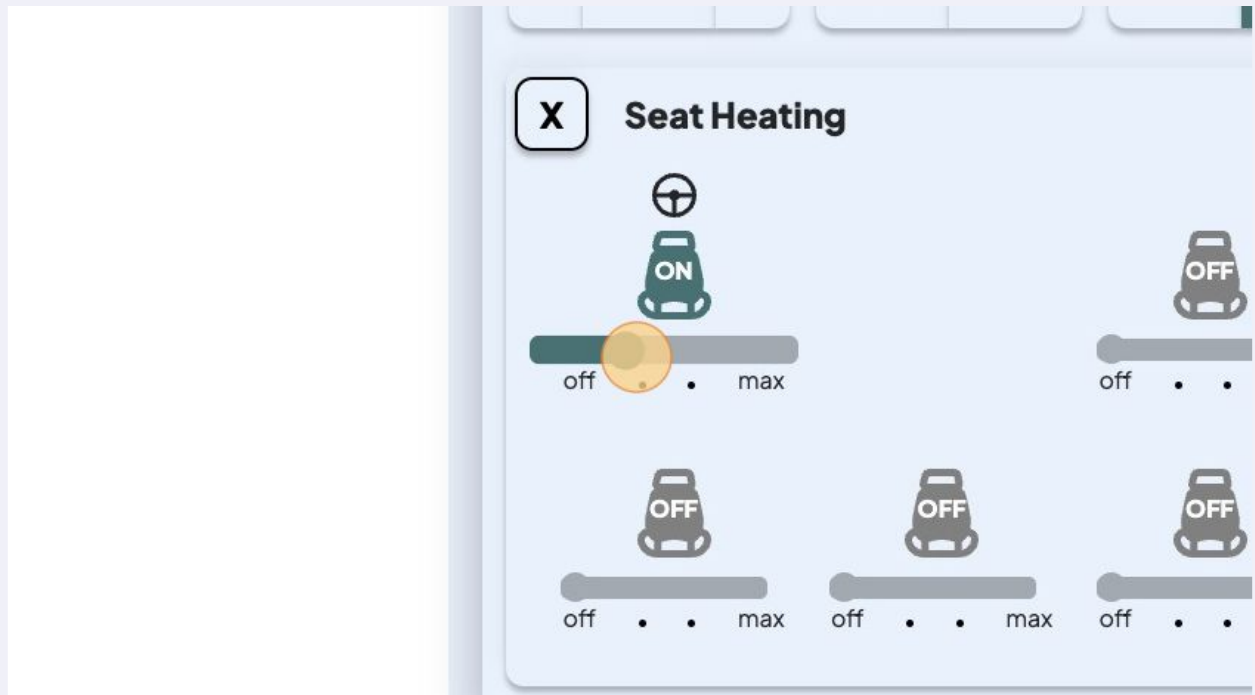


- 9 Click "X", to exit the seat heating option.

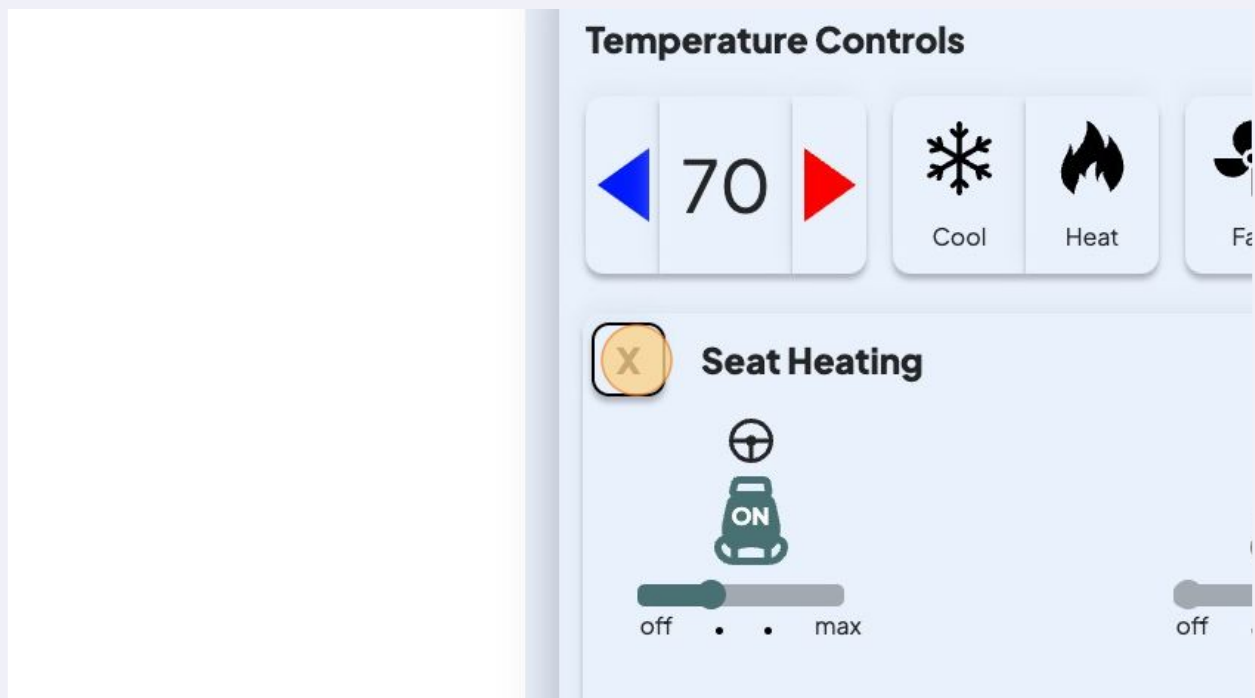


- 10 To open glove box, click on this button as shown in the image

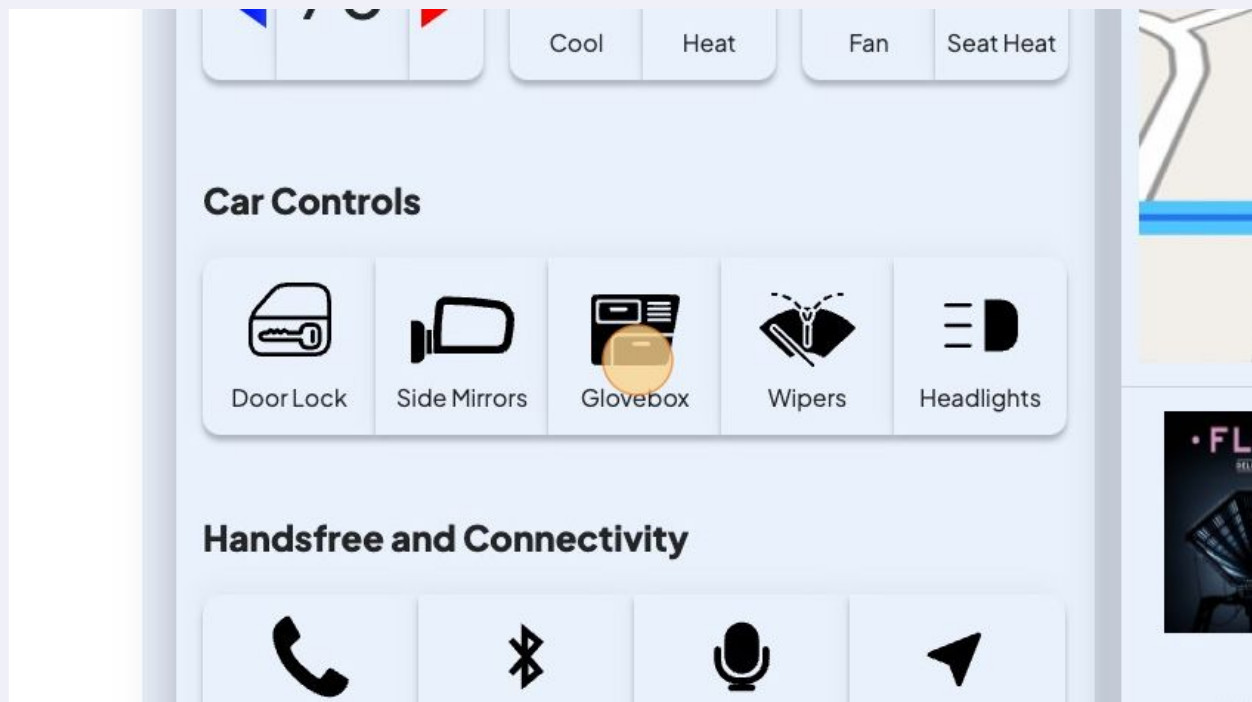


- 11 To adjust the side mirrors, click on the side mirror button as shown below

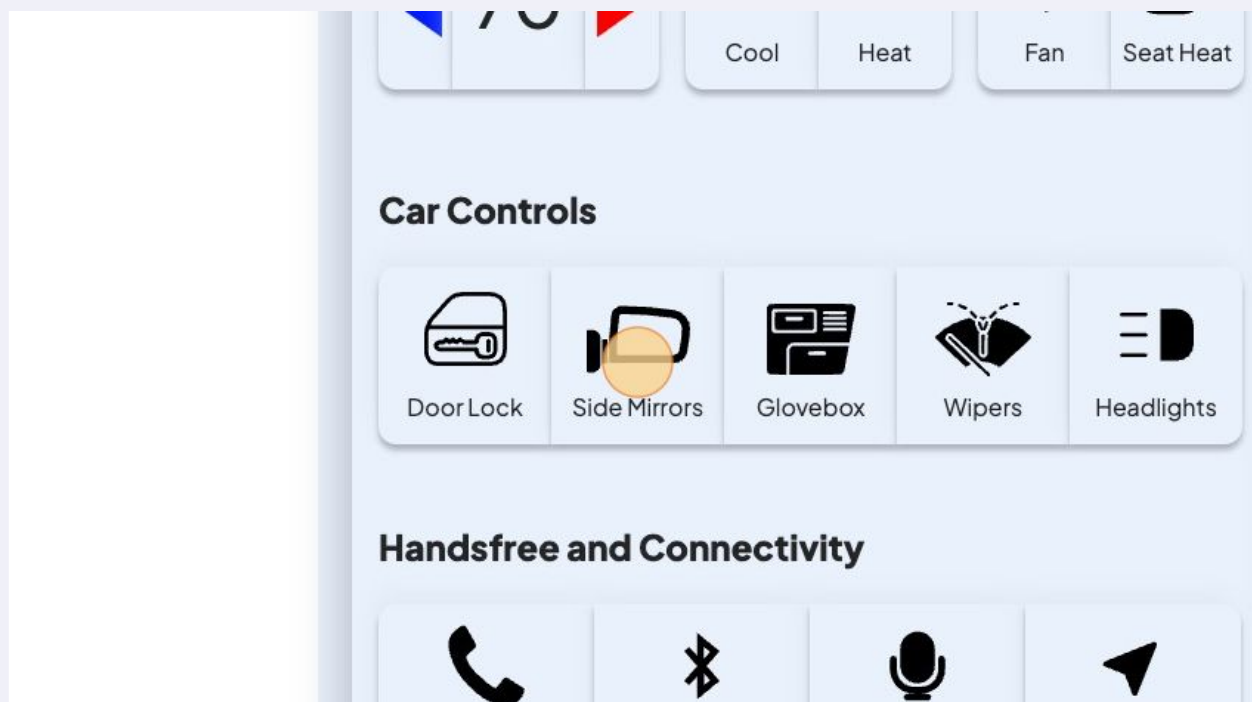

- 12 To select left mirror, click on the left mirror option as shown below.

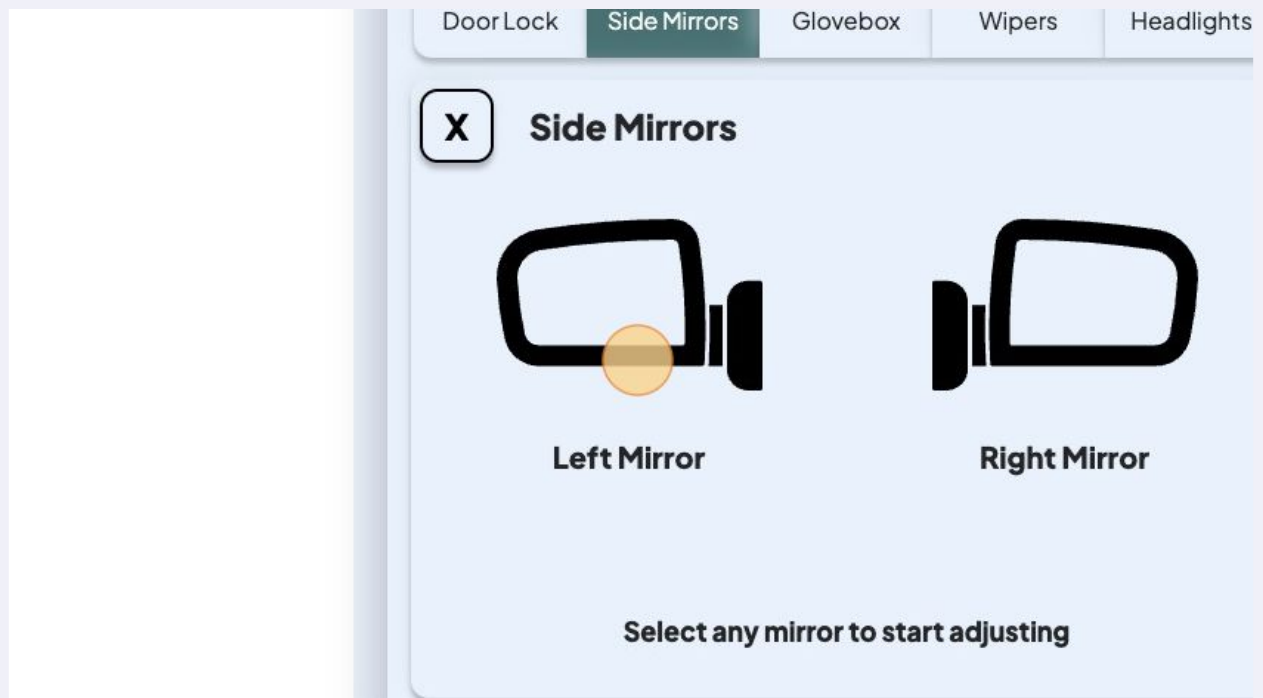

- 13 To select right mirror, click on the right mirror option as shown below.

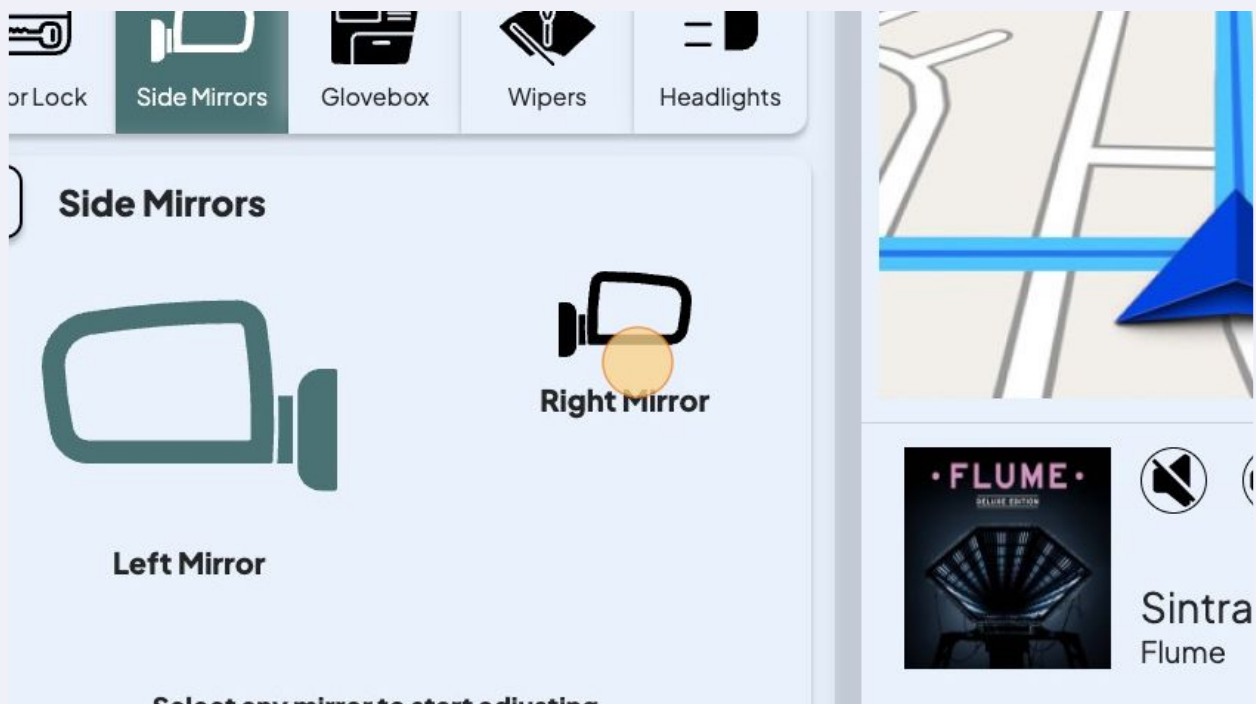

- 14 Click "X", to exit the side mirror options.

