



#### Notes

1. Ignore pin numbers. Use pin names instead.
2. Switch S9 overrides all the enhancement mode switches S3 - S7 (turns them on).
3. Switch S10 overrides switch S4.
4. Switches S3 - S7 and R1 - R5 not used or wired in this version.

<https://github.com/Grommet123/GPSLCD>

TITLE:

GPSLCD

REV: 4.7

Date: 2016-11-27

Sheet: 1/1

EasyEDA V3.11.3

Drawn By: GK Grotsky