



3.3V  
rail

Pysense is used only as a programmer in this example. E.g. don't connect sensor pins/wires to it, all sensors should be connected on the breadboard and to the Fipy/Lopy4/Gpy