 



2 款 TT 马达小车安装说明书 (中英文)

Installation Instructions for 2 TT Motor Cars (Chinese and English)


第一款 First set:

 
1. 安装电机支架到底板上 Install the motor bracket to the bottom plate

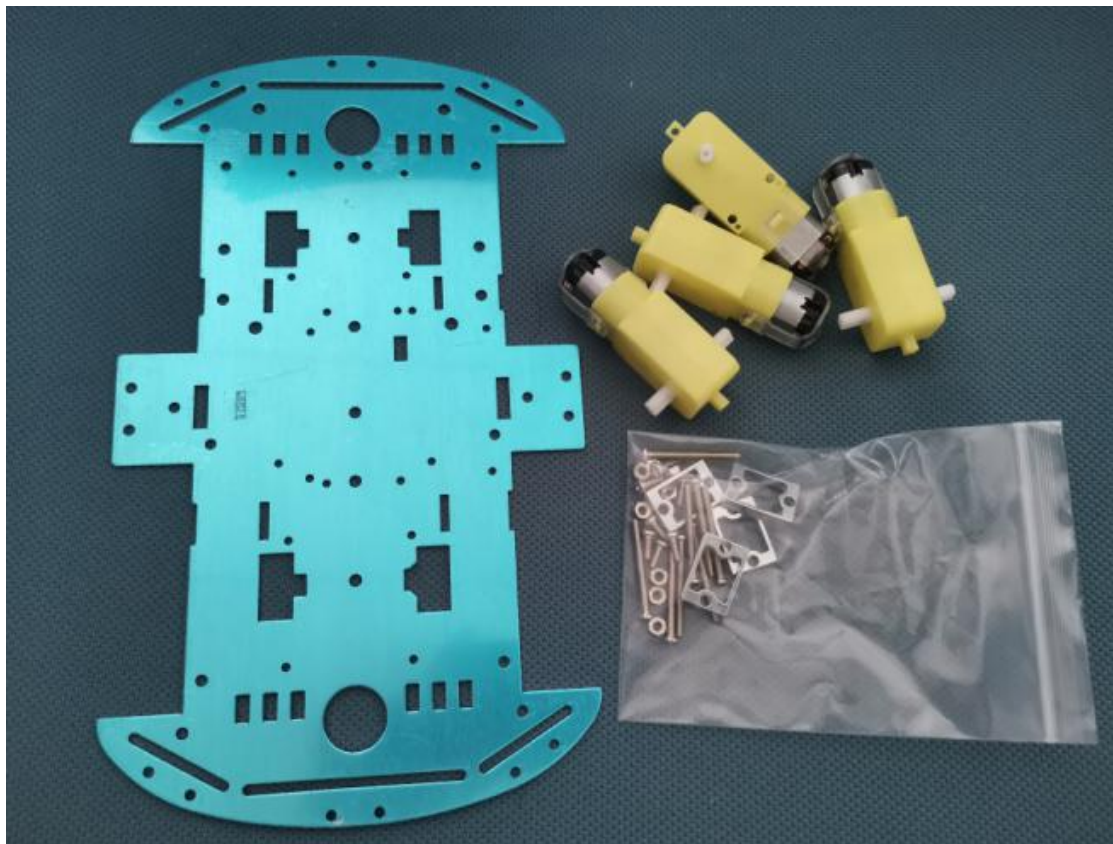


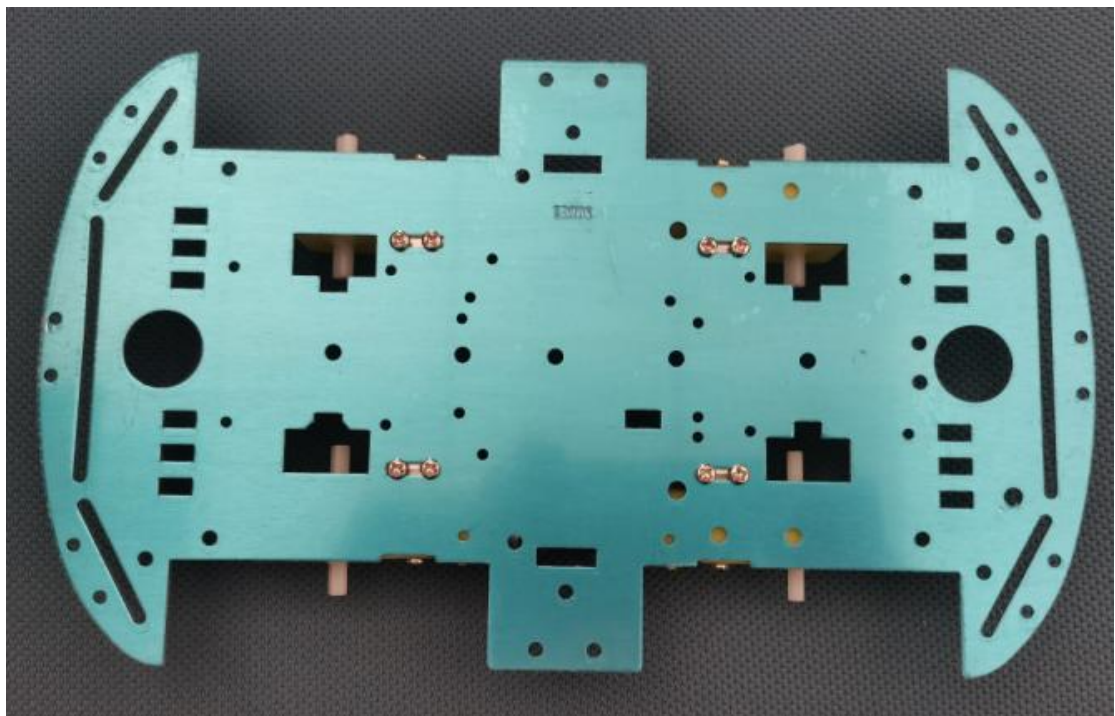

2. 安装轮子 Install the wheel

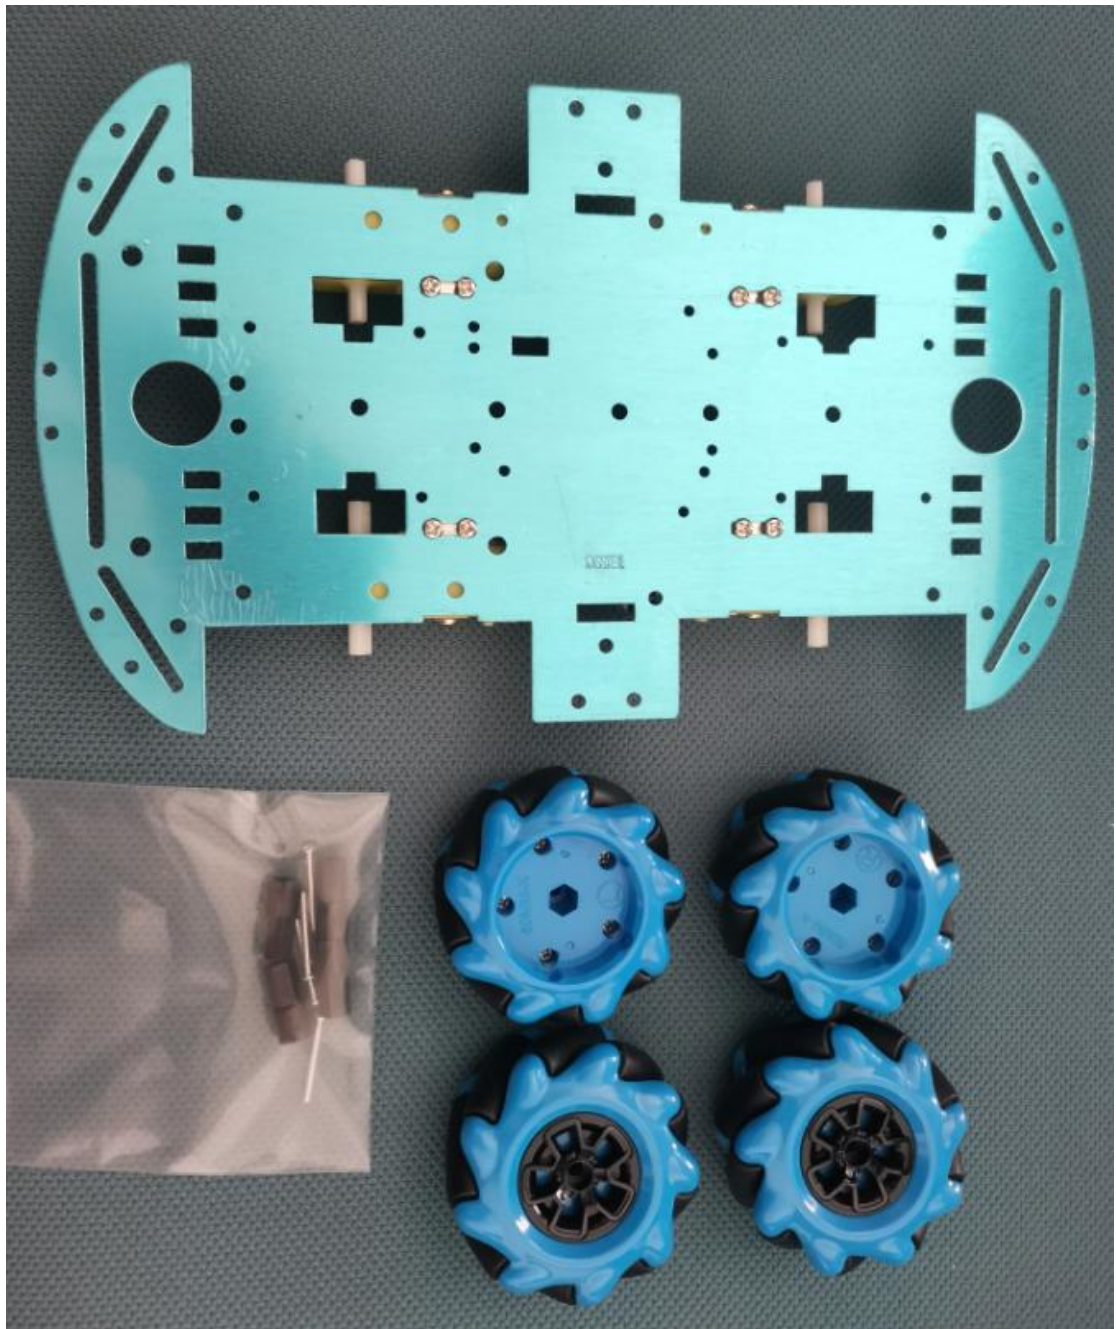

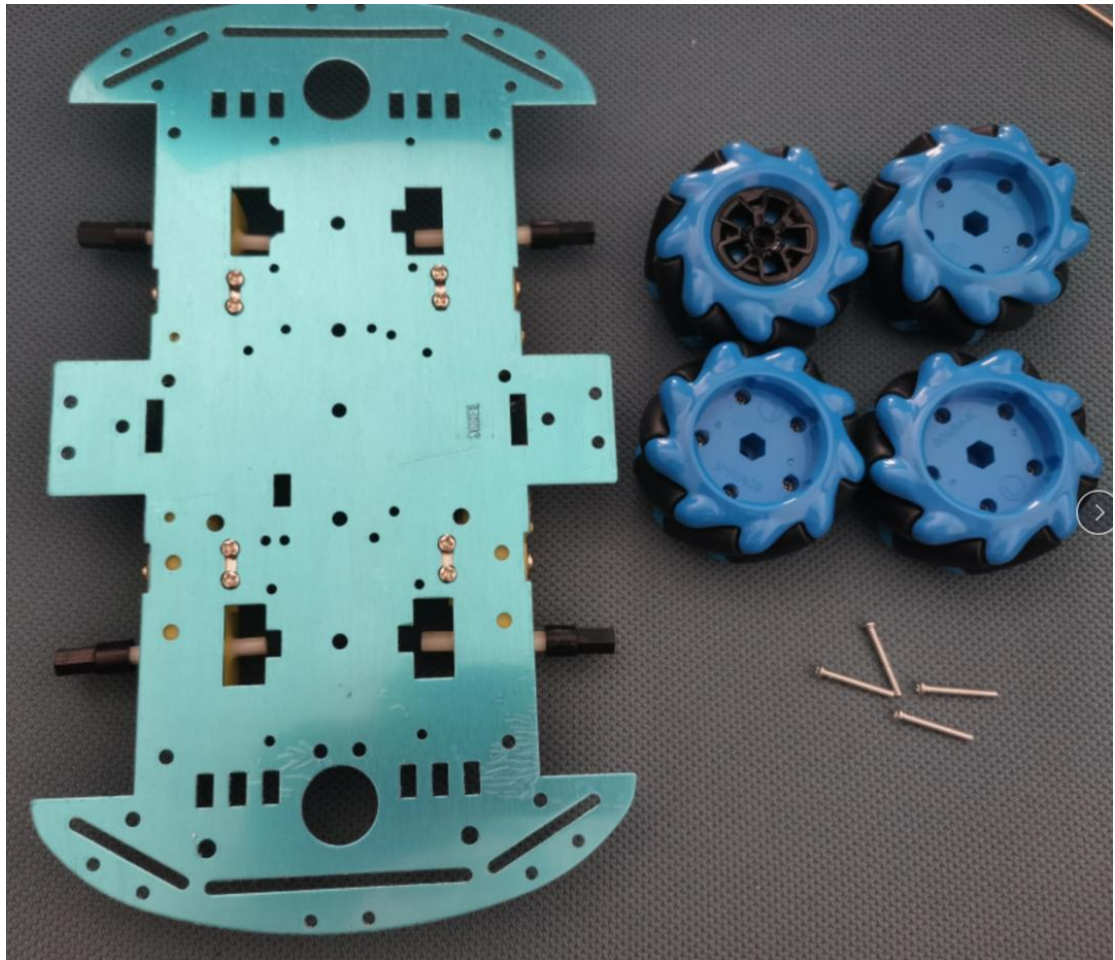

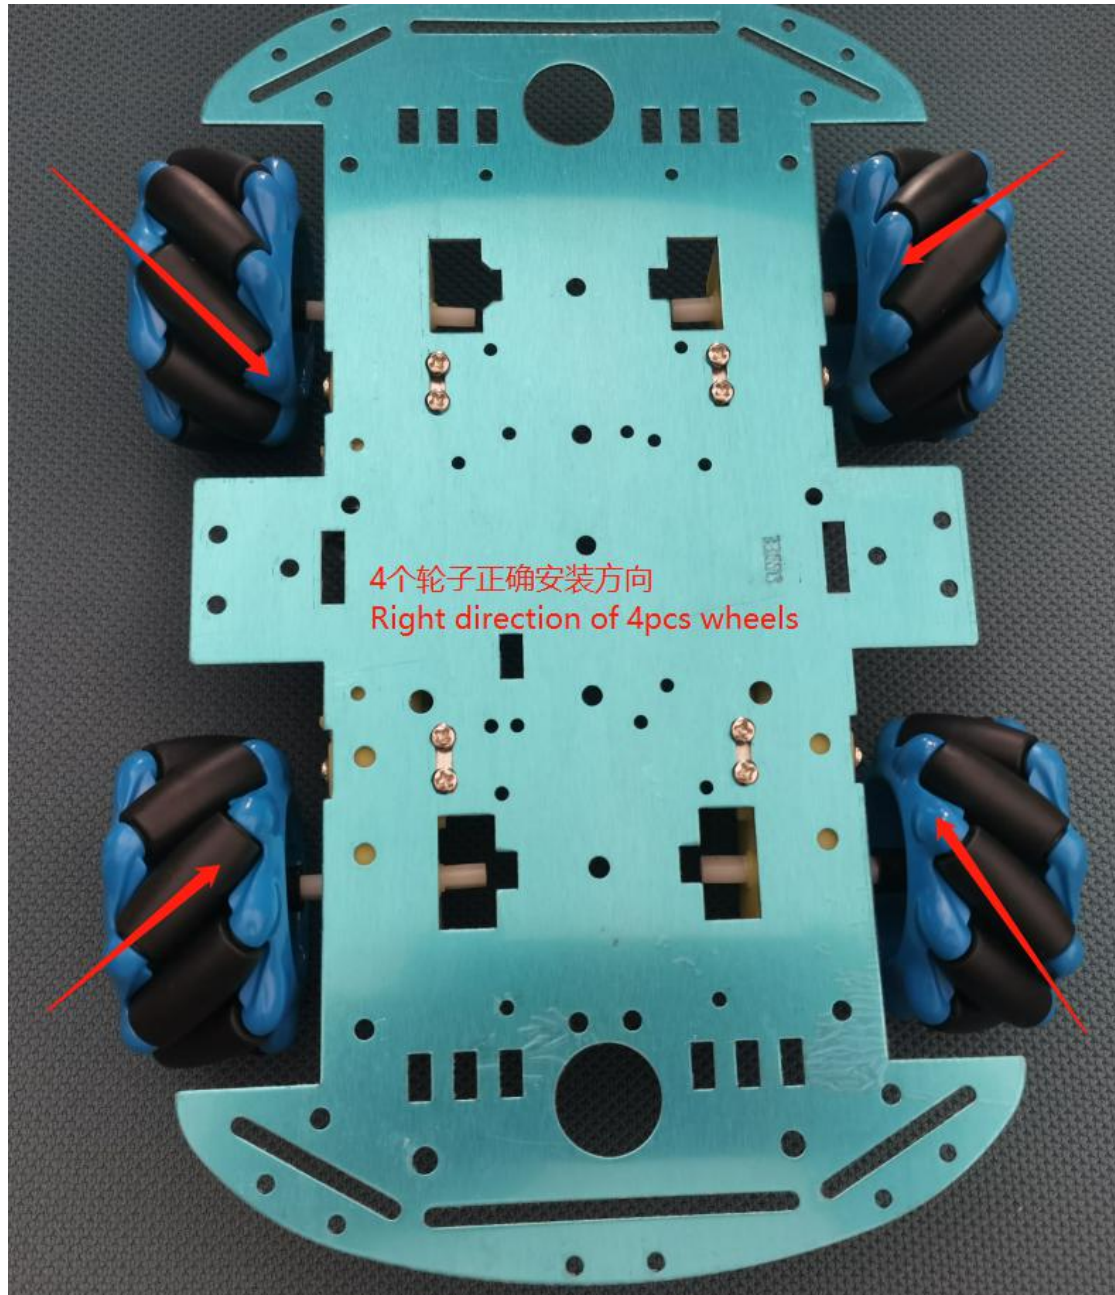

3. 安装控制器

- (1. 注意：控制器与金属底板不能直接接触，否则会烧坏电路板)
- (2. 先下载蓝牙或者手柄程序到 UNO 板上，烧录手柄程序要安装库文件)
- (3. 下载程序时不要插蓝牙模块或者手柄接收器模块在 UNO 板上。)


3. Install the controller


- (1. Note: The controller and the metal bottom plate cannot be in direct contact,

otherwise the circuit board will be burned out)

(2. Download the Bluetooth or handle program to UNO board first, and install the library file to burn the handle program)


(3. Do not insert the Bluetooth module or the handle receiver module on the UNO board when downloading the program.)

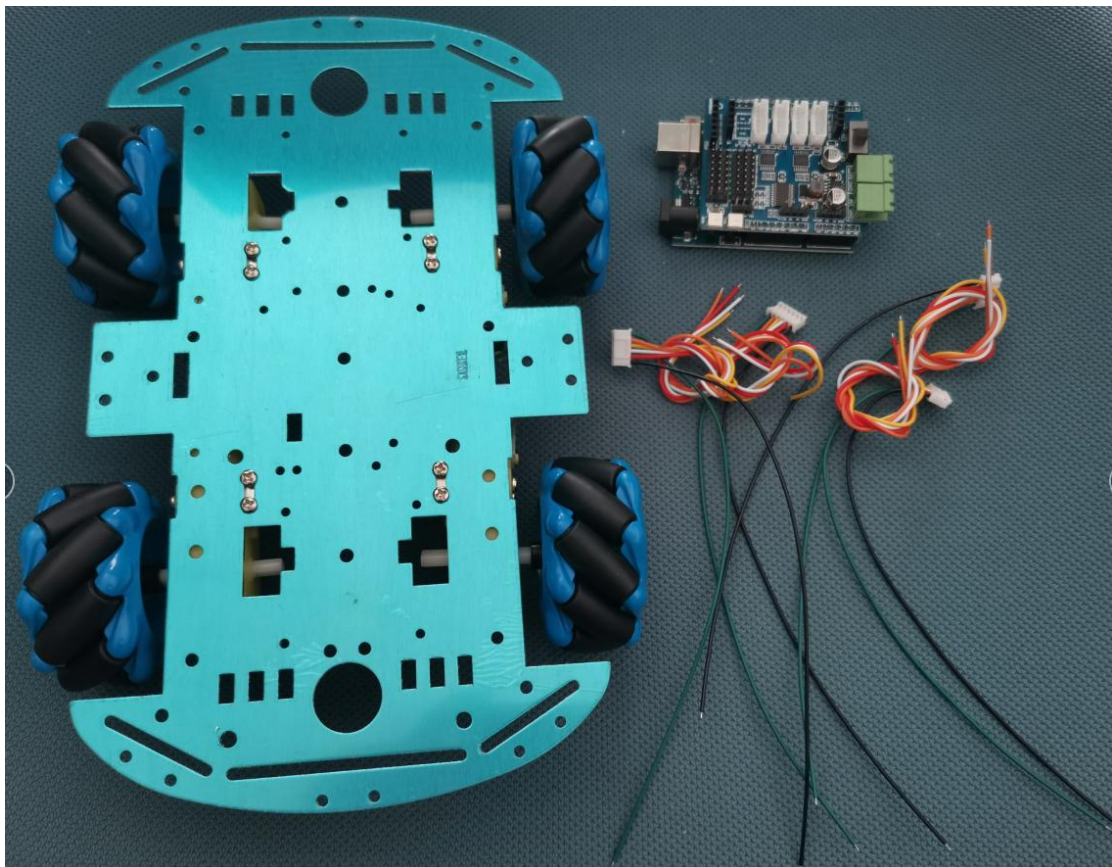


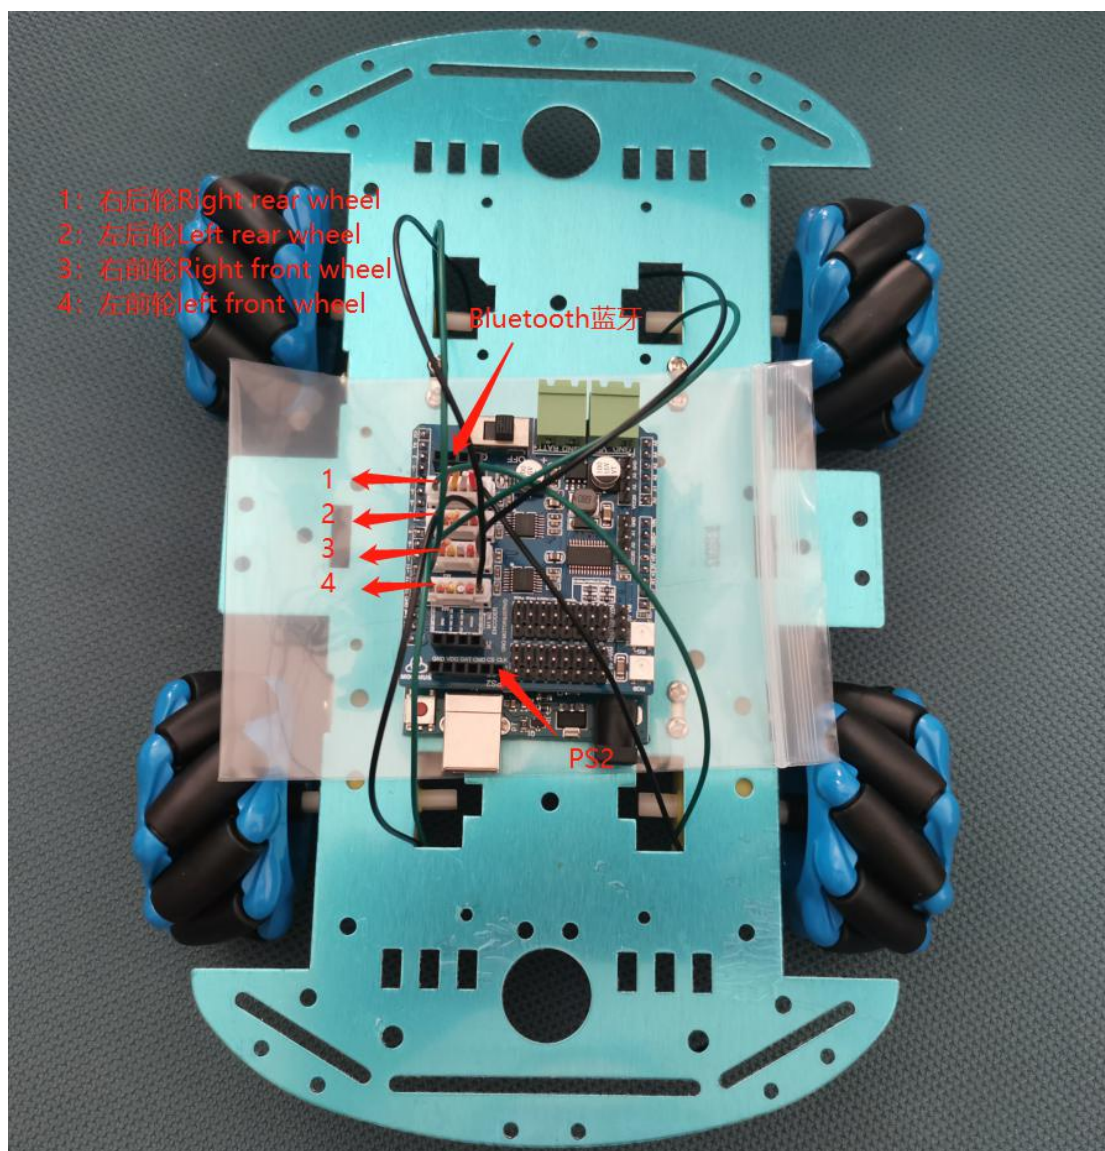



第二款 Second set:

1. 安装电机支架到底板上 Install the motor bracket to the bottom plate

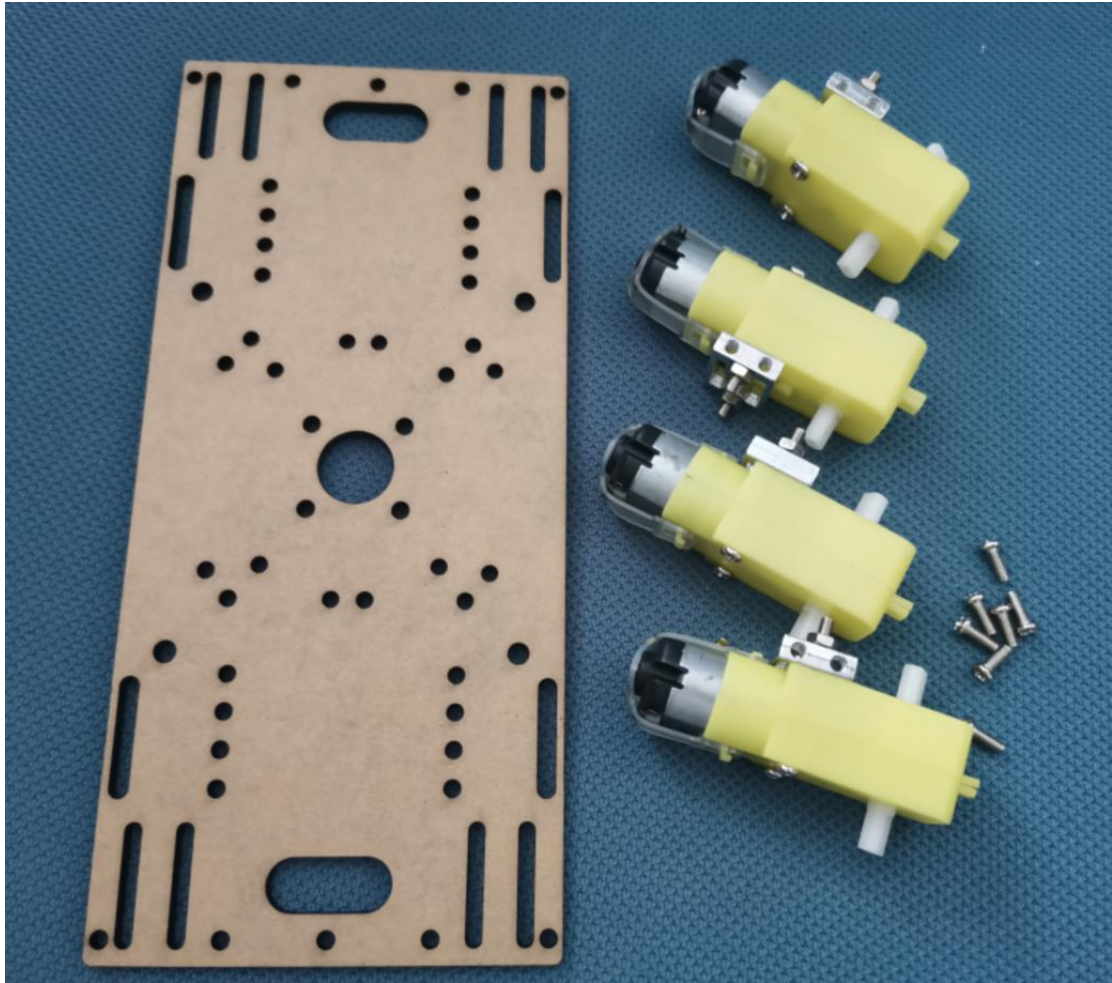


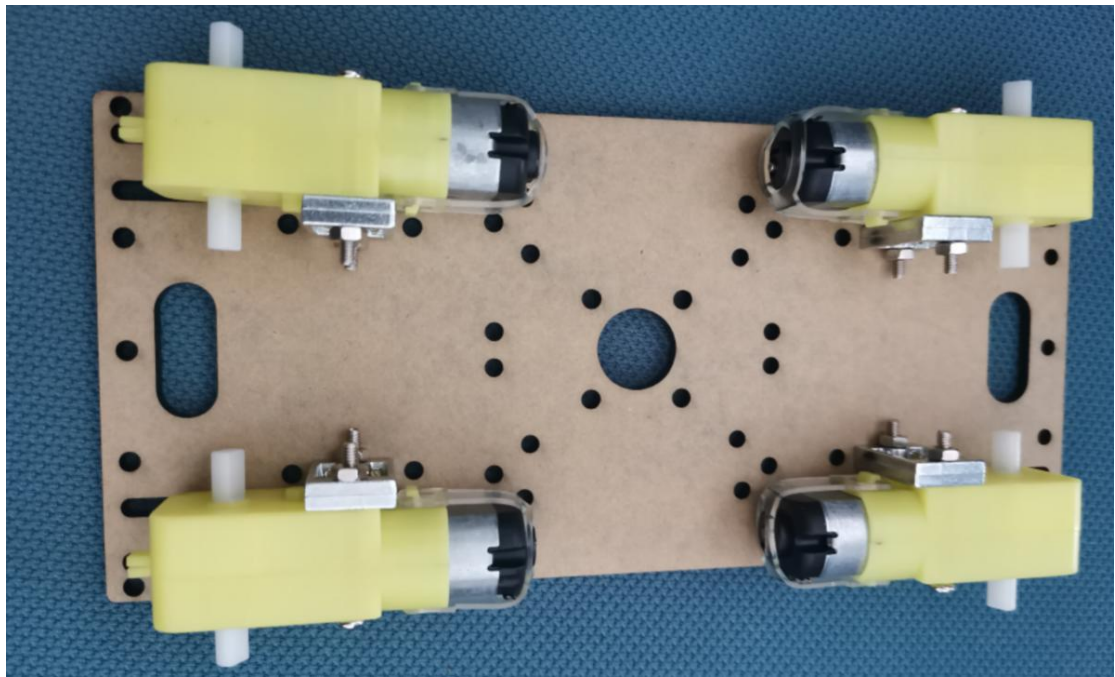



2. 安装顶板 Install the top plate

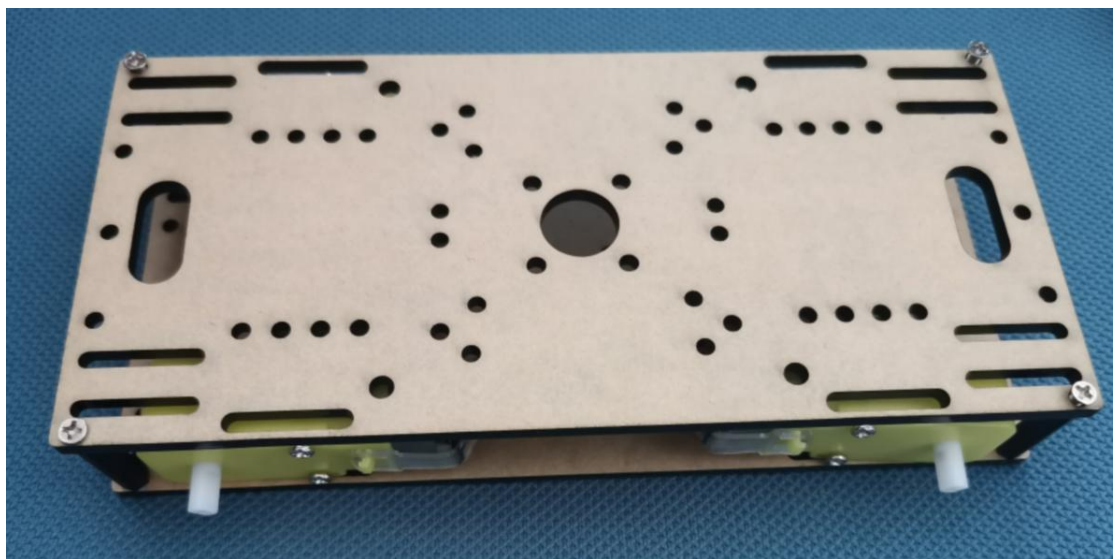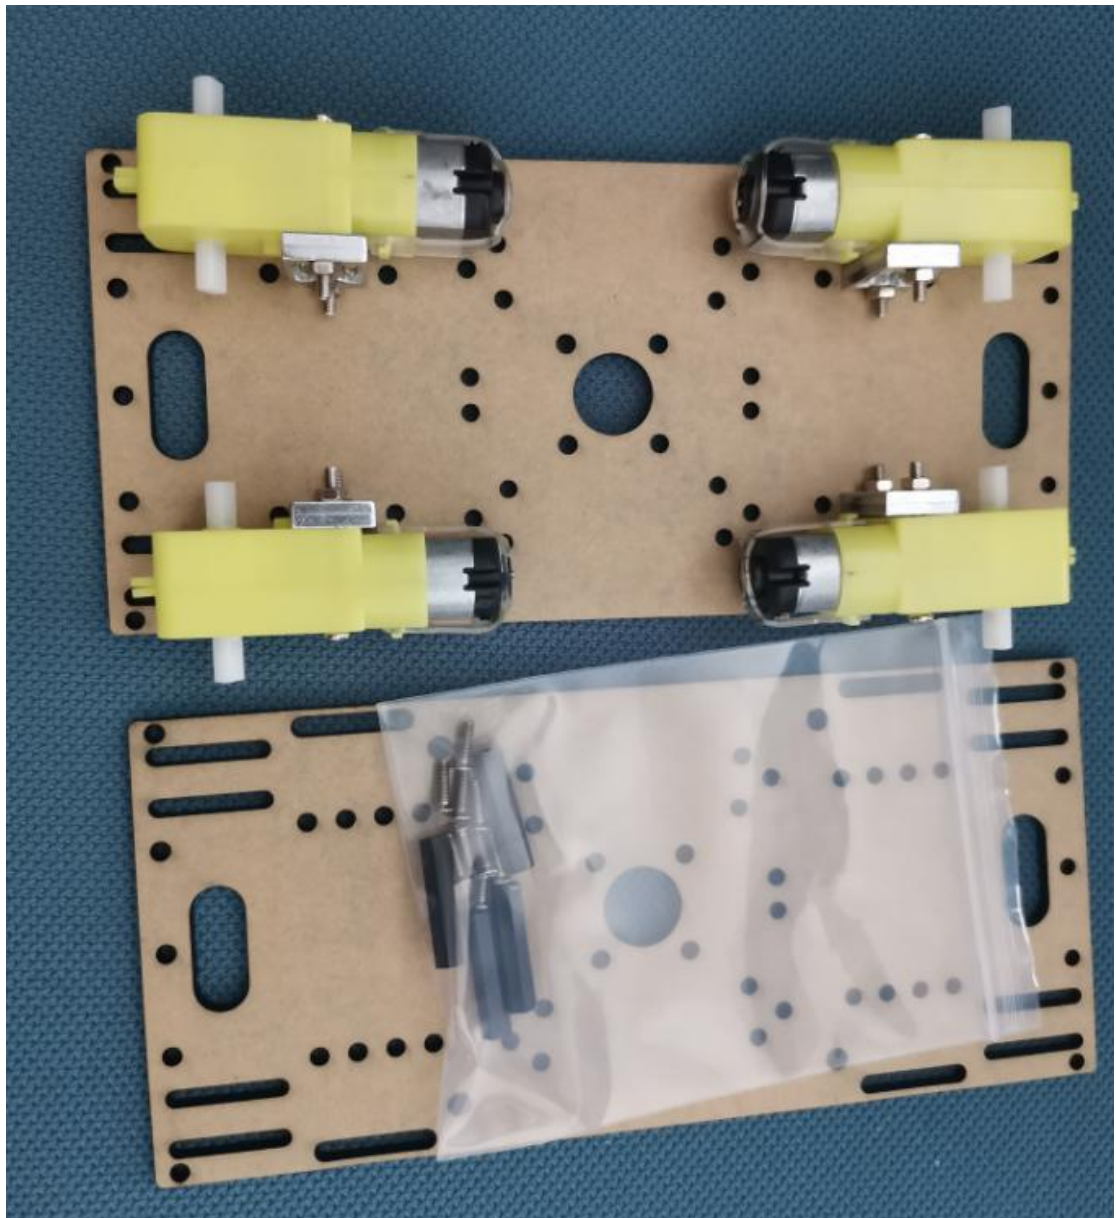


3. 安装轮子 Install the wheel

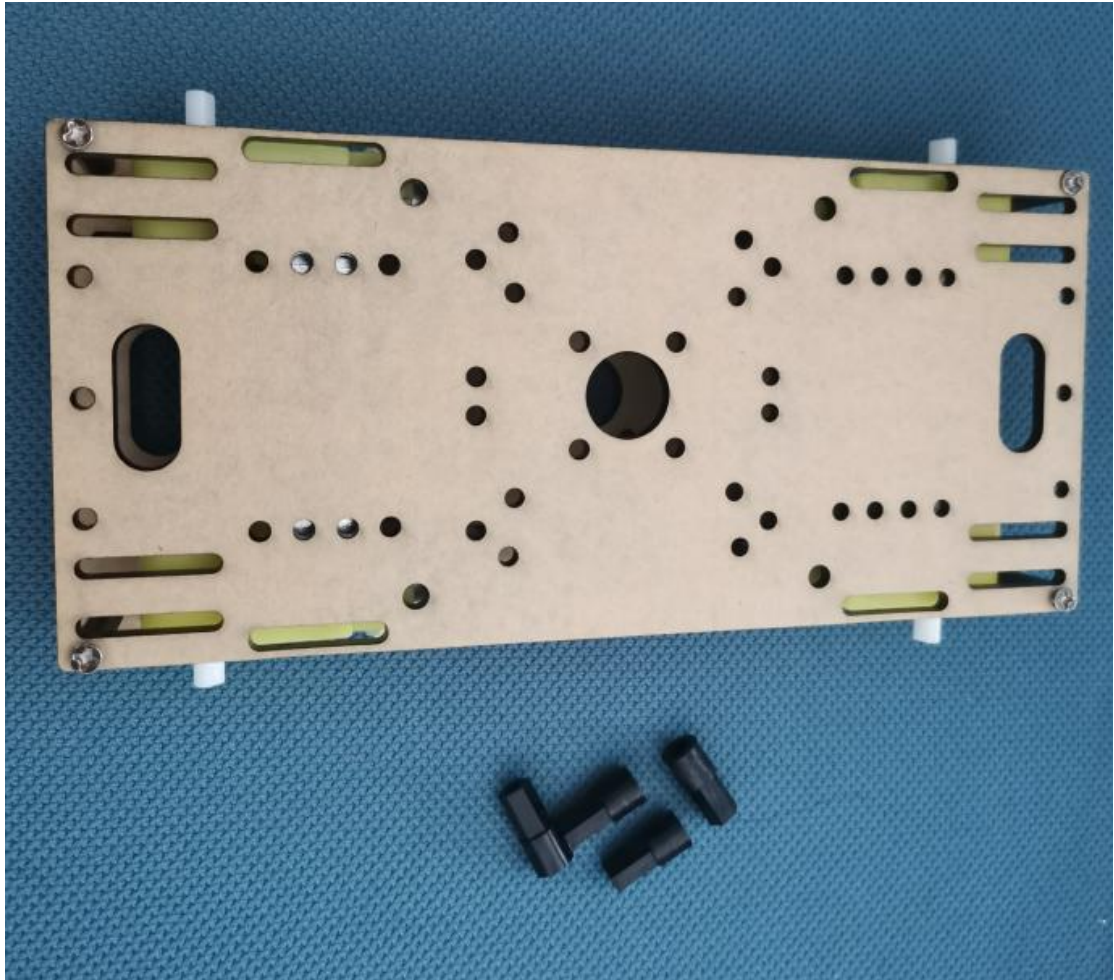


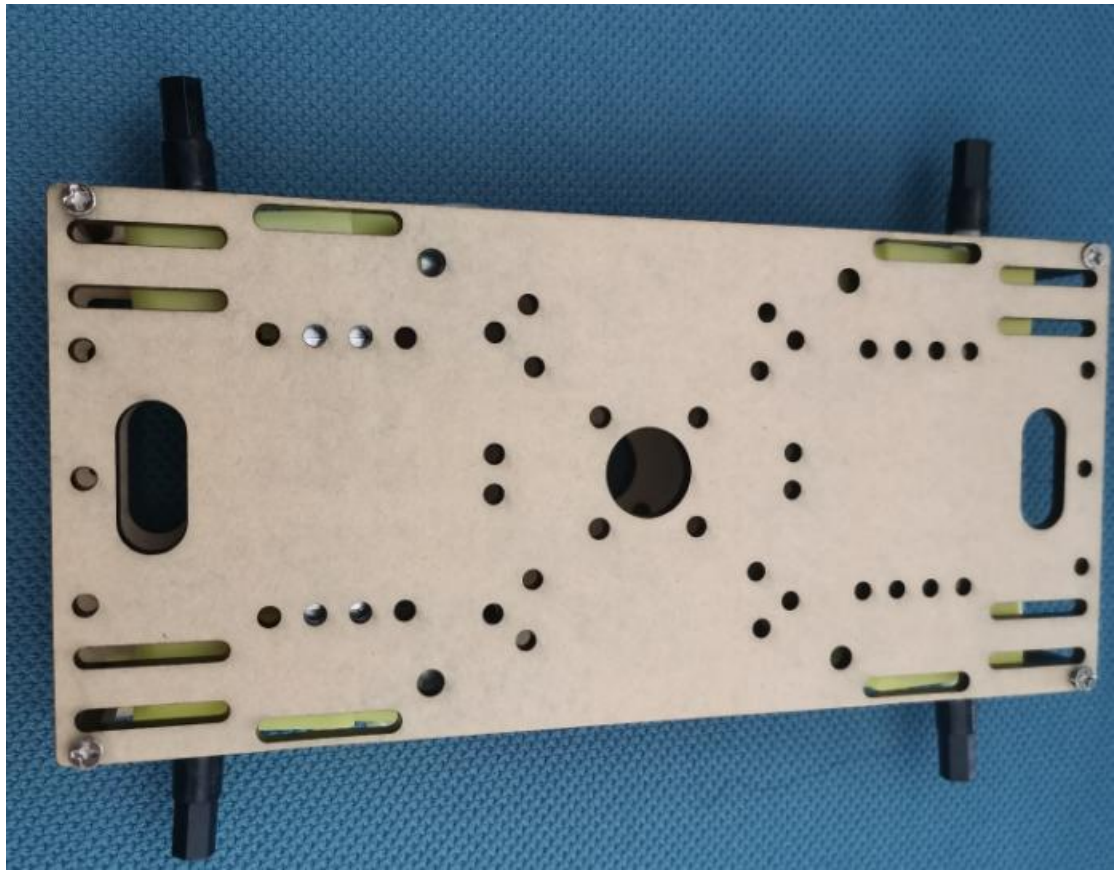


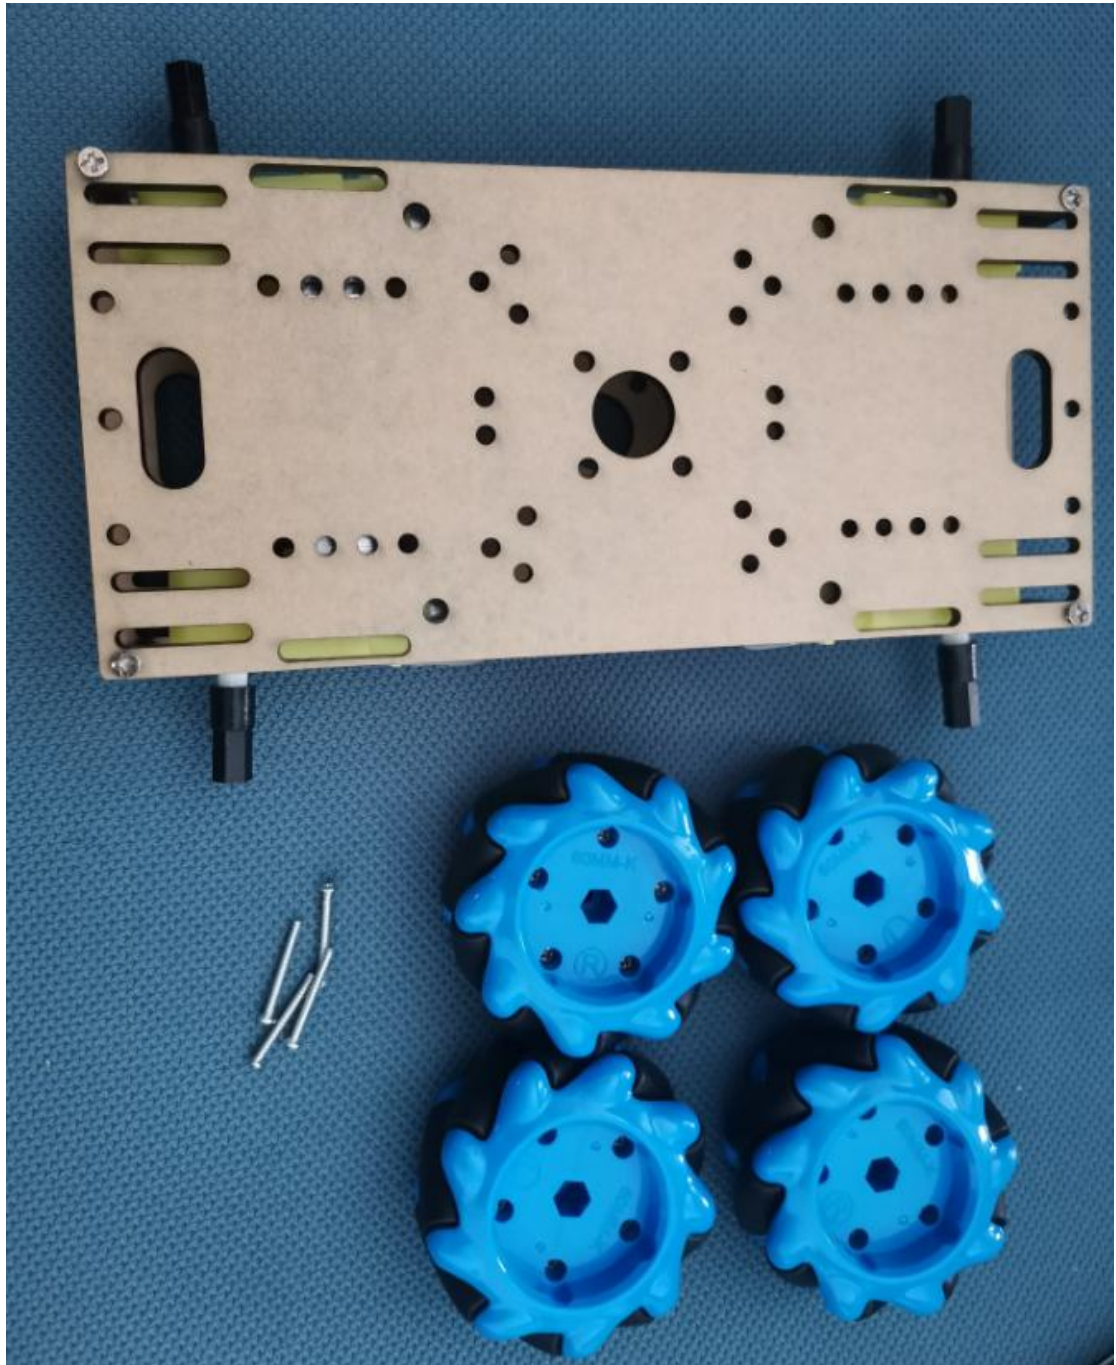


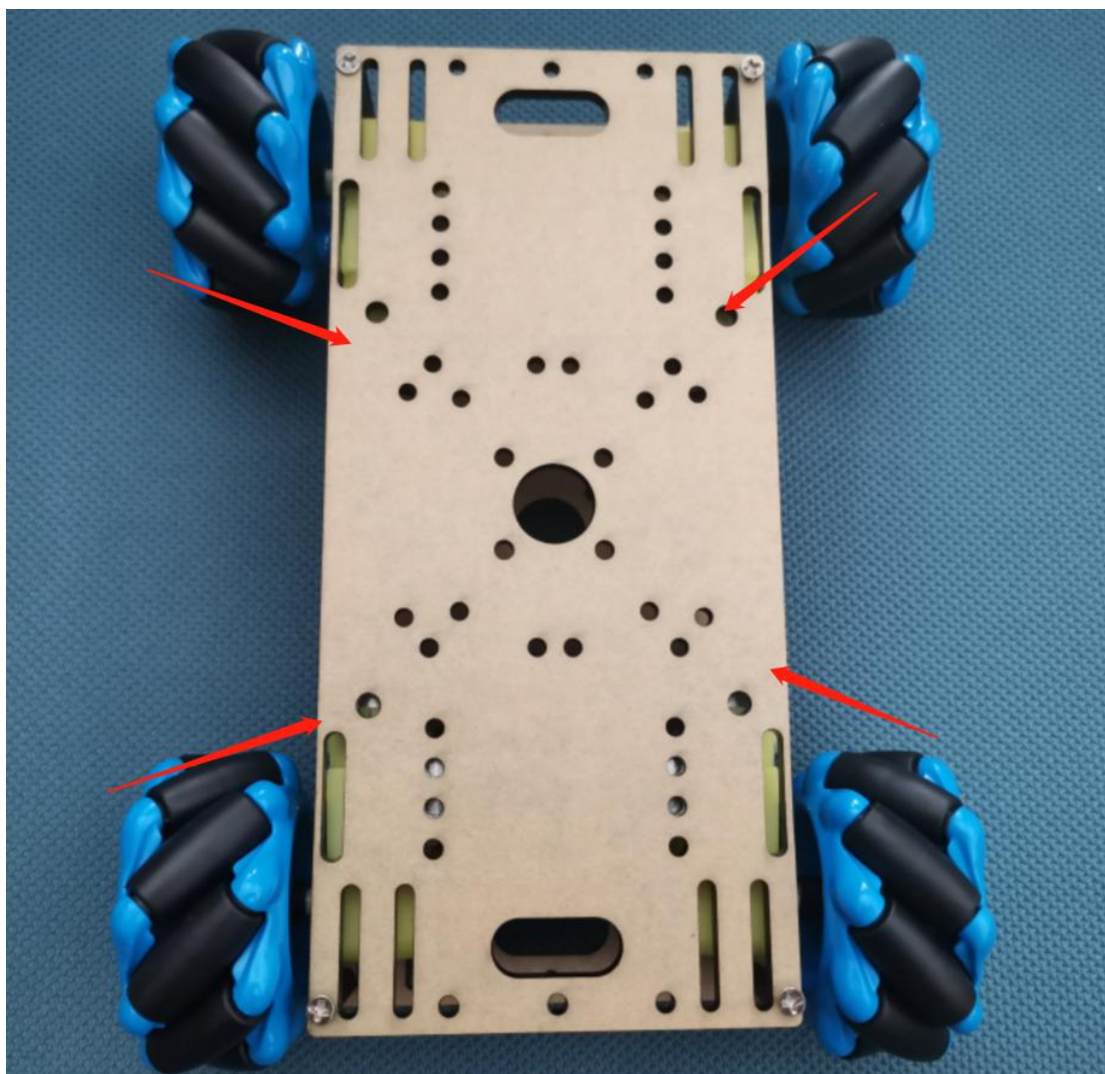

注：接线方式请参考第一款车子。Note: Please refer to the first model for the wiring method.

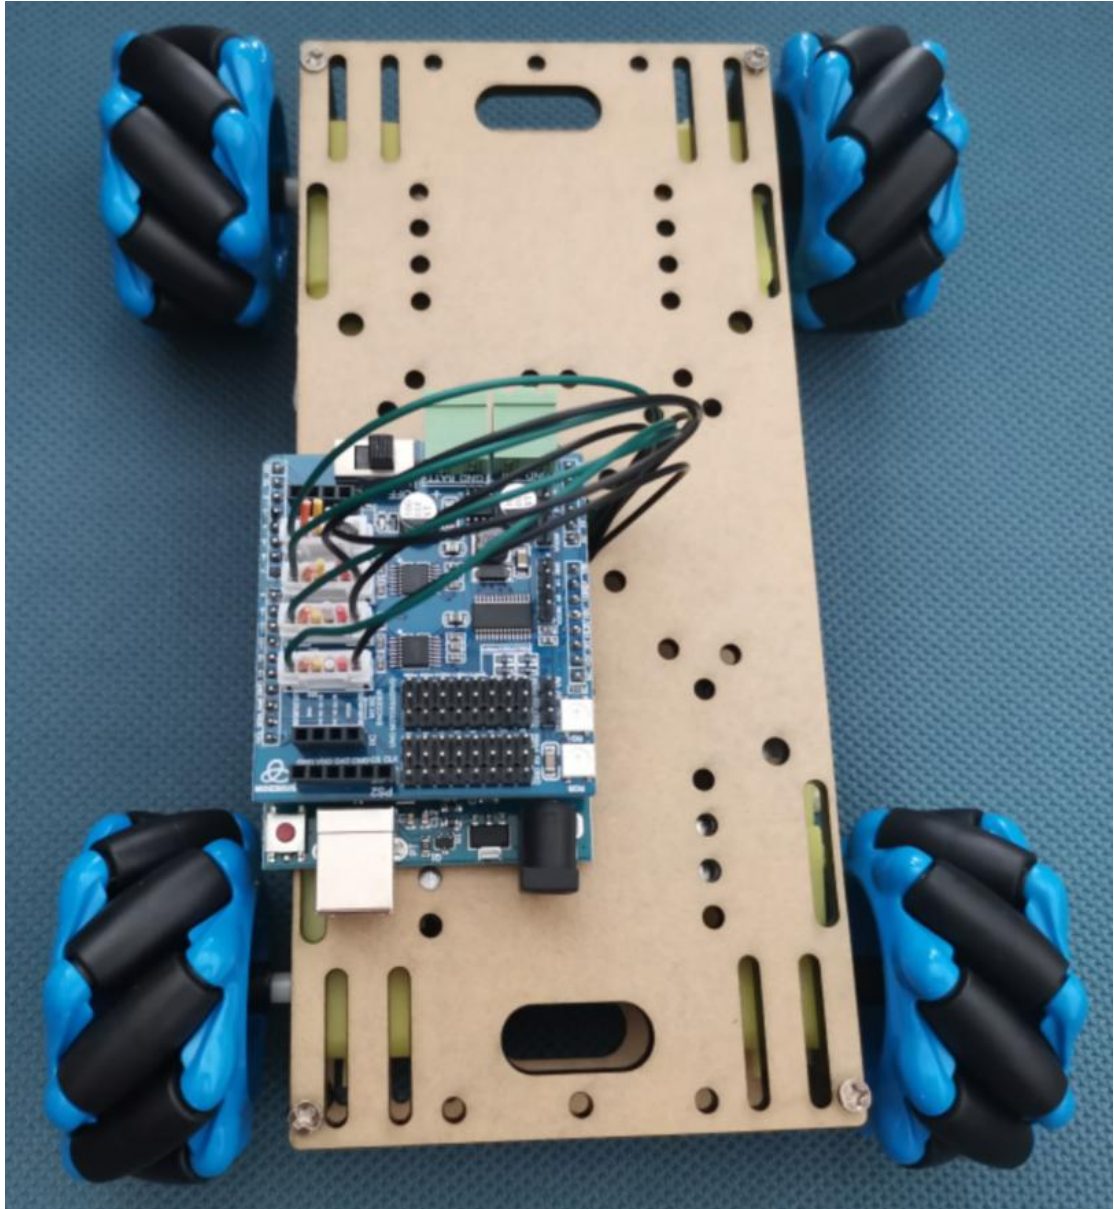

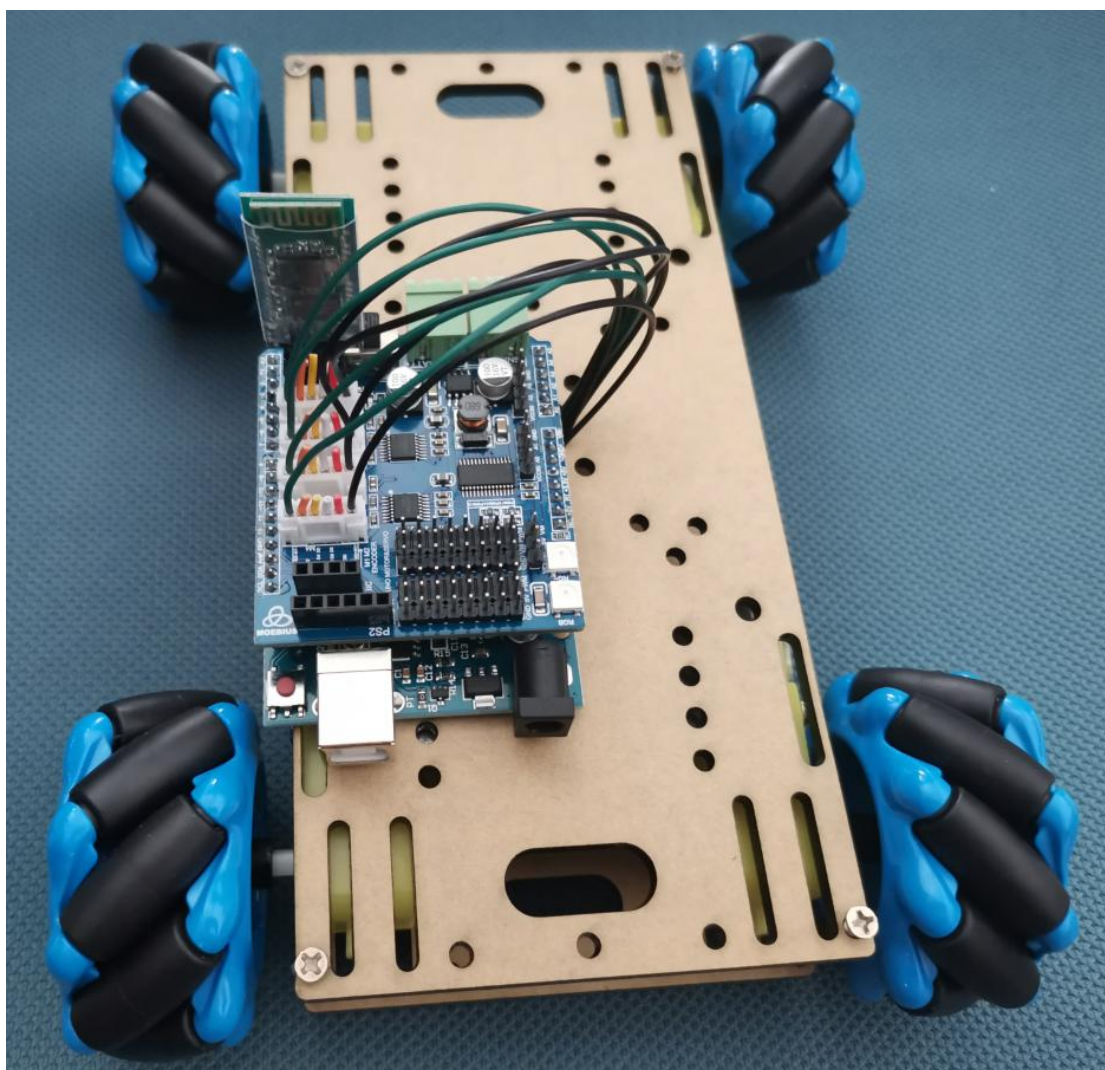

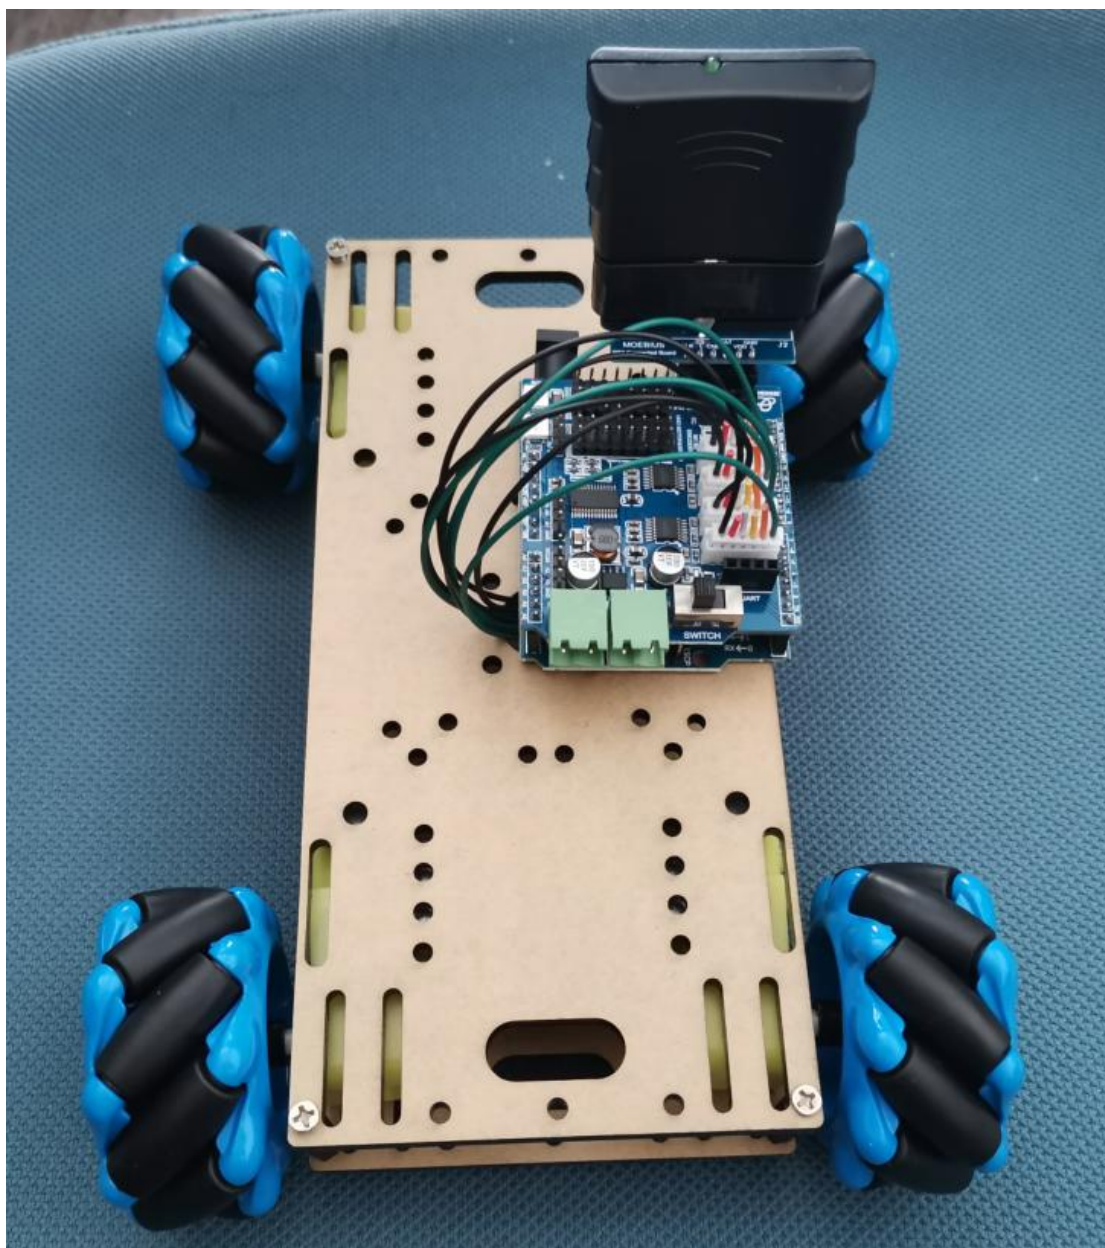

注：此安装文档仅供参考，后续如有更新，恕不另行通知。谢谢。

Note: This installation document is for reference only, and will be updated without notice. Thank you.